

SHANMON

388 Backhoe Loader *Exploded Drawing*

Shandong Weimeng Machinery Technology Co., Ltd

www.shanmonglobal.com



Ver: 2024-12-20

Shandong Weimeng Machinery Technology Co., Ltd

Address: No. 9567, Nanhuan Road, Qingzhou City, Shandong Province, China

SHANDONG WEIMENG ENGINEERING MACHINER CO., LTD

ADD: Qingzhou Industrial Park, Weifang city, Shandong Pro. China.

TEL:0536-3818796 FAX: 0536-3818486

前 言

Shanmon388- II 挖掘装载机零部件图册, 是为了便于用户在使用、维修和保养等工作中的方便而编绘的, 以供在使用过程中查阅及参考, 也可帮助用户了解本机的结构和装配关系。发动机随机已有零部件图册, 本书故未编出。

图册按各总成及结构布局绘制出了各零部件的图形及相互关系。凡不可拆卸的部件, 一般只标出部件代号, 不另列其组成零件。明细表采用中英文对照编译了名称、代号及数量。

随着技术更新和生产的不断发展, 产品将不断改进, 故本图册的内容会有部分不相一致, 因此用户在订购零部件时, 请指明车出厂日期和编号。

FOREWORD

This part list of Model shanmon388- II ackhoe loader is intent as a consultation reference for the customer to use the machine, and to help them repair and maintain the loaders. It can also help the users to be familiar with the construction and assembly relation of the machine. The engine has its own part list with it,so this book does not contain the engine part list.

The part list contains the part-drawings of deferent assem-blies,showing the shape of the parts as well as the assembling relation,The components which can not be taken apart(as the weldment or riveted assemblies) are Indicated only by their component numbers without the consisting part numbers.

目录 CONTEBTS

图一动臂组合.....	(1)
FIG1LOADER BOOM MODULE.....	(1)
图二快换六合一.....	(3)
FIG2QUICK CHANGE SIX IN ONE.....	(3)
图三快换装置.....	(5)
FIG3CHANGE THE GEAR.....	(5)
图四联板组合.....	(7)
FIG4 LINKAGE MODULE.....	(7)
图五车架总成.....	(9)
FIG5 FRAME ASSEMBLY.....	(9)
图六转向液压系统.....	(11)
FIG6STEERING HYDRAULIC SYSTE.....	(11)
图七工作液压系统.....	(13)
FIG7WORKING DEVICE HYDRAULIC SYSTEM.....	(13)
图八四合一斗液压系统.....	(15)
FIG8FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM.....	(15)
图九快换液压系统.....	(17)
FIG9CHANGE THE HYDRAULIC SYSTEM QUICKLY.....	(17)
图十 装载阀总成.....	(19)
FIG10 LOADER VALVE ASSEMBLY.....	(19)
图十一转斗油缸.....	(21)
FIG11TILTING CYLINDER ASSEMBLY.....	(21)
图十二举升油缸.....	(23)
FIG12LIFTING CYLINDER ASSEMBLY.....	(23)
图十三手制动系统.....	(25)
FIG13MANNEL BRAKE SYSTEM.....	(25)
图十四 行车制动系统.....	(27)
FIG14DRIVING BRAKE SYSTEM.....	(27)
图十五传动系统.....	(29)
FIG15TRANSMISION SYSTER.....	(29)
图十六变速箱安装.....	(31)
FIG16GEARBOX INSTALLATION.....	(31)
图十七变矩器总成.....	(35)
FIG17TORQUE CONVERTER ASSEMBLY.....	(35)
图十八前进离合器总成.....	(39)
FIG18FORWARD CLUTCH ASSEMBLY.....	(39)
图十九倒退离合器总成.....	(41)
FIG19REVERSE CLUTCH ASSEMBLY.....	(41)
图二十 中间轴总成.....	(43)

FIG20INTERMEDIATE SHAFT ASSEMBLYGEARBOX SSEMBLY	(43)
图二十一高低速轴总成	(45)
FIG21HIGH AND LOW SPEED SHAFT ASSEMBLY	(45)
图二十二底部离合器总成	(47)
FIG22BOTTOM CLUTCH ASSEMBLYGEARBOX SSEMBLY06	(47)
图二十三拨叉轴总成	(49)
FIG23FORK SHAFT ASSEMBLY	(49)
图二十四前驱动桥总成	(51)
FIG24FRONT AXLE ASSEMBLY	(51)
图二十五前桥转向节及油缸总成	(53)
FIG25front axle knuckle and cylinder assembly	(53)
图二十六前桥主被动锥齿轮总成	(55)
FIG26front axle knuckle and cylinder assembly	(55)
图二十七前桥差速器总成	(57)
FIG27front axle differential assembly	(57)
图二十八前桥传动轴总成	(59)
FIG28front axle transmission shaft assembly	(59)
图二十九前桥轮边总成	(61)
FIG29front axle wheel side assembly	(61)
图三十前桥行星架总成	(63)
FIG30front axle planetary carrier assembly	(63)
图三十一后驱动桥总成	(65)
FIG31 REAR AXLE ASSY	(65)
图三十二桥壳总成	(67)
FIG32Bridge housing assembly	(67)
图三十三轮边	(69)
FIG33Reduction Assembly	(69)
图三十四主减速器总成	(71)
FIG34Main reducer assembly	(71)
图三十五差速器总成	(73)
FIG35Differential Assembly	(73)
图三十六制动器总成	(75)
FIG35Brake Assembly	(75)
图三十六前车轮总成	(77)
FIG36FRONT WHEEL ASSEMBLY	(77)
图三十七后车轮总成	(79)
FIG37REAR WHEEL ASSEMBLY	(79)
图三十八传动油散连接油路	(81)
FIG38TRANSMISSION OIL COOLING OIL-WAY	(81)
图三十九优先阀	(83)
FIG39PRIORITY VALVE	(83)
图四十 齿轮泵总成	(85)


FIG40	GEAR PUMP ASSEMBLY	(85)
图四十一	加油机构	(87)
FIG41	ACCELERATOR MECHANISM	(87)
图四十二	驾驶室	(89)
FIG42	CAB CEILING	(89)
图四十三	顶盖线路	(91)
FIG43	TOP COVER WIRING	(91)
图四十四	仪表安装	(93)
FIG44	INSTRUMENT INSTALLATION	(93)
图四十五	电瓶组系统	(95)
FIG45	BATTERY CASES SYSTEM	(95)
图四十六	底盘液压系统 (一)	(99)
FIG46	CHASSIS HYDRAULIC SYSTEM (ONE)	(99)
图四十六	底盘液压系统 (一)	(101)
FIG46	CHASSIS HYDRAULIC SYSTEM (ONE)	(101)
图四十七	挖掘液压系统 (一)	(103)
FIG47	EXCAVATE THE HYDRAULIC SYSTEM (ONE)	(103)
图四十八	挖掘液压系统 (二)	(105)
FIG48	EXCAVATE THE HYDRAULIC SYSTEM (TWO)	(105)
图四十九	挖掘阀支架	(107)
FIG49	BACKHOE VALVE FRAME	(107)
图五十	油缸及阀	(109)
FIG50	CYLINDER AND VALVE	(109)
图五十一	挖掘阀总成	(111)
FIG51	BACKHOE VALVE FRAME	(111)
图五十二	回转油缸	(114)
FIG52	SWING CYLINDER	(114)
图五十三	挖掘油缸	(116)
FIG53	BACKHOE CYLINDER	(116)
图五十四	斗杆油缸	(118)
FIG54	BUCKET CYLINDER	(118)
图五十五	大臂油缸	(120)
FIG55	BOOM CYLINDER	(120)
图五十六	支腿油缸	(122)
FIG56	STABILIZER CYLINDER	(122)

图五十七 夹紧油缸·····	(124)
FIG57 GRIPING CYLINDER·····	(124)
图五十八伸缩油缸·····	(126)
FIG58RETRACTABLE CYLINDER·····	(126)
图五十九 挖掘摆臂组合·····	(128)
FIG59 BACKHOE SWING ARM MODULE·····	(128)
图六十 挖斗组合·····	(130)
FIG60 BACKHOE BUCKET MODULE·····	(130)
图六十一 挖掘大臂组合·····	(132)
FIG61 BACKHOE BOOM MODULE·····	(132)
图六十二伸缩斗杆组合·····	(134)
FIG62TELESCOPIC ROD·····	(134)
图六十三伸缩臂座体组合·····	(136)
FIG63TELESCOPIC BOOM·····	(136)
图六十四摆动架总成·····	(138)
FIG64OSCILLATION FRAME ASSEMBLY·····	(138)
图六十五 滑动架总成·····	(140)
FIG65 SLIDE FRAME ASSEMBLY·····	(140)
图六十六滑架推拉座·····	(142)
FIG66SLIDINGFRAMEPUSH-PULL SEAT·····	(142)
图六十七柴油机装置·····	(144)
FIG67 DIESEL ENGINE MOUNT·····	(144)
图六十八柴油箱总成·····	(146)
FIG68PUEL TANK ASSEMBLY·····	(146)
图六十九机油箱总成·····	(148)
FIG69ENGLING OIL TANK ASSEMBLY·····	(148)
图七十发动机罩总成·····	(150)
FIG70ENGINE HOOD ASSEMBLY·····	(150)
图七十一支腿夹紧操纵机构·····	(152)
FIG71STABILIZER &GRIPING OPERATION MECHANISM·····	(152)
图七十二空调系统·····	(154)
FIG72AIR CONDITION SYSTEM·····	(154)

图七十三先导液压系统液压原理.....	(156)
FIG73PILOT HYDRAULIC SYSTEM.....	(156)
图七十四液压原理.....	(158)
FIG74Hydraulic principle.....	(158)

动臂组合


LODER BOOM MOODULE

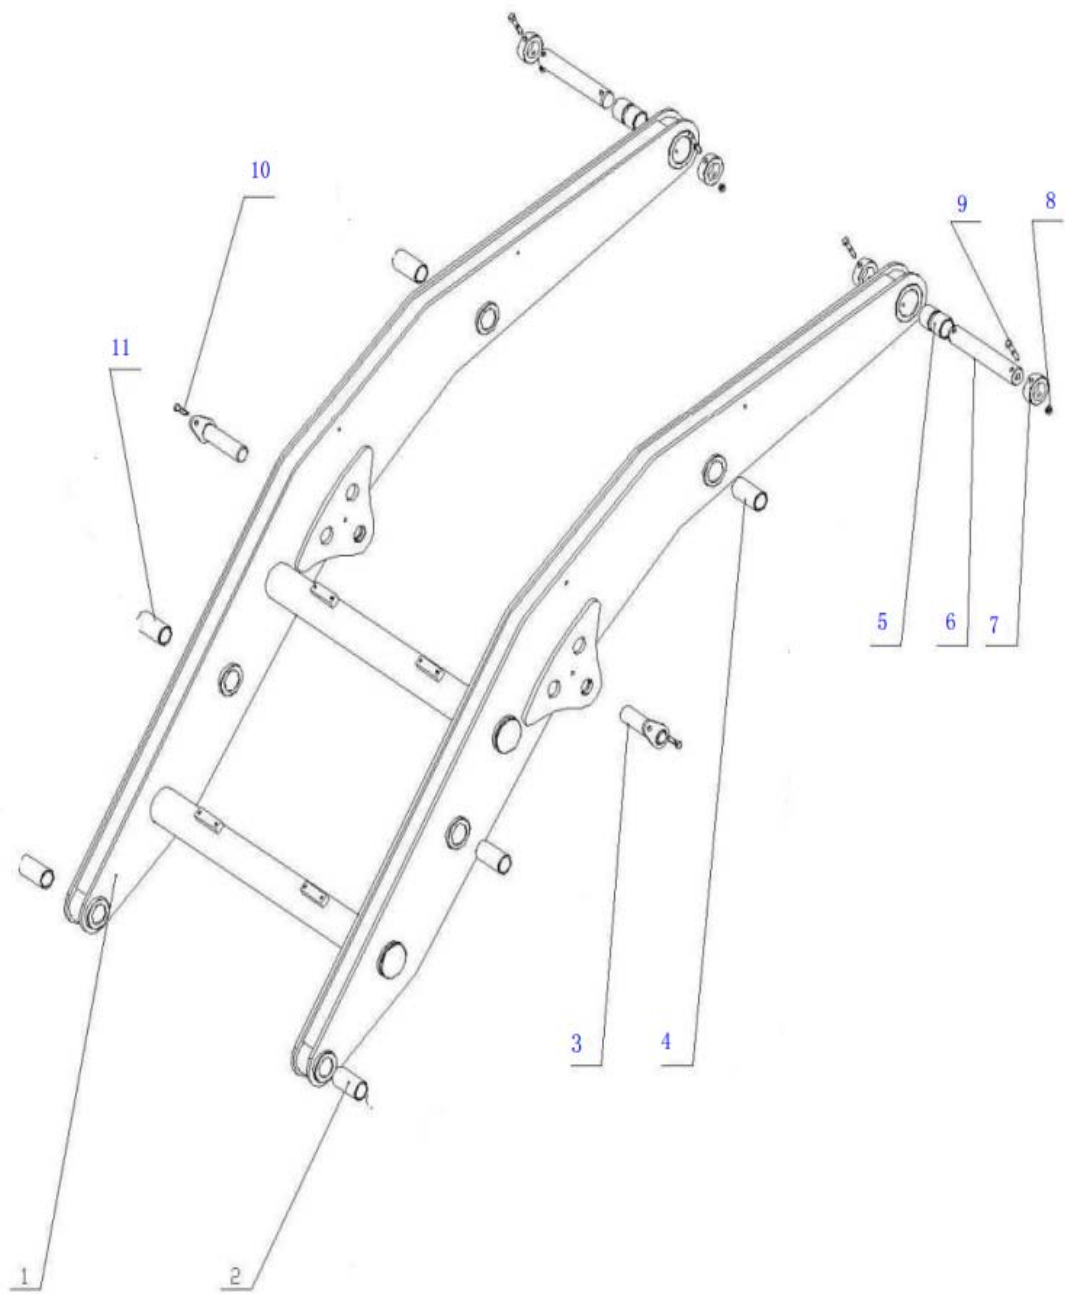

动臂组合 LODER BOOM MOODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061010503	Boom	动臂	1	
2	Z062010900	Bushing	衬套	2	
3	Z062010910	Lifting cylinder front pin	举升缸前销轴	2	
4	Z062011060	Battery box	摇臂衬套	2	
5	Z062010880	Rear bushing of frame tie rod	车架拉杆后衬套	2	
6	Z061012150	Rear pin shaft of boom	动臂后销轴	2	
7	Z062010171	Block Circle	挡圈	2	
8	B190120303	Nylon lock nut	尼龙锁紧螺母	2	
9	B040611265	Bolt M12X65	螺 栓 M12X65	2	
10	B042521225	Bolt M12X25	螺 栓 M12X25	2	
11	Z062010900	Bushing	衬套	4	


快换六合一 QUICK CHANGE SIX IN ONE

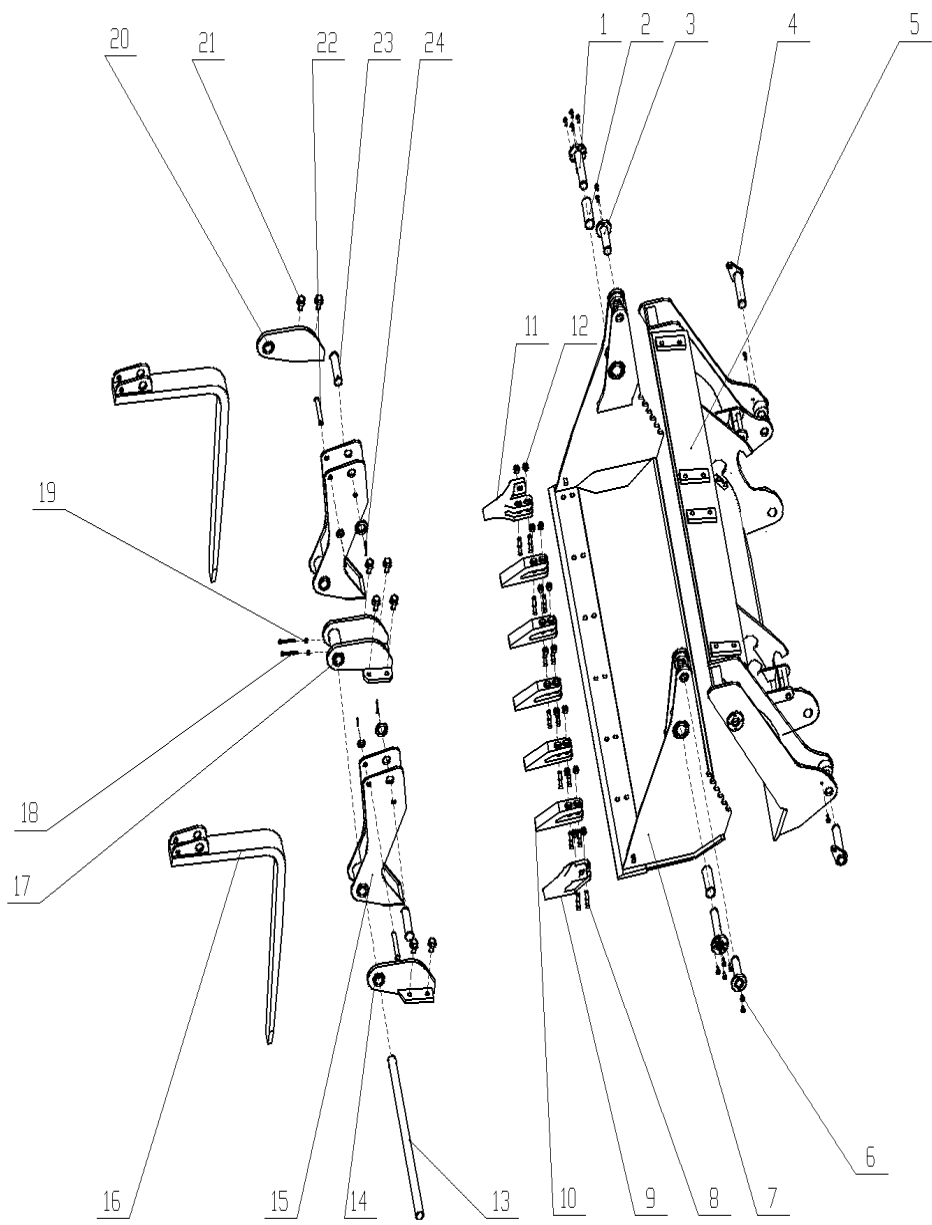

快换六合一 QUICK CHANGE SIX IN ONE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061011590	Spindle Assembly	转轴总成	2	
2	Z061011620	Sleeve	轴套	2	
3	Z061011630	Pin shaft on cylinder	油缸上销轴	2	
4	Z061011560	Lower pin shaft of oil cylinder	油缸下销轴	2	
5	Z061011124	After four-in-one	四合一斗后	1	
6	B040910825	Bolt M8X25	螺栓 M8X25	14	
7	Z061011023	Four-in-one before	四合一斗前	1	
8	Z110010010	Bucket Tooth Bolt	斗齿螺栓	16	
9	Z110010800	Left Tooth	左边齿	1	
10	Z110010020	Bucket Teeth	斗齿	5	
11	Z110010800	Right Tooth	右边齿	1	
12	B050331614	Nut	螺母	16	
13	Z061011370	Pin	支架销轴	2	
14	Z061011330	Left support	左支座	1	
15	Z061011490	Fork stand	货叉支架	2	
16	Z061011440	Forks	货叉	2	
17	Z061011380	Shaft support	转轴支座	1	
18	B042520880	Bolt	六角法兰面螺栓	2	
19	B050210806	Nylon hexagon lock nut	锁紧螺母	2	
20	Z061011430	Right support	右支座	1	
21	B042521635	Bolt	六角法兰面螺栓	8	
22	Z061011480	Pin	定位销	2	
23	Z061011470	Pin	转销	2	
24	B080211063	Pin	开口销 6X60	2	


快换装置 **CHANGE THE GEAR**

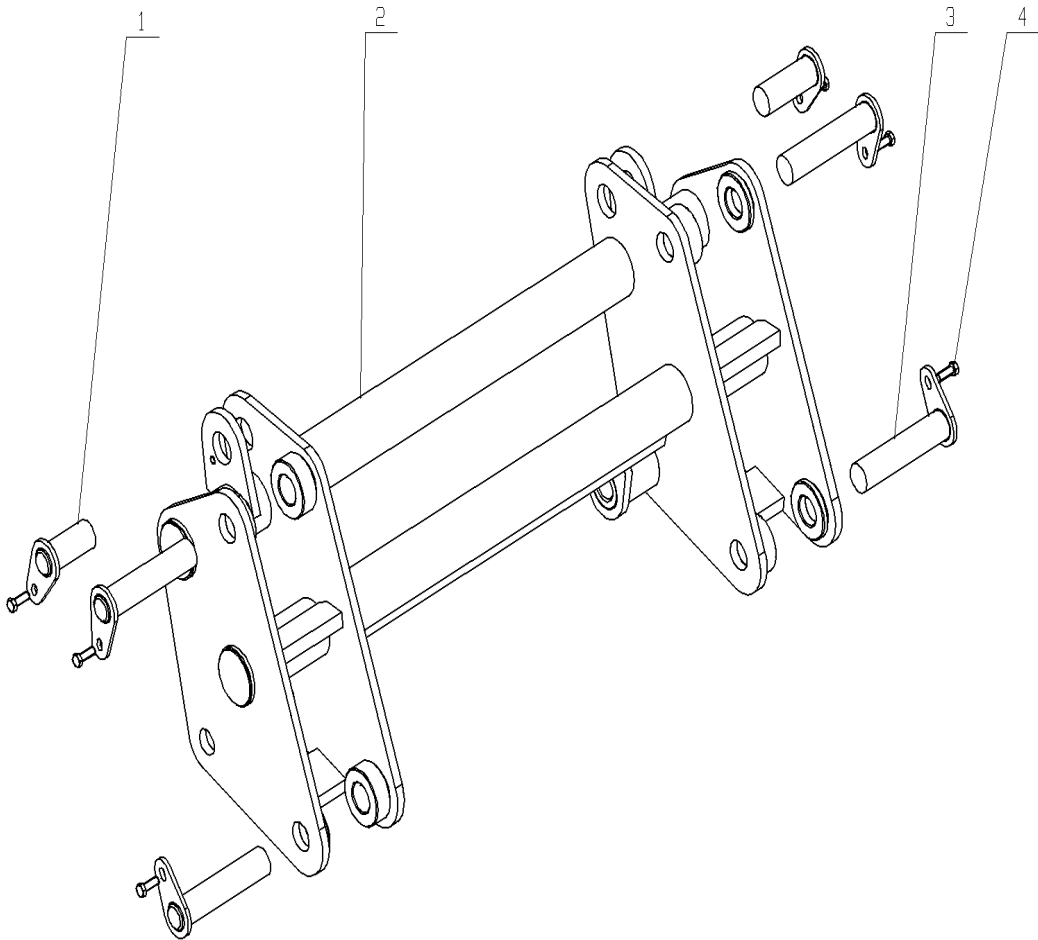

快换装置 **CHANGE THE GEAR**

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z220510250	Pin Assembly	销轴总成	2	
2	Z050700013	Change the gear	快换装置	1	
3	Z062011012	Bucket arm pin shaft	铲斗动臂销轴	4	
4	B042521225	Bolt M12X25	螺栓 M12×25	4	


联板组合 LINKAGE MODULE

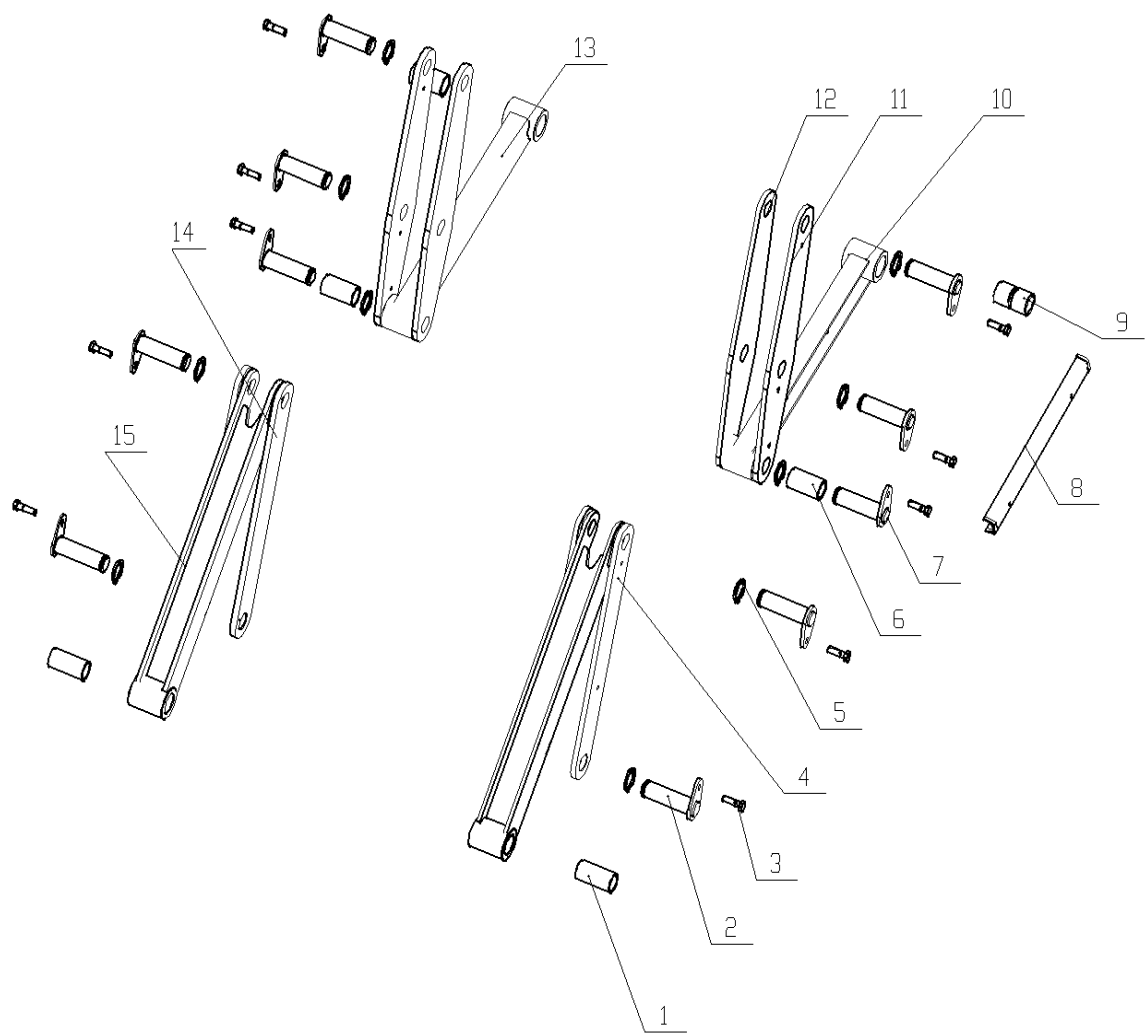

联板组合 LINKAGE MODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062010900	ARM front bushing	动臂前衬套	2	
2	Z062010971	Pole pin assembly	撑杆销轴总成	2	
3	B042521225	Bolt M12×25	螺栓 M12×25	10	
4	Z062010475	External Strut	外撑杆板	2	
5	B070114502	Block Circle	挡圈	10	
6	Z062010870	Frame tie rod front bushing	车架拉杆前衬套	2	
7	Z062010940	Rocker arm pin shaft	摇臂销轴	6	
8	Z062020900	Lock Lever	锁止杆	1	
9	Z062010880	Rear bushing of frame tie rod	车架拉杆后衬套	2	
10	Z062010561	Left rear lever	左后拉杆	1	
11	Z062010512	External rocker arm	外摇臂	2	
12	Z062010542	Inner rocker arm	内摇臂	2	
13	Z062010560	Right back lever	右后拉杆	1	
14	Z062010495	External strut plate	内撑杆板	2	
15	Z062010405	Front lever	前拉杆	2	

车架体 CHASSIS

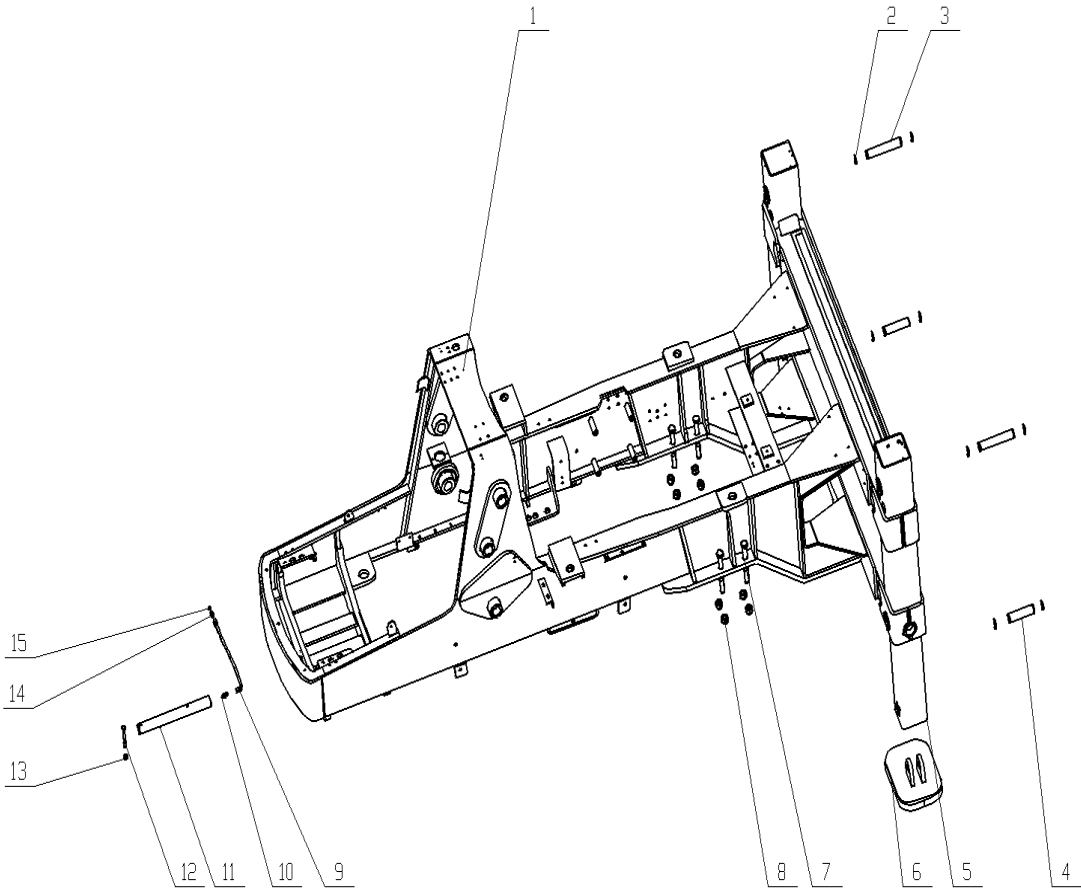


车架体 CHASSIS

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061023017	Chassis	车架体	1	
2	B070114002	Retaining ring	挡圈(轴用)	8	
3	Z050030810	Pin shaft on outrigger cylinder	支腿缸上销轴	2	
4	Z050030671	Lower pin shaft of outrigger cylinder	支腿缸下销轴	2	
5	Z050030681	Move your legs	活动支腿	2	
6	Z050030610	Foot support	支脚	2	
7	B040810023	Bolt M24×240	螺栓 M24×240	8	
8	B050212722	Lock nut M24	锁紧螺母 M24	8	
9	Z060020952	Lubricating oil pipe	润滑油管	1	
10	Z350021112	Transition joint	直通接头	1	
11	Z060020913	Pin	销轴	1	
12	B040811295	Bolt	螺栓 M12×90	1	
13	B050211210	Nut	锁紧螺母	1	
14	Z350021112	Transition joint	过渡接头	1	
15	B150101000	Lube Cups	油杯	1	

转向液压系统

STEERING HYDREULIC SYSTEM

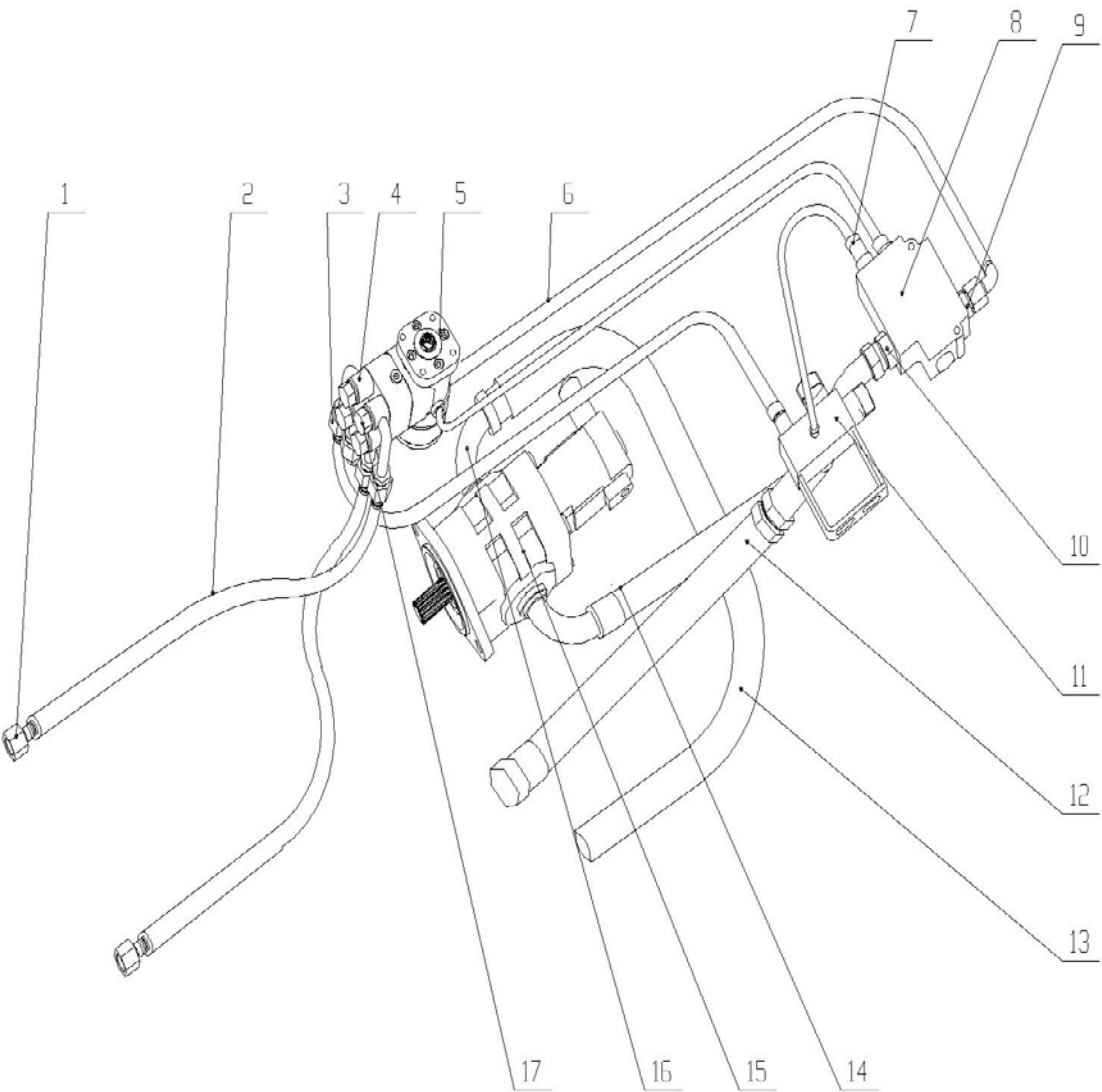


转向液压系统

STEERING HYDREULIC SYSTEM

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	W110006460	Joint	接头	2	
2	Z060250462	Steering gear	左右转向油管	2	
3	Z050060050	Steering head	转向器直接头	2	
4	Z350180280	Oil return connector	转向器回油口接头	2	
5	W090300000	Steering gear	转向器	1	
6	Z060250380	Steering gear feed line	转向器进油管	1	
7	W110250960	Joint	接头	3	
8	W110000300	Priority Valve	优先阀	1	
9	Z062060490	Joint	接头	1	
10	Z150200340	Joint	接头	1	
11	Z060060014	Oil Road Block I	油路块 I	1	
12	Z062060450	Fuel tank return pipe	油箱回油管	1	
13	Z590190020	Low pressure oil resistant hose	低压耐油胶管	14	
14	Z060060452	Priority valve into the fuel line	优先阀进油管	1	
15	W060200000	Working steering pump	工作转向泵	1	
16	Z062060250	Steering pump suction port	转向泵吸油口	1	
17	Z590180150	Hollow Bolt	空心螺栓	4	

工作液压系统

WORKING DEVICE HYDRAUIC SYSTEM

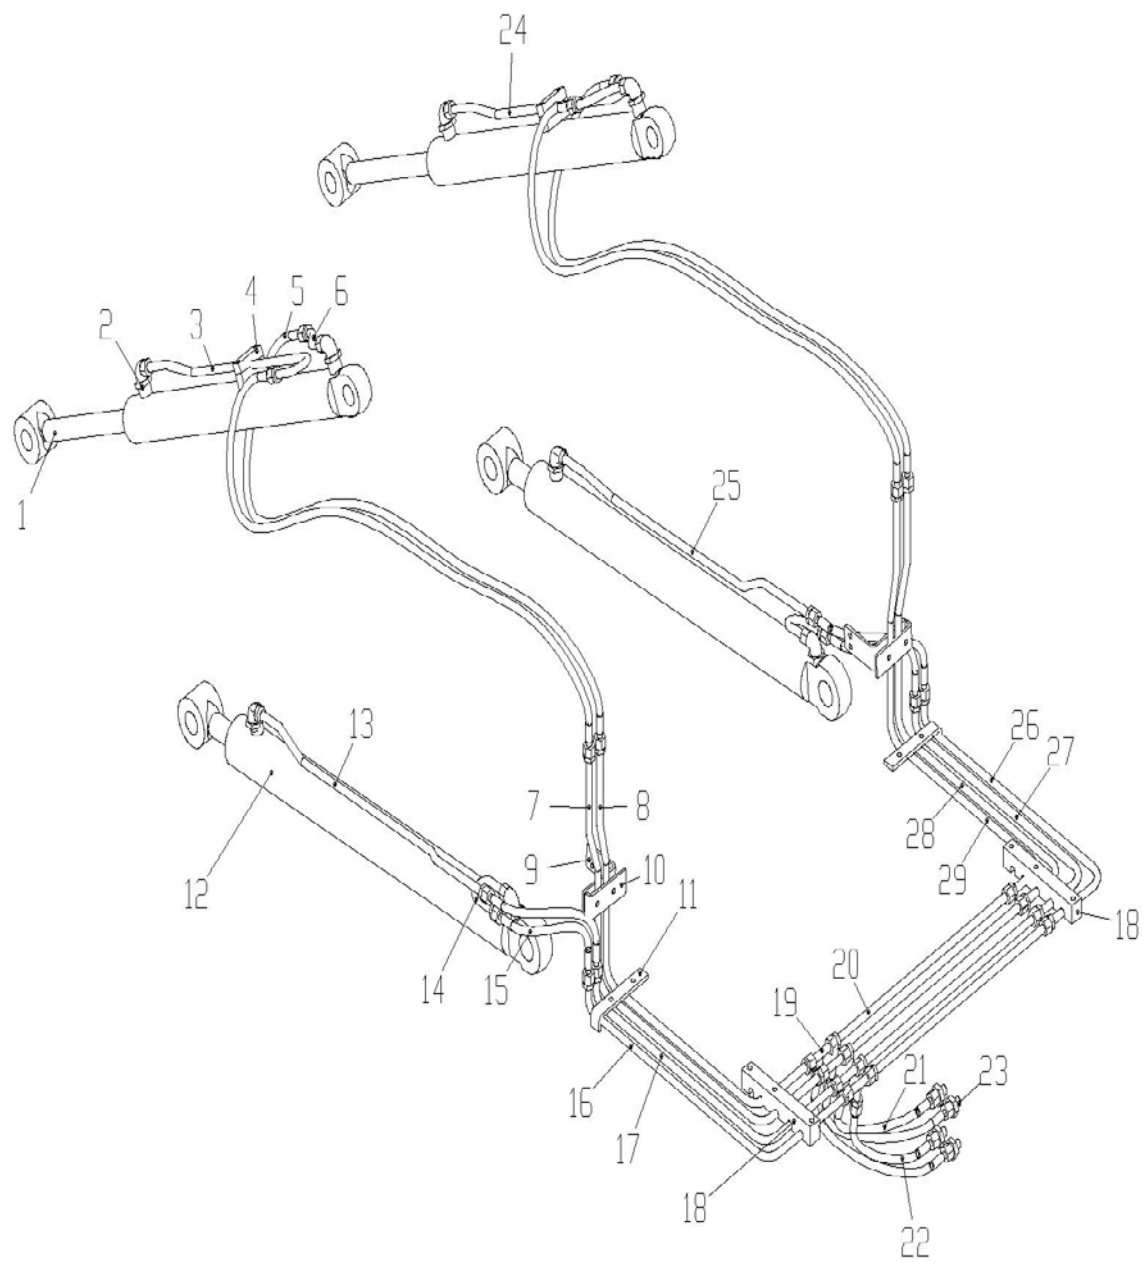


工作液压系统 WORKING DEVICE HYDRAUIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	
1	W053025035	Flip Bucket	装载转斗缸	2	
2	QLWZG077-002218	Right angle adjustable joint	直角可调接头	8	
3	Z062100601	Left small lumen hard tube	左翻斗缸小腔硬管	1	
4	Z062100550	Big cavity hard tube of dump cylinder Tubing	翻斗缸大腔硬管	2	
5	QLWZG077-002218	Right angle adjustable joint	直角可调接头	8	
6	Z062101090	Bucket cylinder hose	转斗缸软管	4	
7	Z061100115	Oil feed pipe	左翻斗缸小腔进油管	1	
8	Z061100155	Oil feed pipe	左翻斗缸大腔进油管	1	
9	Z061100321	Stent	支架	2	
10	Z061100350	Pipe Card	管卡	2	
11	Z064100162	Pressure Plate	压板	2	
12	W053025025	Lifting cylinder	举升缸	2	
13	Z060100035	Left lift cylinder small cavity take over	左举升缸小腔接管	1	
14	Z050100445	Oil feed pipe	举升缸大腔硬管	2	
15	Z060250092	Lifting cylinder hose	举升缸软管 (L=470)	4	
16	Z061100071	Oil feed pipe	左举升缸大腔硬管	1	
17	Z061100031	Oil feed pipe	左举升缸小腔硬管	1	
18	Z062100091	Pressure Plate	压板	2	
19	W110005780	Three-way connector	三通接头	4	
20	Z060250112	Tubing	工作阀 A、B 口油管	4	
21	Z061100200	Tubing	工作阀出油管	3	
22	Z061100201	Tubing	工作阀出油管	1	
23	Z020100200	Joint	接头	6	
24	Z062100571	Oil feed pipe	右翻斗缸小腔硬管	1	
25	Z060100055	Oil feed pipe	右举升缸小腔硬管	1	
26	Z061100091	Oil feed pipe	进右举升缸大腔接管	1	
27	Z061100051	Oil feed pipe	进右举升缸小腔接管	1	
28	Z061100175	Oil feed pipe	进右翻斗缸大腔硬管	1	
29	Z061100135	Oil feed pipe	进右翻斗缸小腔硬管	1	

四合一斗液压系统

FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM

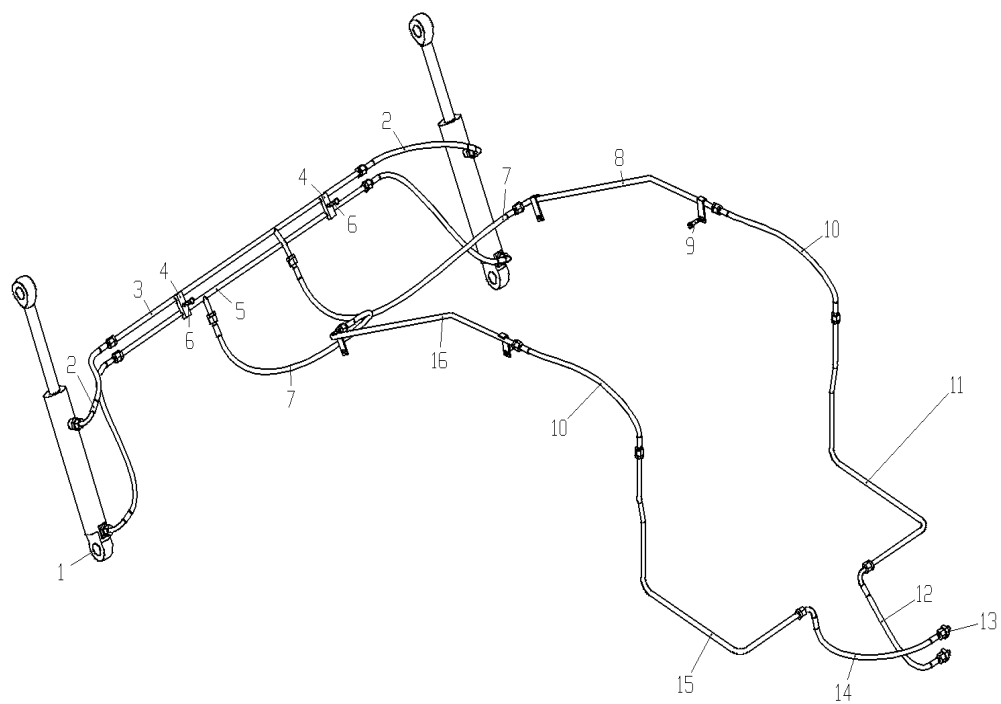


四合一斗液压系统

FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY
1	W053025360	Four-in-one cylinder	四合一斗油缸	2
2	Z065100860	Cylinder hose	油缸软管	4
3	Z050560132	Hard Tube I	硬管 I	1
4	Z050560150	Pipe Card	管卡	2
5	B042521225	Bolt	螺栓	2
6	Z050560102	Hard Tube2	硬管 2	1
7	Z064100620	Right arm hard tube	右动臂硬管	1
8	Z064100680	Tube	三通进油管	2
9	B042521020	Bolt	螺栓	4
10	Z062380091	Tube	动臂硬管进油管	2
11	Z061100420	Third right hard tube	第三联右侧硬管	1
12	Z062251040	Tube	第三联 A 口出油管	1
13	Z020100200	Joint	接头	2
14	Z062251060	Tube	第三联 B 口出油管	1
15	Z061100440	Third left hard tube	第三联左侧硬管	1
16	Z064100600	Left arm hard tube	左动臂硬管	1

快换液压系统

CHANGE THE HYDRAULIC SYSTEM QUICKLY

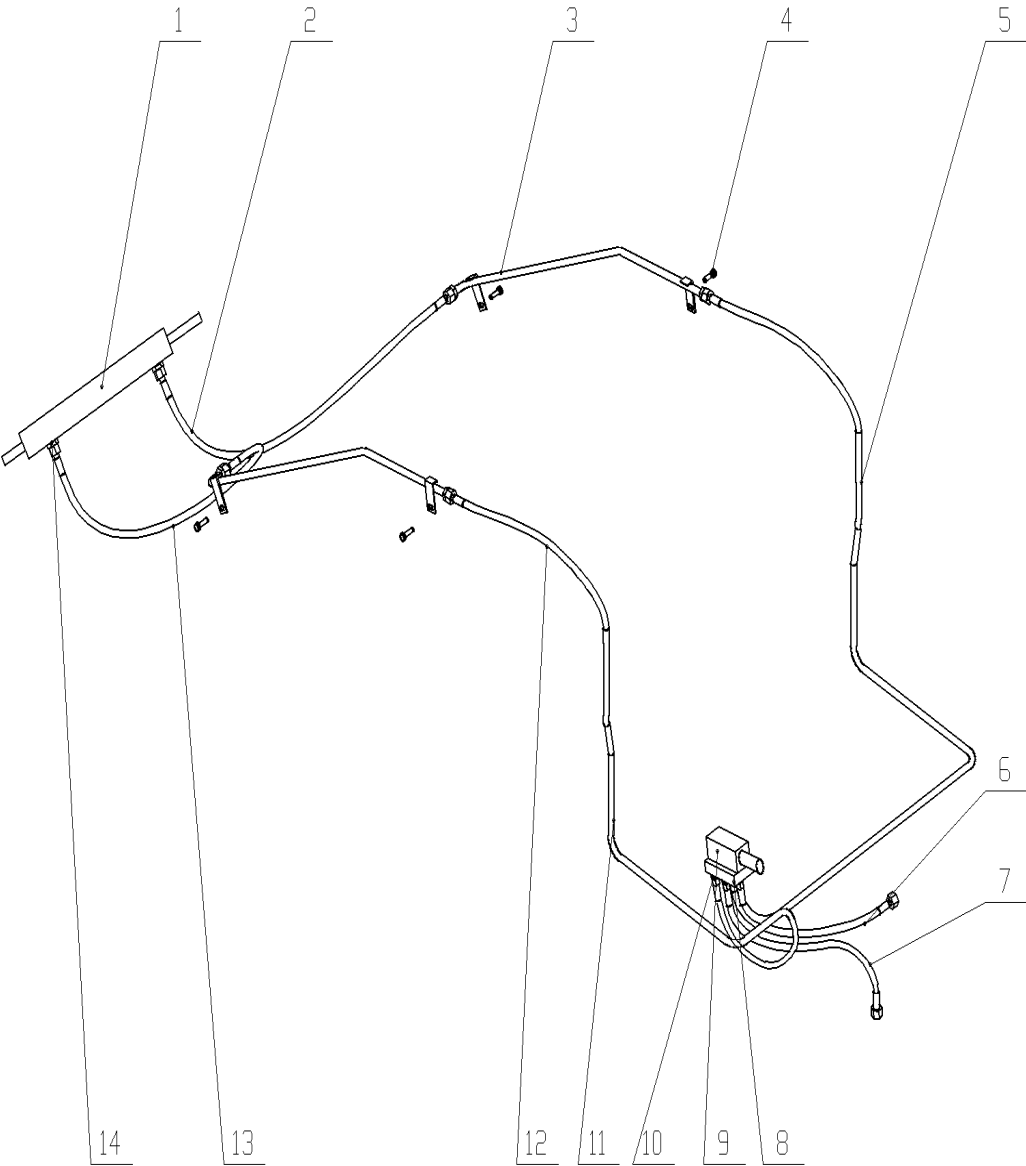


快换液压系统

CHANGE THE HYDRAULIC SYSTEM QUICKLY

序号	零件号	Part Name	零件名称	数量
ITEM	PART NO.			Q'TY
1	W055200000	Change the oil cylinder quickly	快换油缸（两头忙）	1
2	Z064100740	Change the right front tubing	快换右前油管	1
3	Z064100720	Quick change right arm hard tube	快换右动臂硬管	1
4	B040711020	Bolt M10×20	螺栓 M10×20	4
5	Z061100620	Solenoid valve B outlet pipe	电磁阀 B 口出油管	1
6	Z060250280	Tube	油管	1
7	Z061100280	Tube	油管	1
8	W070100250	Valve Plate	阀板	1
9	W072000000	Wet solenoid directional valve	湿式电磁换向阀	1
10	Z590190940	Joint	过渡接头	4
11	Z061100600	Solenoid valve a outlet pipe	电磁阀 A 口出油管	1
12	Z064100700	Quick change left arm hard tube	快换左动臂硬管	1
13	Z064100760	Change the left front tubing	快换左前油管	1
14	Z350730590	Jont	接头	2


装载阀 LOAD VALVE

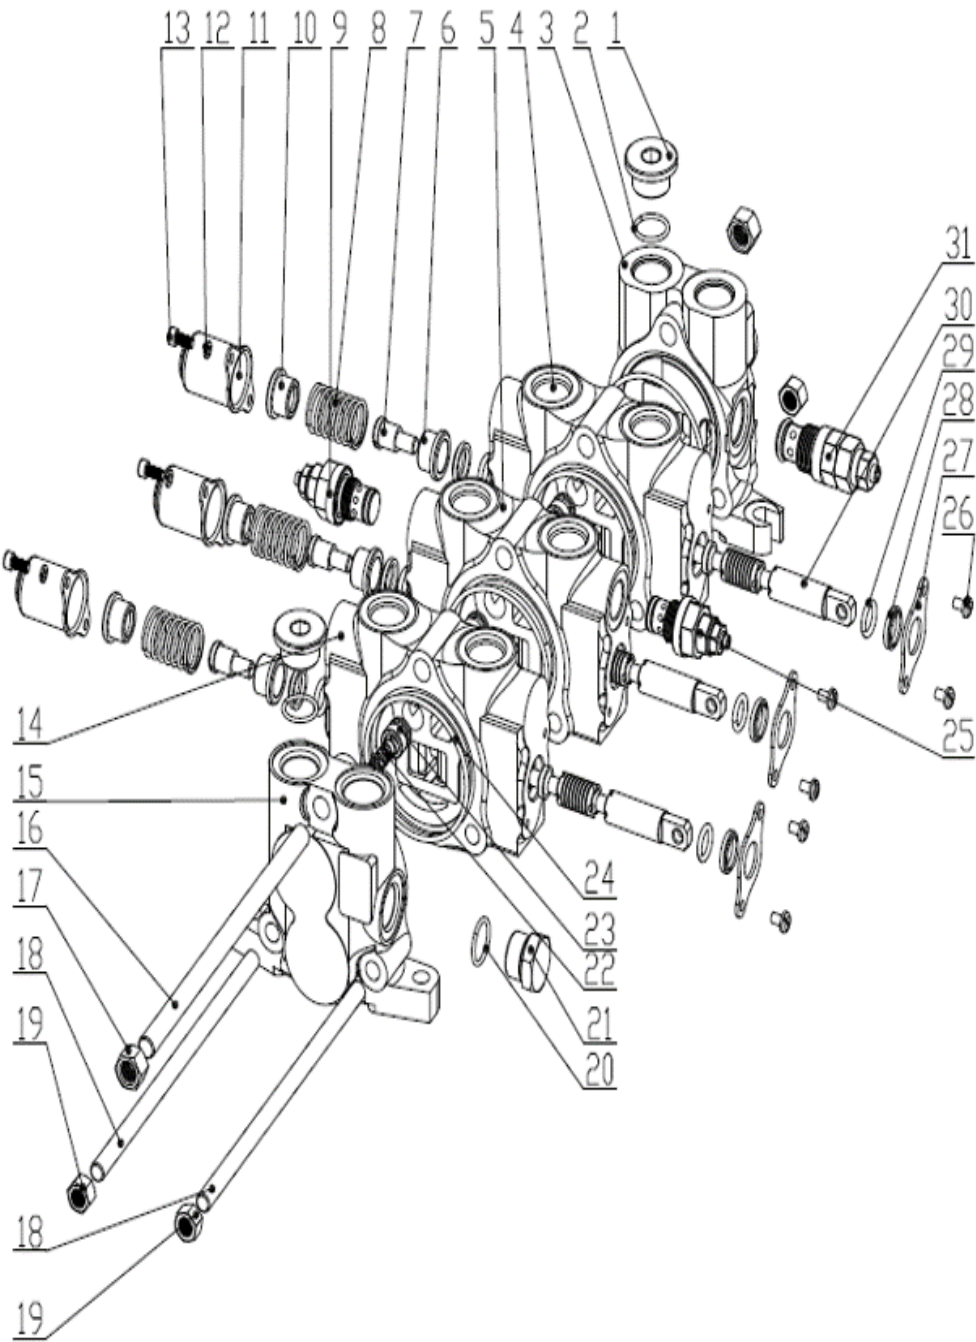

装载阀 **LOAD VALVE**

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W070400009-1	Screw plug	螺塞	3	
2	ISO6149/26.6x2.9	C-ring 26.6X2.9	O 型圈/26.6x2.9	3	
3	W070400009-2	Inlet valve body	进油阀体	1	
4	W070400009-3	Valve Body	阀体	1	
5	W070400009-4	Valve Body	阀体	1	
6	W070400009-5	Spring seat	弹簧座	3	
7	W070400009-18	Setting screw	定位螺钉	3	
8	W070400009-22	Spring	弹簧	3	
9	W070400009-6	Secondary Relief Valve	二次溢流阀	1	
10	W070400009-7	Spring seat	弹簧座	3	
11	W070400009-8	Positioning end cap	定位端盖	3	
12	B060110602	PAD/6	弹垫/6	6	
13	B010410614	Hexagon Screw/M6X14	内六角螺钉/M6x14	6	
14	W070400009-9	Valve Body	阀体	1	
15	W070400009-10	Return valve body	回油阀体	1	
16	W070400009-19	Double headed bolt	双 头 螺 栓 /M14x1.5x269	1	
17	B050411412	Nut M14X1.5	螺母/M14x1.5	2	
18	W070400009-20	Stud Bolt /M12X1.25X269	双 头 螺 栓 /M12x1.25x269	2	
19	B050410001	Nut M12X1.25	螺母/M12x1.25	4	
20	B160120236	O-ring 23.6X2.65	O 型圈/23.6x2.65	1	
21	W070400009-11	Screw plug	螺塞	1	
22	W070400009-12	Spring	弹簧	3	
23	W070400009-13	Check Valve	单向阀	3	
24	B160110875	O-ring 87.5X3.55	O 型圈/87.5x3.55	4	
25	W070400009-14	Secondary Relief Valve	二次溢流阀	1	
26	B010710610	Half Round head screw	半圆头螺钉/M6x10	6	
27	W070400009-15	Backing Plate	垫板	6	
28	W070400009-21	Nylon retaining ring	尼龙挡圈/25x3.2	6	
29	B160121185	O-ring	O 型圈 18.64x3.53	6	
30	W070400009-16	Type 0 stem	O 型阀杆	3	
31	W070400009-17	Main Relief Valve	主溢流阀	1	


转斗油缸 TILT CYLINDER

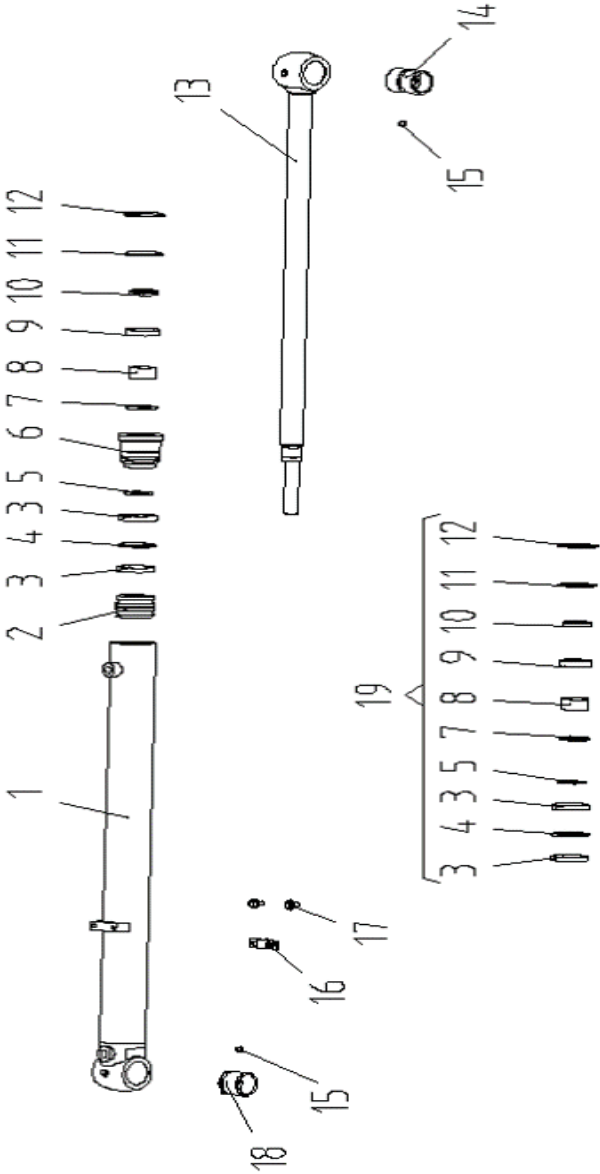

转斗油缸 TILT CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W053025035-1	Cylinder block	缸体	1	
2	W053025035-4	Piston	活塞	1	
6	W053025035-7	Guide sleeve	导向套	1	
13	W053025035-6	Piston rod	活塞杆	1	
14	W053025035-10	Rod bushing	杆衬套	1	
15	B150101000	Oil Cup M10 * 1	油杯 M10*1	2	
16	W053025650-8	Pipe Clip	管夹	1	
17	B042521015	Hexagon flange bolts M10 * 15	六角法兰面螺栓 M10*15	2	
18	B120524028	Joint Bearing	关节轴承 GE40ES	1	
19	W053025036	Sealed package	密封包	1	
3	W053025035-11	Support rings	支撑环 ZD70A	2	
4	W053025035-3	Glen Circle	格莱圈	1	
5	B160121260	O-ring	O 型圈 26X3.1	1	
7	B160130720	O-ring	O 型圈 70X3.1	1	
8	W053025035-12	Support rings	支撑环 ZD40A	1	
9	W053025035-13	SGP ladder closure	SGP 阶梯封	1	
10	W053025035-14	Gay Seals	GAY 密封圈	1	
11	B160140751	O-ring	O 型圈 75X3.1	1	
12	W053025035-8	Dustproof Ring CK-40	防尘圈 CK-40	1	


举升油缸 LIFT CYLINDER

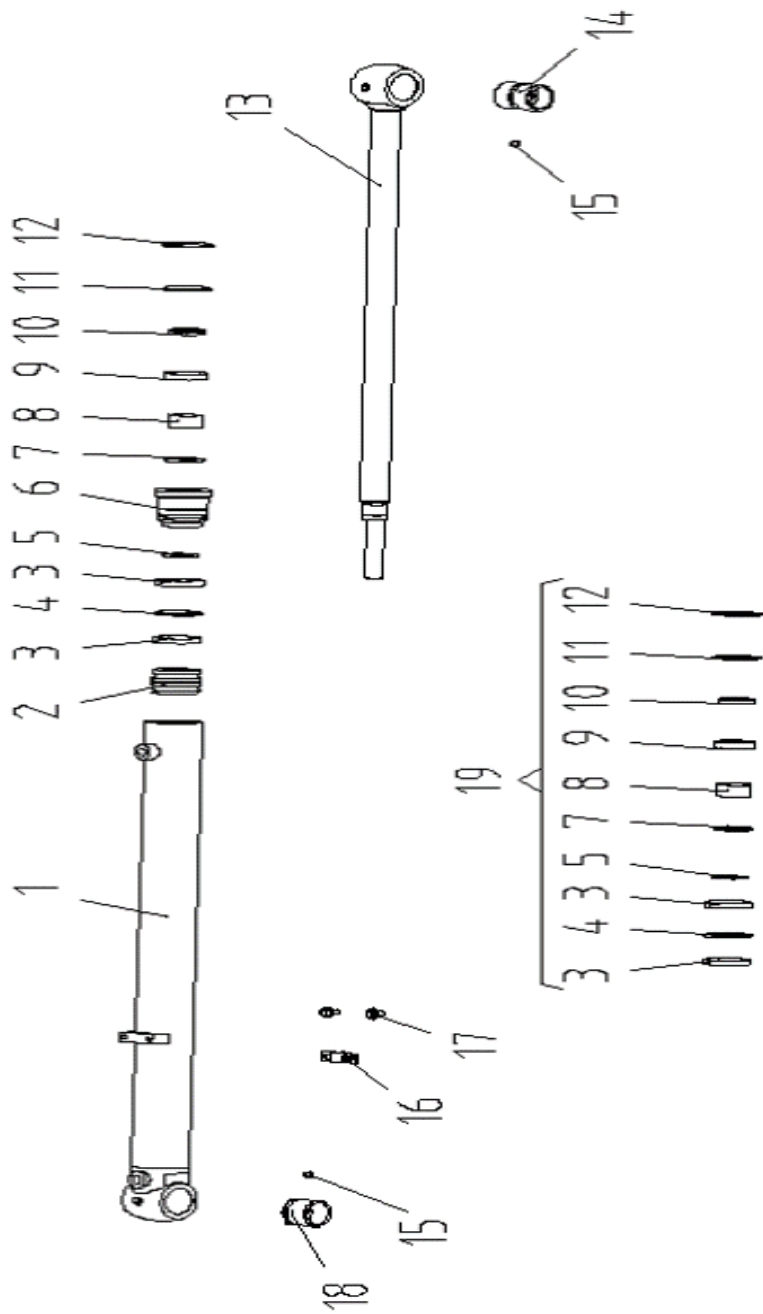

举升油缸 LIFT CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W053025025-3	Cylinder block	缸体	1	
2	W053025025-4	Piston	活塞	1	
6	W053025025-5	Guide sleeve	导向套	1	
13	W053025025-7	Piston rod	活塞杆	1	
14	W053025025-6	Rod bushing	杆衬套	1	
15	B150101000	Oil Cup M10 * 1	油杯 M10*1	2	
16	W053025650-8	Pipe Clip	管夹	1	
17	B042521015	Hexagon flange bolts M10 * 15	六角法兰面螺栓 M10*15	2	
18	B120525035	Joint Bearing	关节轴承 GE50ES	1	
19	W053025026	Sealed package	密封包	1	
3	W053025025-1	Support rings	支撑环 ZD80A	2	
4	W053025025-2	Glen Circle	格莱圈	1	
5	B160130502	O-ring	O 型圈 50X3.1	1	
7	B160130831	O-ring	O 型圈 80X3.1	1	
8	W053025025-8	Support rings	支撑环 ZD45A	1	
9	W053025025-9	SGP ladder closure	SGP 阶梯封	1	
10	W053025025-10	Gay Seals	GAY 密封圈	1	
11	B160130850	O-ring	O 型圈 85X3.1	1	
12	W053025025-11	Dustproof Ring CK-45	防尘圈 CK-45	1	

手制动系统 MANUEL BRAKE SYSTEM

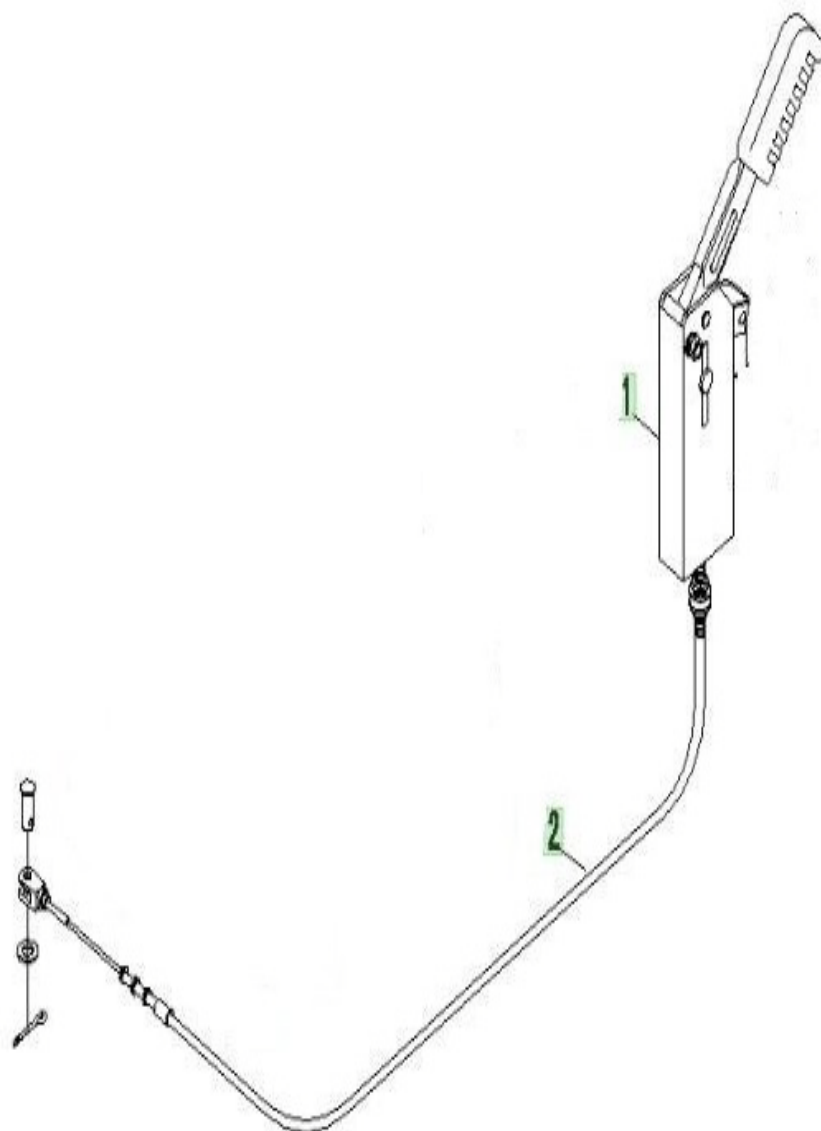


手制动系统 MANNEL BRAKE SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	备注 Rem ark
1	W013500762	Handbrake assembly	手刹总成	1	
2	W013500762-1	Soft handbrake shaft	手刹软轴	1	

行车制动系统(一)


DRIVING BRAKE SYSTEM(ONE)

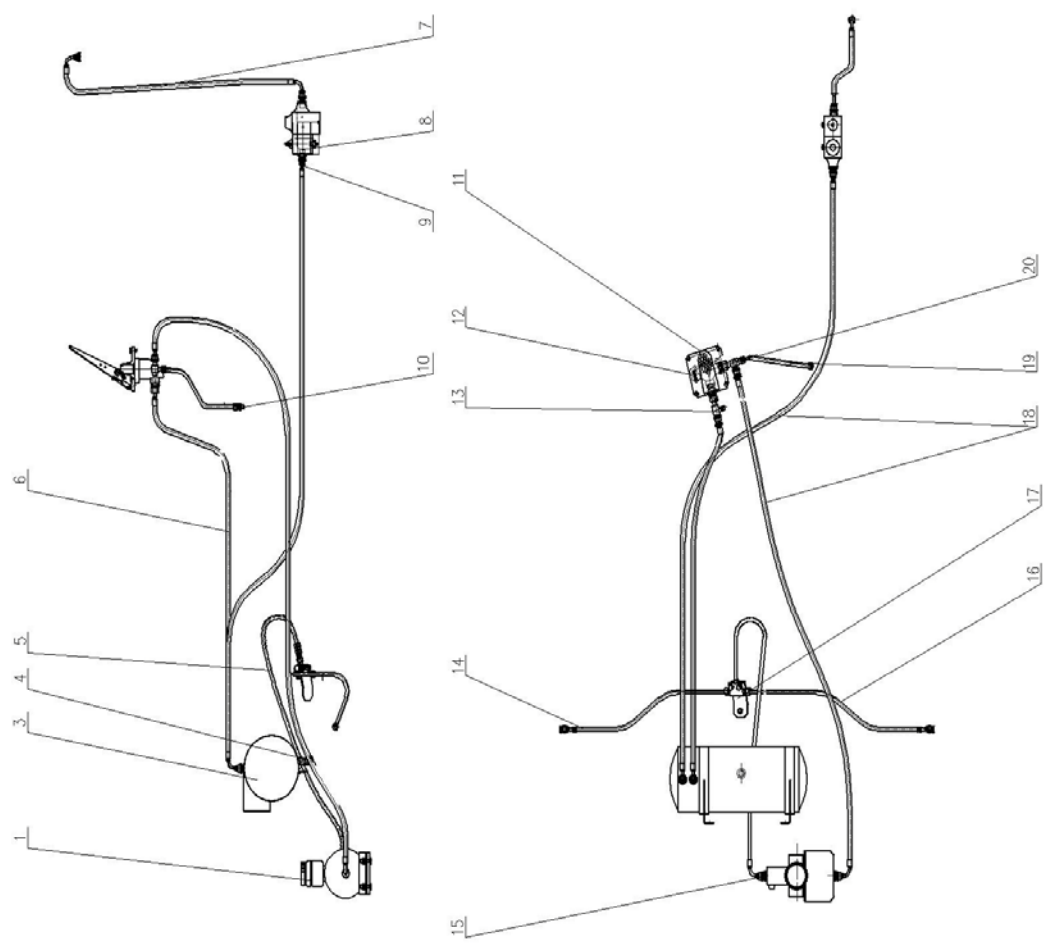

行车制动系统 RIVING BRAKE SYSTEM

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	W110002650	Afterburner	加力器	1	
2	Z110070350	Gas storage tank	贮气筒	1	
3	W110000210	Manual Drain Valve	手动放水阀	1	
4	Z050110010	M14 brake hose	M14 制动软管	1	
5	Z590220970	M18 brake hose	M18 制动软管	1	
6	Z050110030	Air compressor outlet pipe	空压机出气管	1	
7	W110002580	Multifunctional unloading valve	多功能卸荷阀	1	
8	Z590220070	Joint	接头	6	
9	Z590220230	Joint	油管接头	3	
10	W110000100	Air Brake Valve	气制动阀	1	
11	Z610070100	Screw Block	螺堵	1	
12	Z590510011	Three-way connection for barometer	气压表三通接头	1	
13	Z060110060	Brake hose	制动软管	1	
15	Z590220070	Joint	接头	1	
16	Z060110080	Brake hose	制动软管	1	
17	Z590221070	Three-way connector	三通接头	1	
18	Z350220110	The outlet pipe of the gas storage	贮气筒出气管	2	
19	Z060110140	cylinder	变速阀油管	1	
20	Z590510011	Three-way connector	三通接头	1	


传动系统 TRNSMISSION SYSTEM

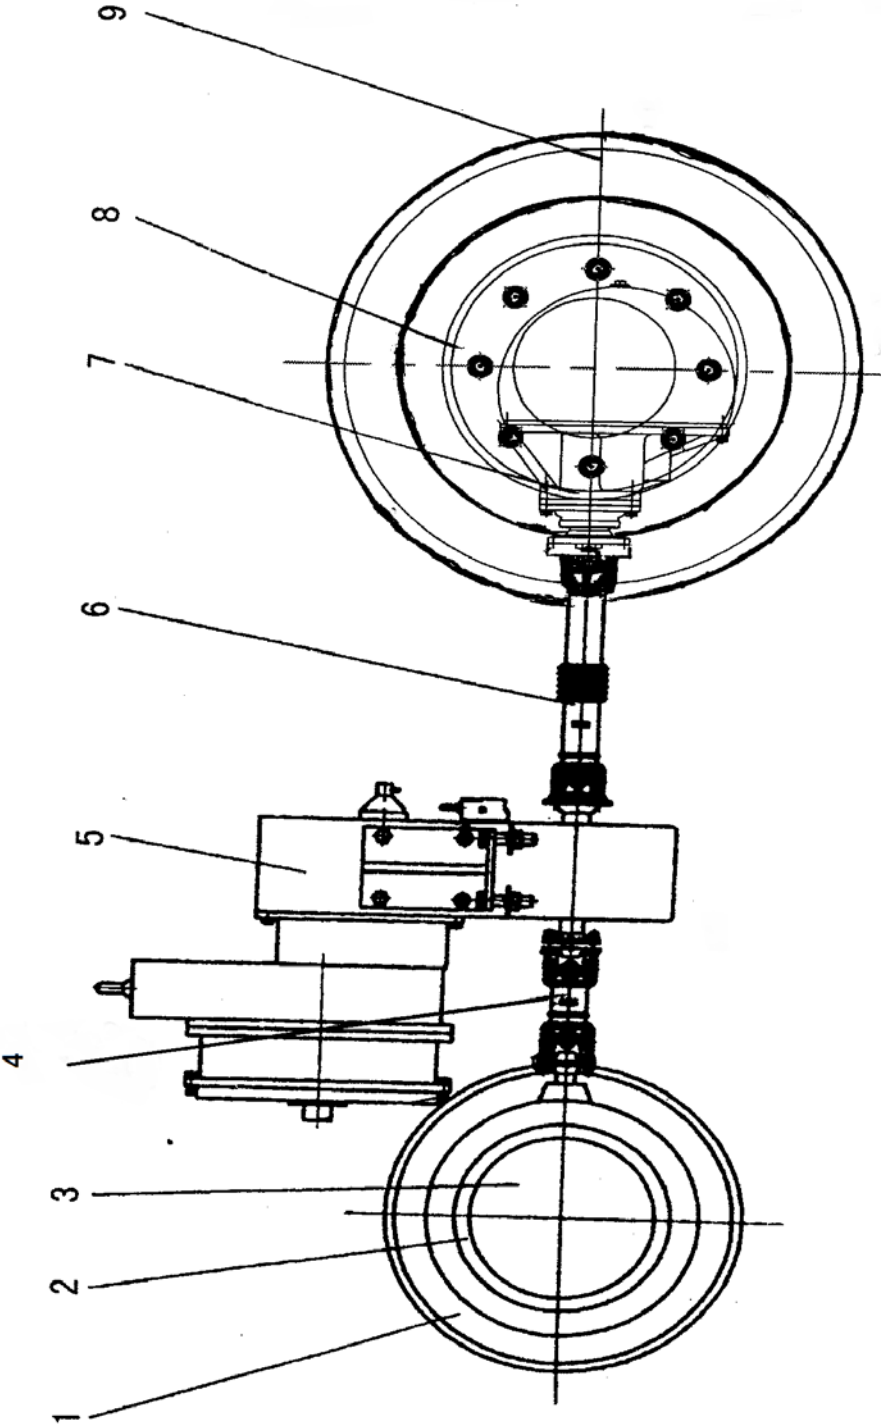

传动系统 TRNSMISSION SYSTEM

序号 ITEM	零件号 PART NO.	Part Name		数量 Q' TY	备注 Rem ark
1	W110001640	RIM ASSY	轮胎	2	
2	W110600230	TIRE ASSY	轮辋组件	2	
3	W043600000	FRONT AXLE ASSY	前驱动桥	1	
4	B4610-25A010000	FRONT ORIVING SHAFT	前传动轴	1	
5	W024500000	TRANS MISSION ASSY	变速箱		
6	B4610-25A020000	REAR DRIVING SHAFT	后传动轴	1	
7	W043700000	REAR AXCLE ASSY	后驱动桥	1	
8	W110600260	REAR TIRE ASSY	后桥轮辋	2	
9	W110001660	RIM ASSY	后桥轮胎	2	


变速箱 GEARBOX

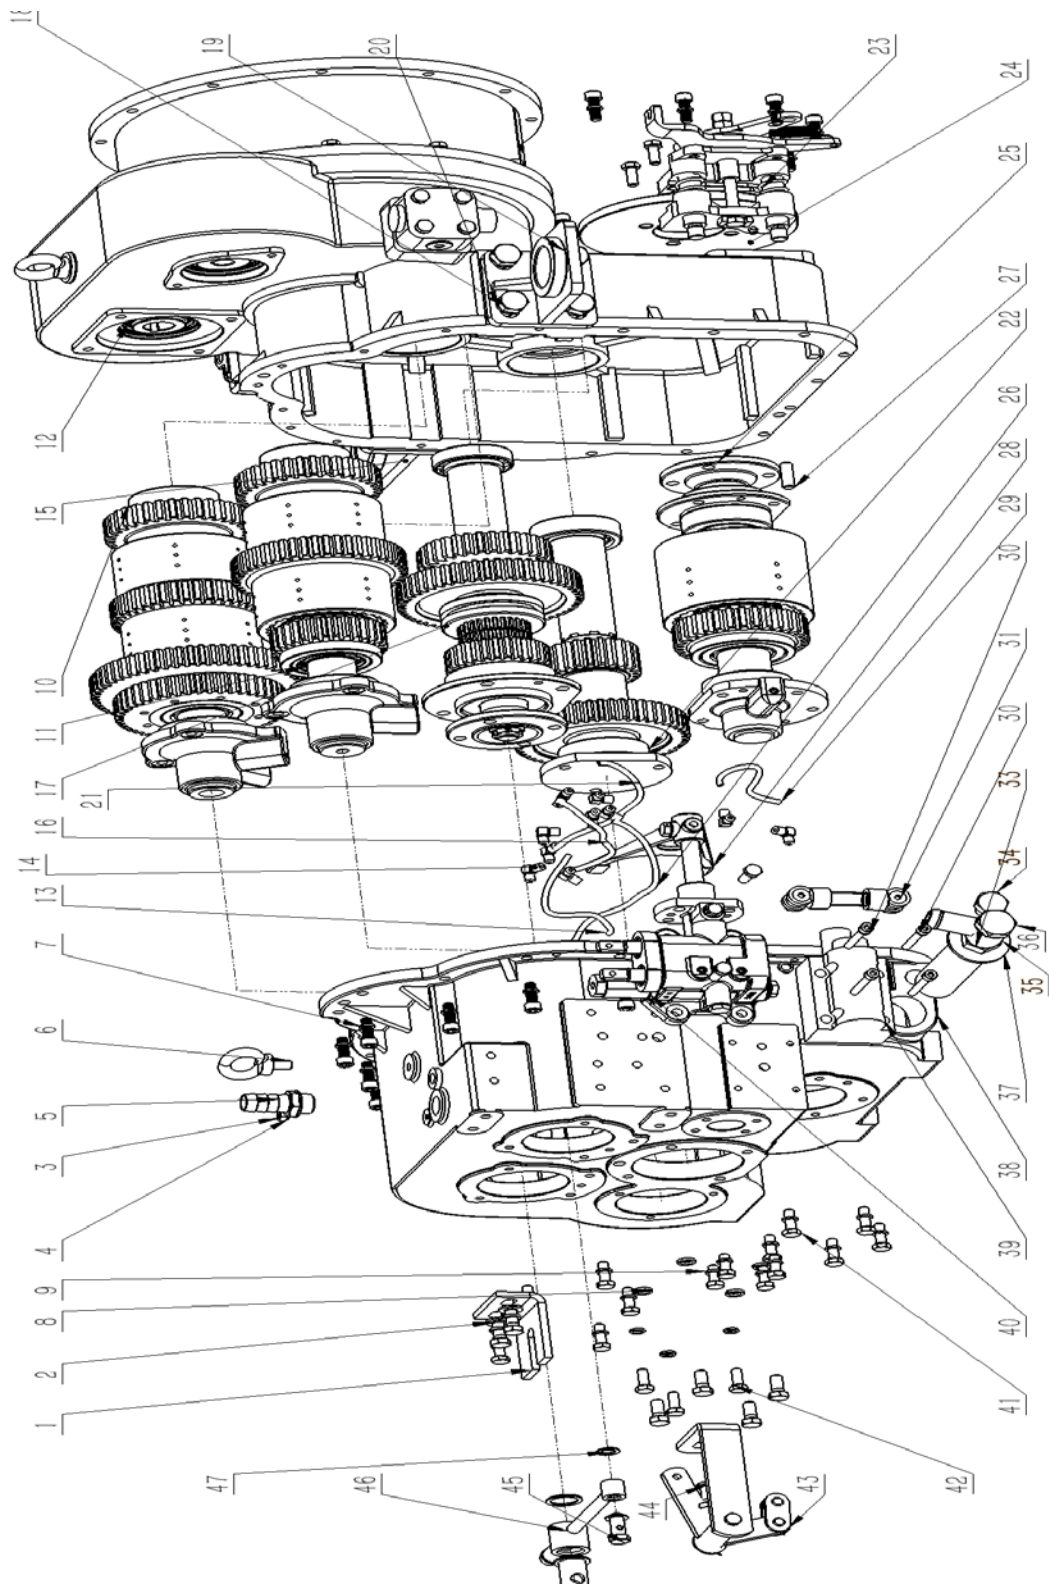

变速箱 GEARBOX

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W024200830	Cable holding plate	拉线固定板（加长）	1	
2	B060411203	Flat washers 12	平垫圈 12	4	
3	B052020807	Nut M 8	螺母 M8	1	
4	W084000530	Combination pad 8	组合垫 8	1	
5	W024200840	Return Tubing Connector	回油管接头 25	1	
6	W023800180	Hanger ring screws M12	吊环螺钉 M12	1	
7	B042811030	Hanger ring screws	内六角 M10X30	19	
8	B060111203	Padding	弹垫 12	8	
9	B060111002	Padding	弹性垫圈 10	45	
10	W024500010	Reverse Clutch Assembly	倒退离合器总成	1	
11	W024500020	Forward Clutch Assembly	前进离合器总成	1	
12	W024500030	Torque Converter Assembly diagram	变矩器总成图	1	
13	W024500060	First gear tubing	一档油管	1	
14	W084000480	Right angle tube fittings	直角管接头	10	
15	W024500040	Long bracket	长支架	1	
16	W024500050	Forward tubing	前进油管	1	
17	W024500070	High and low speed shaft assembly	高低速轴总成	1	
18	B040911835	Bolt M18 × 35	螺栓 M18×35	8	
19	W024500080	Short bracket	短支架	1	
20	B060111805	Padding	弹垫 18	8	
21	W024500090	Reverse fuel line	倒档油管	1	
22	W024500100	Intermediate shaft assembly	中间轴总成	1	
23	W024500110	Clamp disc brake (left)	钳盘制动器（左）	1	
24	W024500120	Brake disc 220	制动盘 220	1	
25	W024500130	Two-four Drive Clutch Assembly	二四驱离合器总成	1	
26	W024500140	Second gear tubing	二档油管	1	
27	W024501020	Cylinder pin 12X35	圆柱销 12X35	2	
28	W024500150	Fork support assembly	拨叉支架总成	1	
29	W024500160	Transfer tubing	转换油管	1	
30	B060110802	Padding	弹垫 8	4	
31	W024200890	Oil standard	油标	1	
32	B010420865	Hexagon socket head screws M 8 × 65	内六角圆柱头螺钉 M8 ×65	4	
33	W084000190	Combination pad 27	组合垫 27	5	


变速箱 GEARBOX

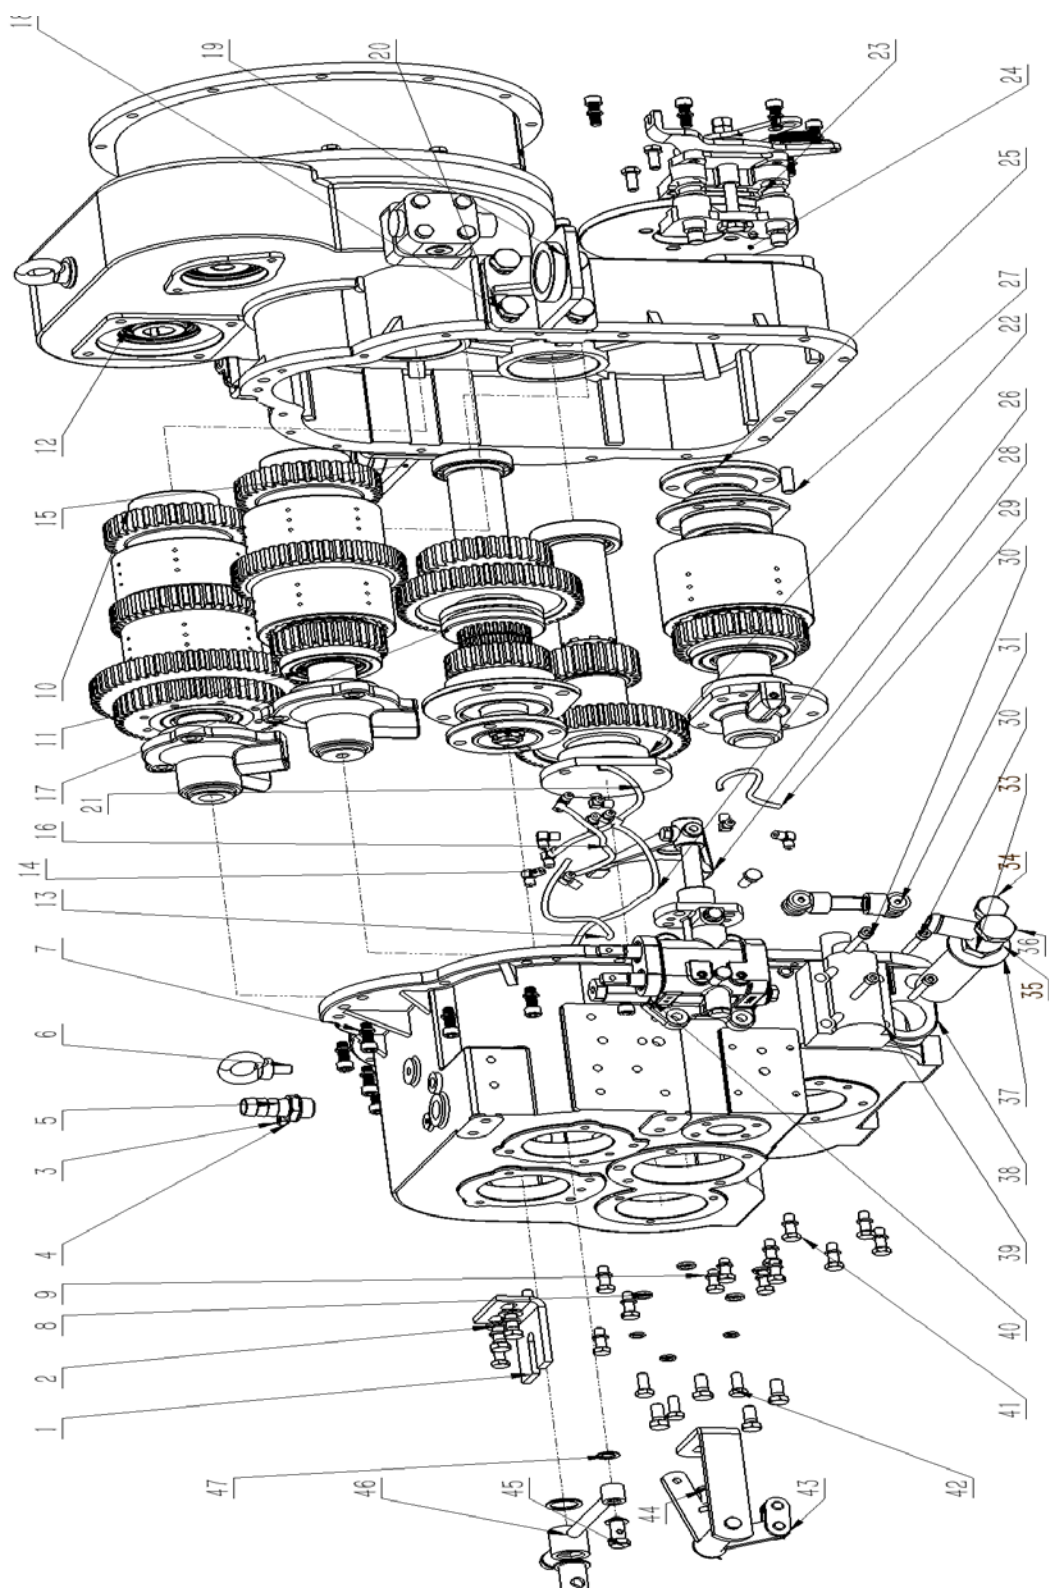

变速箱 GEARBOX

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
34	W024200880	Drain plug M20X1.5	放油螺塞 M20x1.5	1	
35	W024500170	Pumping joint body 25	抽油接头体 25	1	
36	W084000200	Hollow Bolt M27	空心螺栓 M27	2	
37	W024500180	Coarse filter	粗滤器	1	
38	W024500190	Box	箱体	1	
39	W024500200	Two-four drive electric control valve	二四驱电控阀 (24)	1	
40	W024200810	Shift valve	换挡阀 (带空档启动)	1	
41	B040711030	Bolt M10 × 30	螺栓 M10×30	15	
42	B040911025	Bolt M10 × 25	螺栓 M10×25	11	
43	W024500210	High and low speed bracket assembly	高低速支架总成	1	
44	B040911225	Bolt M12 × 25	螺栓 M12×25	8	
45	W084000020	Hollow Bolt	M14x1.5 空心螺栓	1	
46	W024500220	Lube tubing 20	润滑油管 20	1	
47	B060801403	Combined Washer 14	组合垫圈 14	2	
48	W024201200	Oil flaps	挡油板	1	
49	W084000140	Combination pad 48	组合垫 48	1	


变矩器总成 TORQUE CONVERTER ASSEMBLY

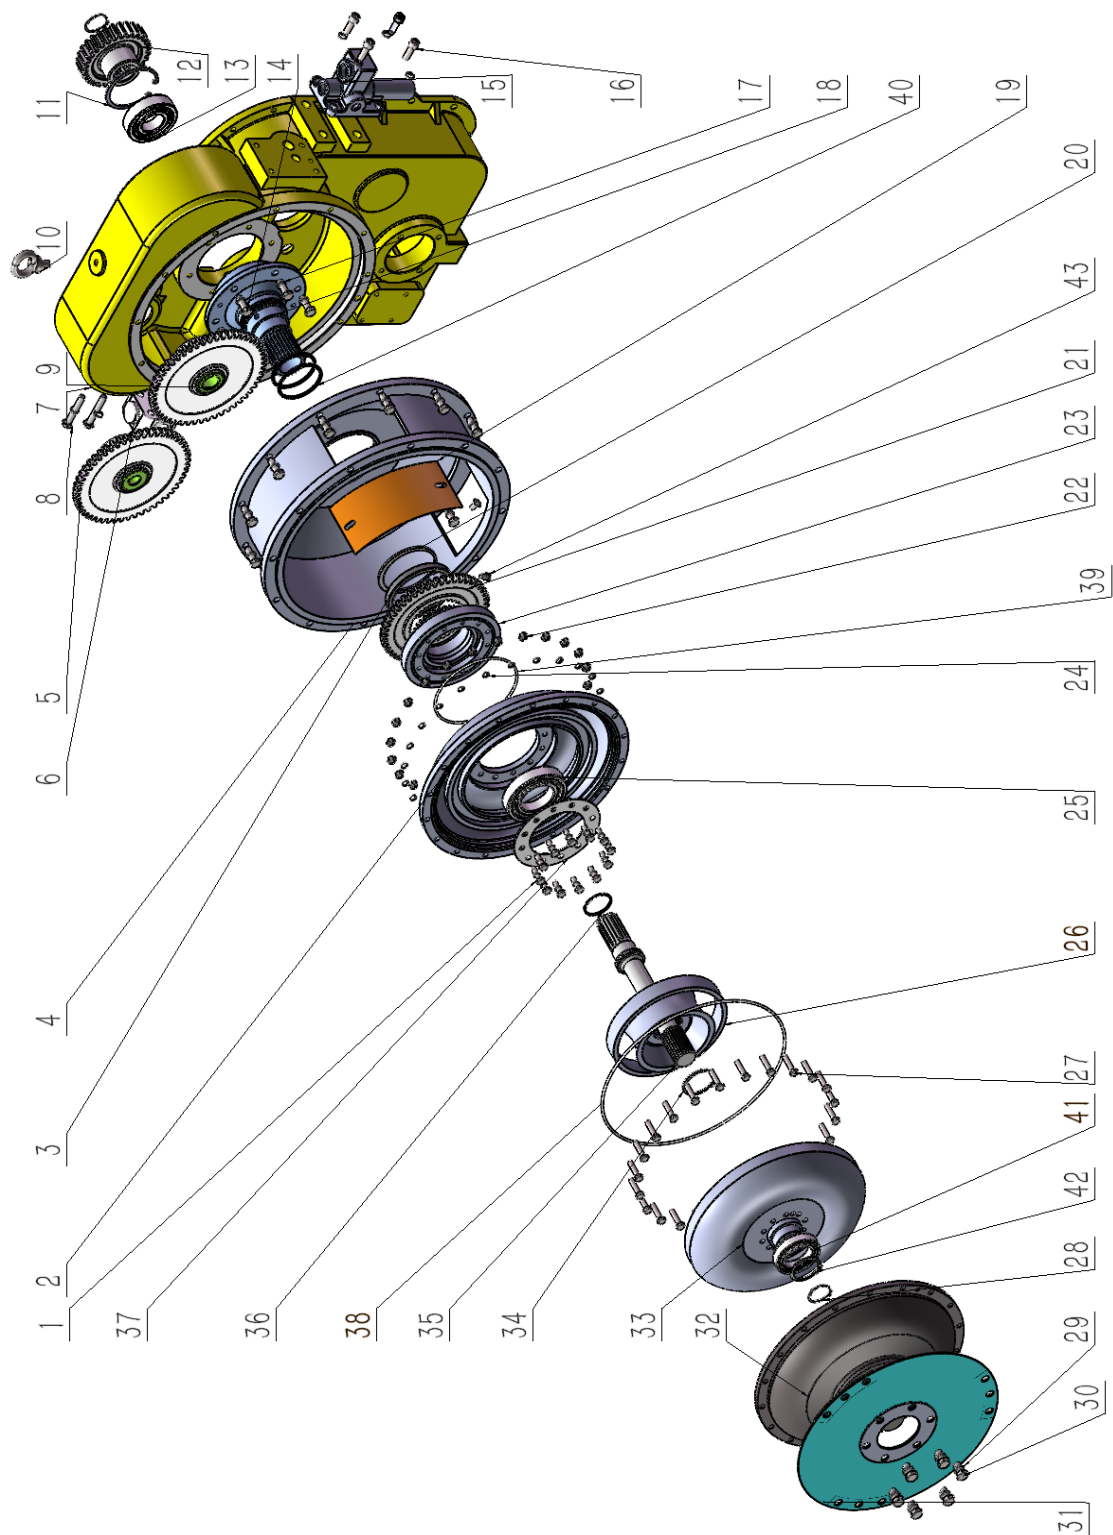

变矩器总成 TORQUE CONVERTER ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B040920825	Bolt M8 × 25	螺栓 M8×25	12	
2	W024500230	Pump wheels	泵轮	1	
3	W084002500	Oil seal 100 × 120X13	油封 100×120X13	1	
4	W024500240	Middle section	中节（12 孔）	1	
5	W024500300	Small pump port assembly	小泵口组件	1	
6	W024100340	Outlet valve	出口阀	1	
7	W024500250	Torque converter housing	变矩器壳体	1	
8	B040811060	Bolt M10 × 60	螺栓 M10×60	4	
9	W024500260	Large Pump Mouth Assembly	大泵口组件	1	
10	B010911235	Drop nose bolt M12	吊鼻螺栓 M12	1	
11	B070159003	Hole retaining ring 90	孔用挡圈 90	1	
12	W024500270	Output Gear 29	输出齿轮 29	1	
13	W024100380	Deep groove ball bearing	深沟球轴承 6308	1	
14	B040611030	Bolt M10 × 30	螺栓 M10×30	18	
15	W024500280	Pressure reducing valve	减压阀	1	
16	B010421030	Hexagon socket head screws	内六角圆柱头螺钉 M10×30	4	
17	B060111002	PAD 10	弹垫 10	26	
18	W024500290	Guide wheel base	导轮座	1	
19	W024500310	MID section cover plate	中节盖板	2	
20	B070110002	Shaft with retaining ring	轴用挡圈 100	1	
21	W024500320	Drive gear	主动齿轮 47	1	
22	B052020807	Nut M 8	螺母 M8	24	
23	W024500330	Pump wheel base	泵轮座	1	
24	B060110802	PAD 8	弹垫 8	24	
25	W030400018	Bearing 6212	轴承 6212	1	
26	W024500340	Guide wheel	导轮	1	
27	B040710835	Bolt M8 × 35	螺栓 M8×35	24	
28	B070213815	Shaft with retaining ring	轴用挡圈 38	3	
29	B060111203	PAD 12	弹垫 12	6	
30	B040711220	Bolt M12 × 20	螺栓 M12×20	6	
31	W024100460	Elastic Plate	弹性板	1	
32	W024500350	Pump wheel cover	泵轮罩	1	
33	W024500340	Guide wheel	导轮	1	
34	B070155502	Shaft with retaining ring	轴用挡圈 55	1	
35	W024500360	Long turbine shaft	长涡轮轴		
36	W024100410	Sealing ring	密封环 50		
37	W024500	Pump Wheel seat gask	泵轮座垫片		


变矩器总成 TORQUE CONVERTER ASSEMBLY

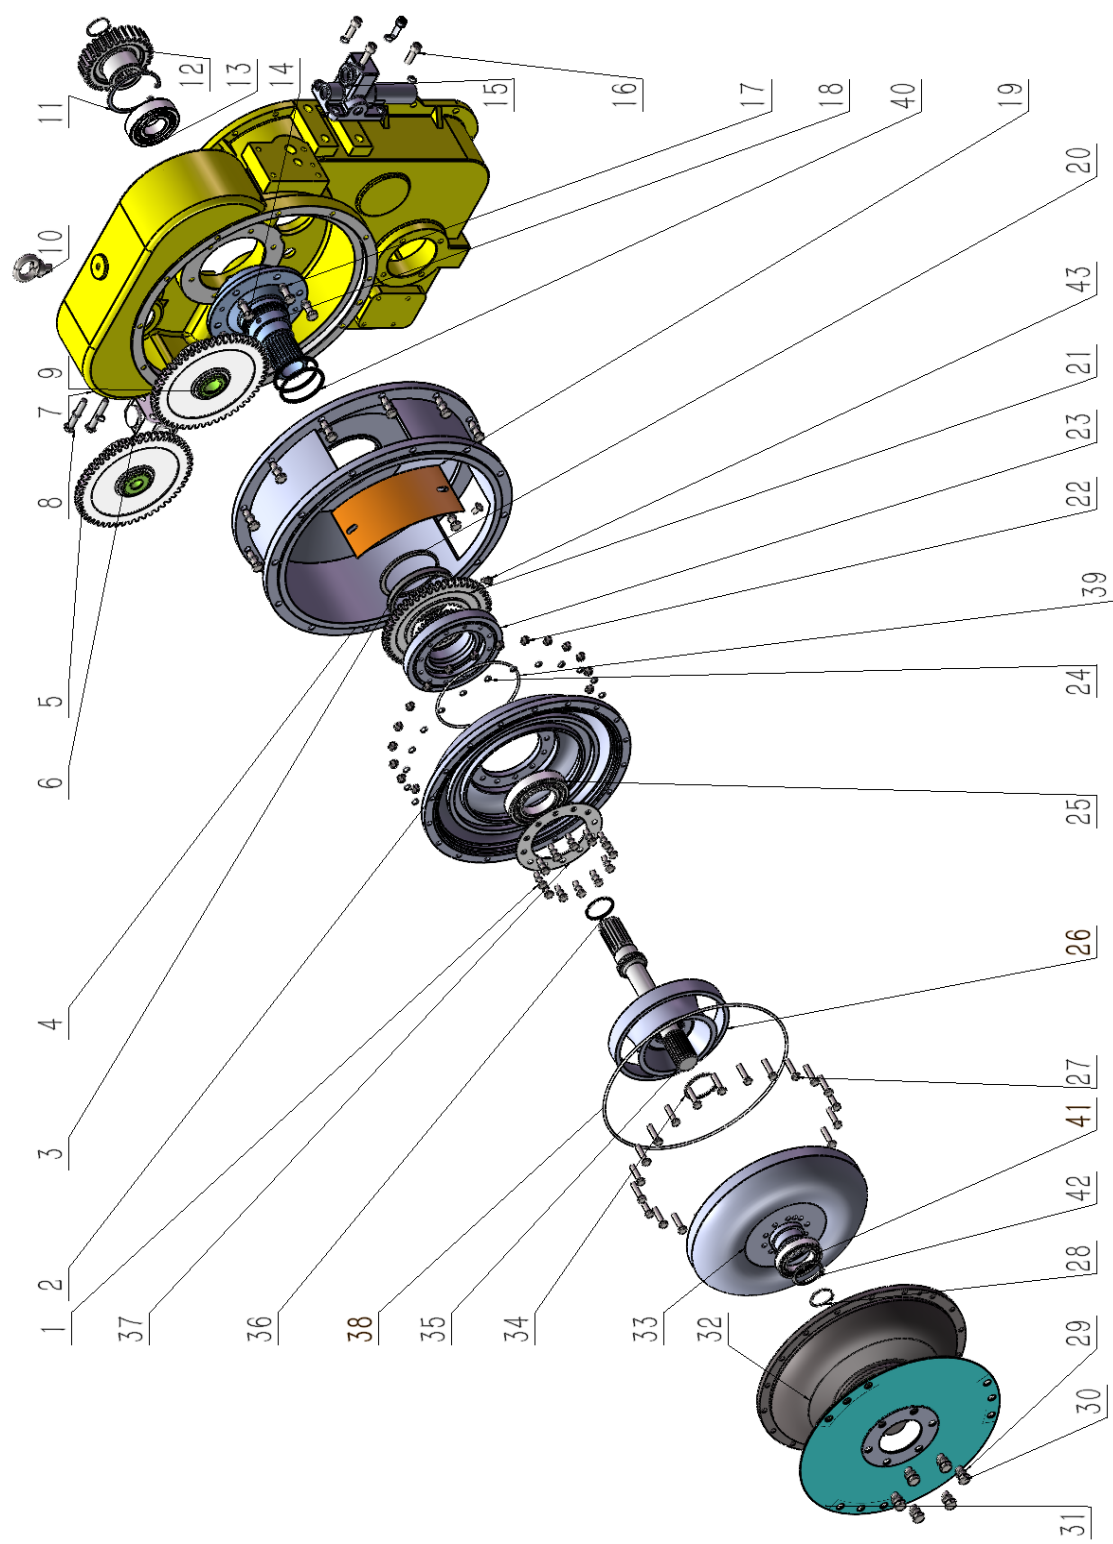

变矩器总成 TORQUE CONVERTER ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
38	B160113550	O-ring	O 型圈 355X3.55	1	
39	B160141452	O-ring	O 型圈 145X3.55	1	
40	W024100390	Sealing ring	密封环 80	2	
41	W024201050	Deep groove ball bearing	深沟球轴承 6010	1	
42	W030100580	轴用挡圈 50	轴用挡圈 50	1	
43	B040710812	Bolt M8 × 12	螺栓 M8×12	4	
44	B060110802	PAD 8	弹垫 8	12	


前进离合器总成 FORWARD CLUTCH ASSEMBLY

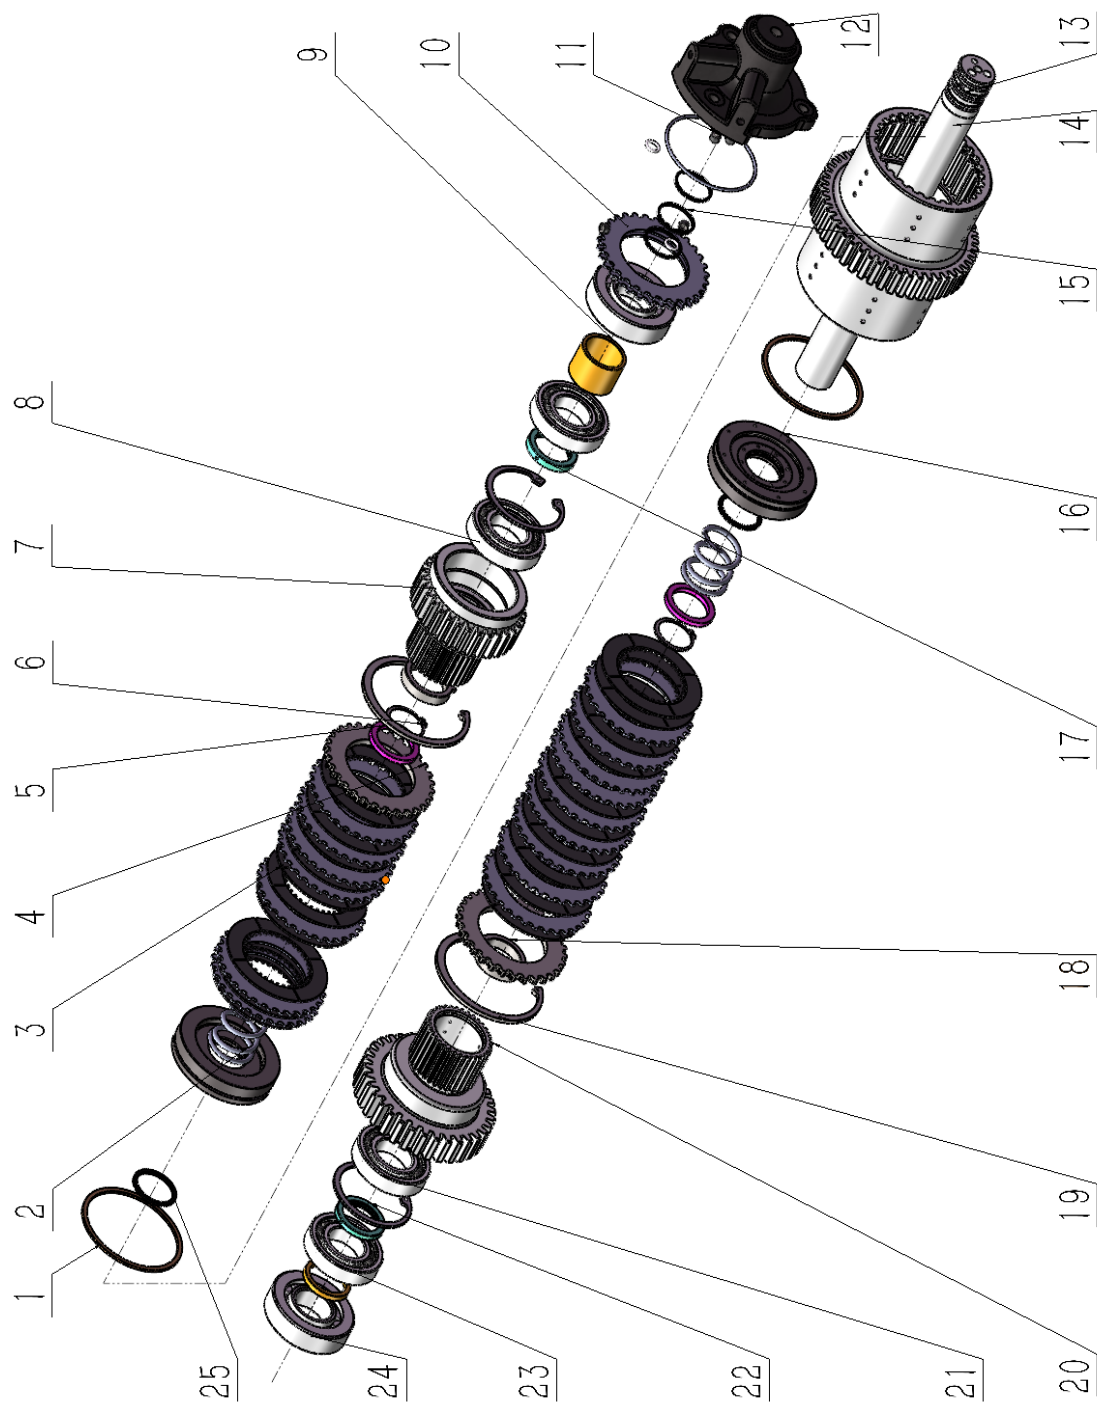

前进离合器总成 FORWARD CLUTCH ASSEMBLY

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W024500380	Seal Ring 110	密封环 110	2	
2	W024500390	Spring	弹簧	2	
3	W024500400	Friction Plate 110	摩擦片 110	20	
4	W024500410	Inside the paper	内纸片	2	
5	W024500420	Spring pressure plate	弹簧压板	2	
6	B070114002	Shaft with retaining ring	轴用挡圈 40	2	
7	W024500430	First Gear	一档齿轮 31	1	
8	W024200950	Deep groove ball bearing	深沟球轴承 6208	4	
9	W024500440	A condom	隔套 33	1	
10	W024500450	Outer steel sheet	外钢片	18	
11	W084001190	Hexagon insert	内六角螺塞 R1 / 8	4	
12	W023800450	End Cap	端盖	1	
13	W024500460	Clutch shaft	离合器轴	1	
14	W024500470	Forward clutch housing	前进离合器壳体 48	1	
15	W024200940	Sealing ring	密封环 40	3	
16	W024500480	Piston	活塞	2	
17	W024500490	Rings 8	隔环 8	1	
18	W024500500	Rings 11	隔环 11	2	
19	B070151804	Hole with retaining ring	孔用挡圈 112	2	
20	W024500510	Forward Gear 34	前进齿轮 34	1	
21	B070158003	Hole with retaining ring 80	孔用挡圈 80	2	
22	W024500520	Ring 6	隔环 6	1	
23	W024200140	Ring 6	隔环 6	1	
24	B1204522211	Cylindrical roller bearings	圆柱滚子轴承 NJ 308 E	2	
25	W099000080	Sealing ring	密封环	2	
26	B160120106	O-ring 10.6X2.65	O 型圈 10.6×2.65	2	
27	B160120950	O-ring 95X2.65	O 型圈 95X2.65	1	


倒退离合器总成 REVERSE CLUTCH ASSEMBLY

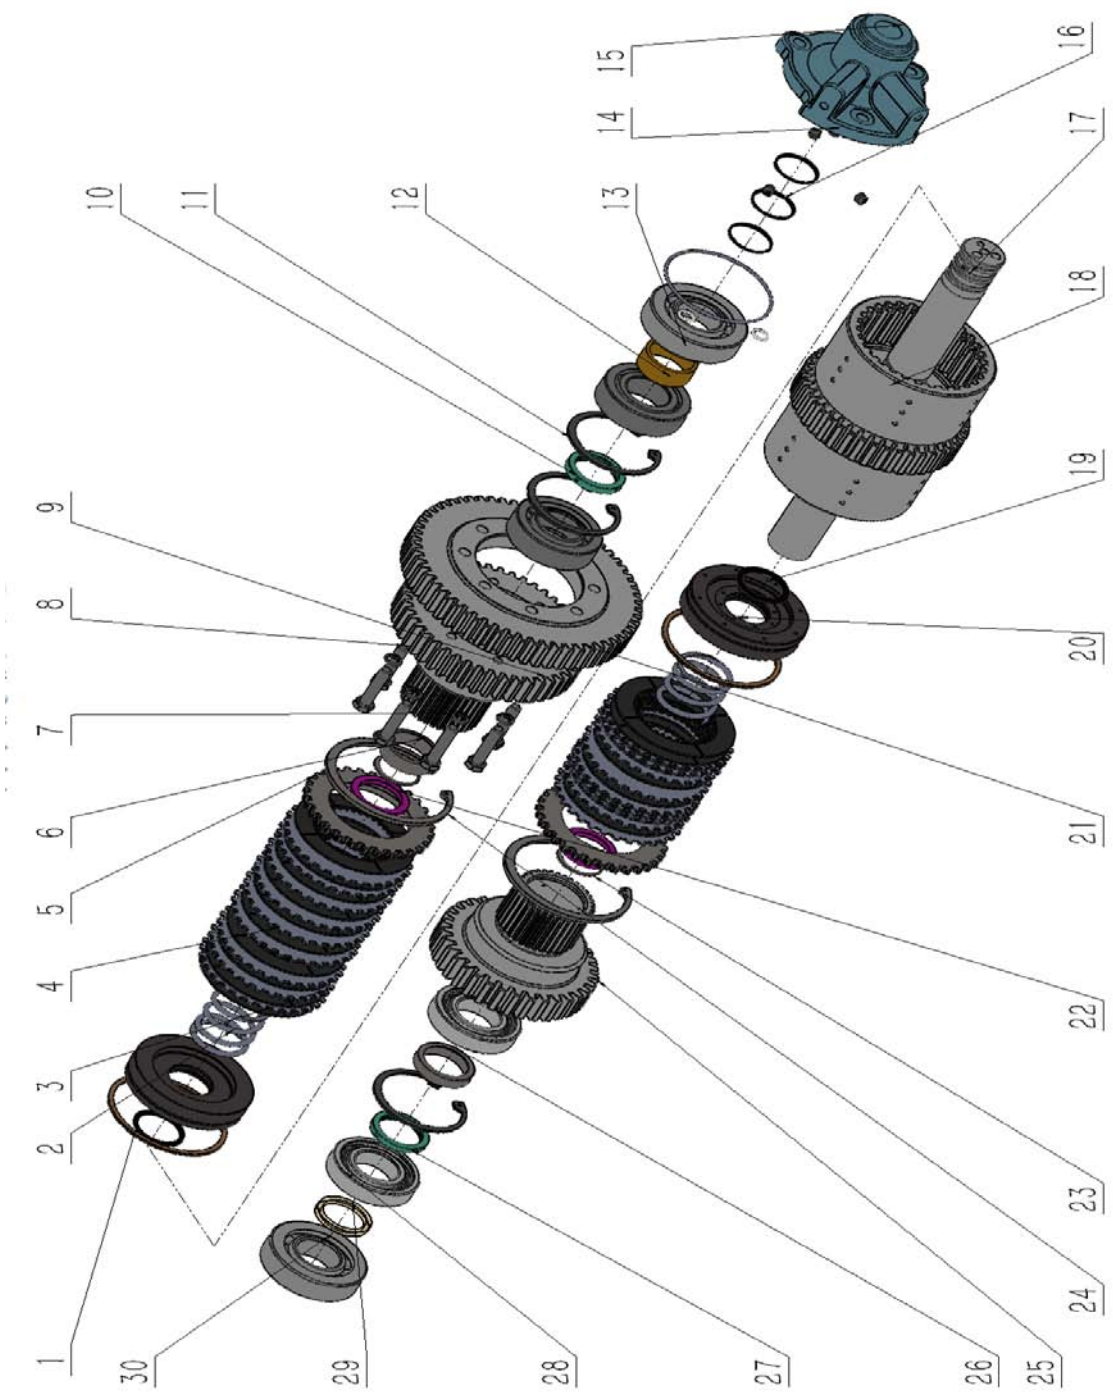

倒退离合器总成 REVERSE CLUTCH ASSEMBLY

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rem ark
1	W099000080	Sealing ring	密封环	2	
2	W024500530	Spring	弹簧	2	
3	W024500540	Outer steel sheet	外钢片	18	
4	W024500550	Inside the paper	内纸片	20	
5	W024500560	Friction plate	摩擦片压板	2	
6	W024500570	Ring 15	隔环 15	1	
7	B060111003	PAD 10	弹垫 10	8	
8	B040911050	Bolt M10 × 50	螺栓 M10×50	8	
9	W024500580	Second gear output gear	二档输出齿轮 47	1	
10	W024500490	Diaphragm 8	隔环 8	1	
11	B070158003	Use retaining ring for Hole	孔用挡圈 80	3	
12	B1204522212	Cylindrical roller bearings	圆柱滚子轴承 NJ2208E	2	
13	W024500590	Compartment 19	隔套 19	1	
14	W084001190	Hexagon Socket R 1/8	内六角螺塞 R1 / 8	4	
15	W023800440	End Cap	端盖	1	
16	W024200940	Sealing ring	密封环 40	3	
17	W024500460	Clutch shaft	离合器轴	1	
18	W024500600	Back clutch housing	倒退离合器壳体 42	1	
19	W024500610	Piston	活塞	2	
20	W024500620	Seal Ring 110	密封环 110	2	
21	W024500630	Sealing ring	二挡齿轮 59	1	
22	W024500640	Spring pressure plate	弹簧压板	2	
23	B070114002	Shaft retaining ring 40	轴用挡圈 40	2	
24	B070151804	Hole with retaining ring 112	孔用挡圈 112	2	
25	W024500650	Forward Gear 34	前进齿轮 34	1	
26	W024500500	Diaphragm 11	隔环 11	1	
27	W024500520	Diaphragm 6	隔环 6	1	
28	W024200950	Deep groove ball bearing	深沟球轴承 6208	2	
29	W024200140	Diaphragm 6	隔环 6	1	
30	B1204522211	Cylindrical roller bearings	圆柱滚子轴承 NJ 308 E	2	
31	B160120950	O-ring 95X2.65	O 型圈 95X2.65	1	
32	B160110107	O-ring 10.6X2.65	O 型圈 10.6×2.65	2	


中间轴总成 INTERMEDIATE SHAFT ASSEMBLY

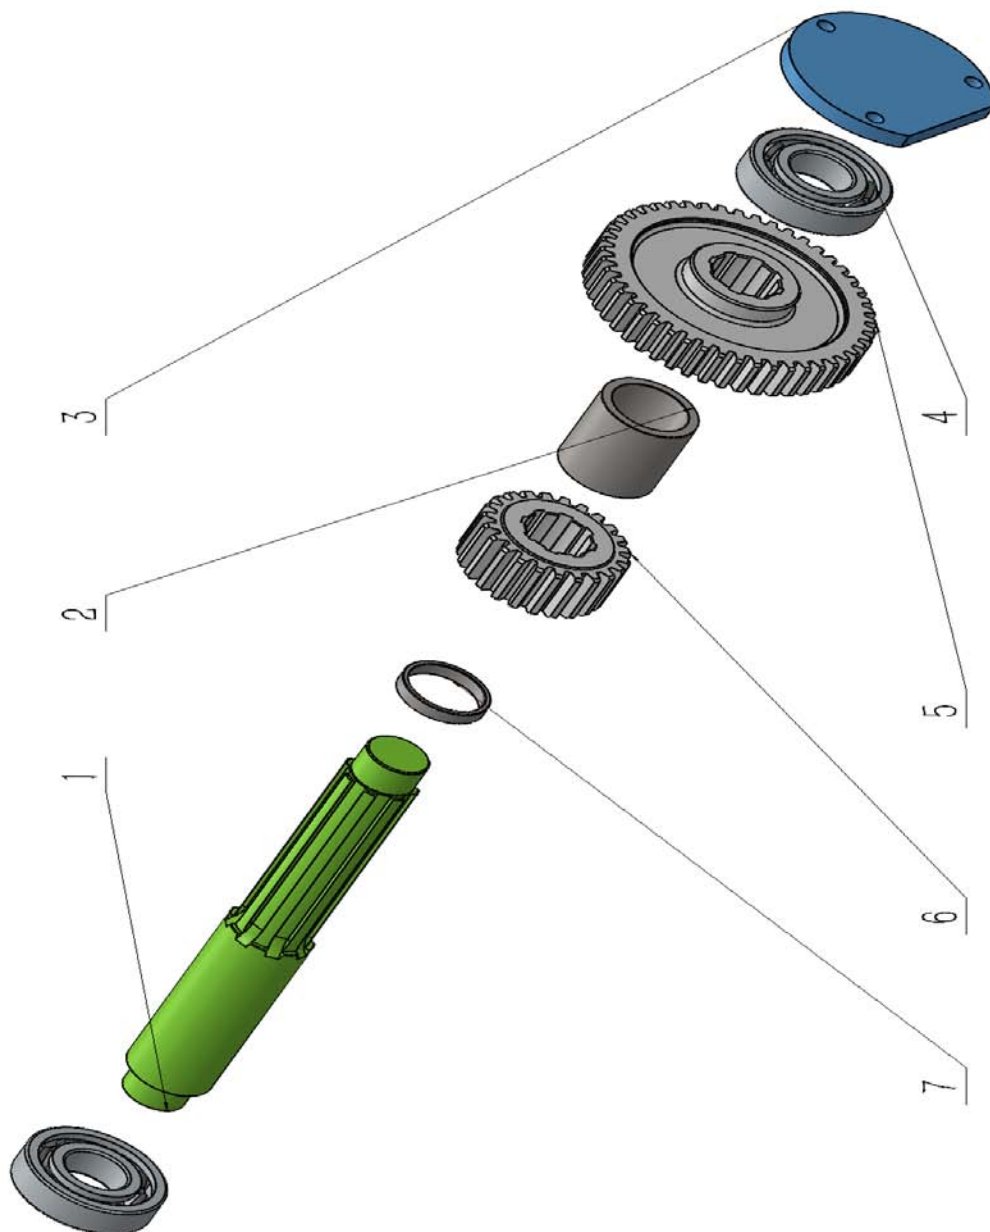

中间轴总成 INTERMEDIATE SHAFT ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W024500660	Middle Axis	中间轴	1	
2	W024500670	A condom	隔套 62.5	1	
3	W024500680	Middle end cap	中间端盖	1	
4	W024100680	Deep groove ball bearing	深沟球轴承 6308	2	
5	W024500690	Middle Gear	中间高档齿轮 48	1	
6	W024500700	Middle Low Gear	中间低档齿轮 25	1	
7	W024500710	A condom	隔套 10	1	


高低速轴总成 HIGH AND LOW SPEED SHAFT ASSEMBLY

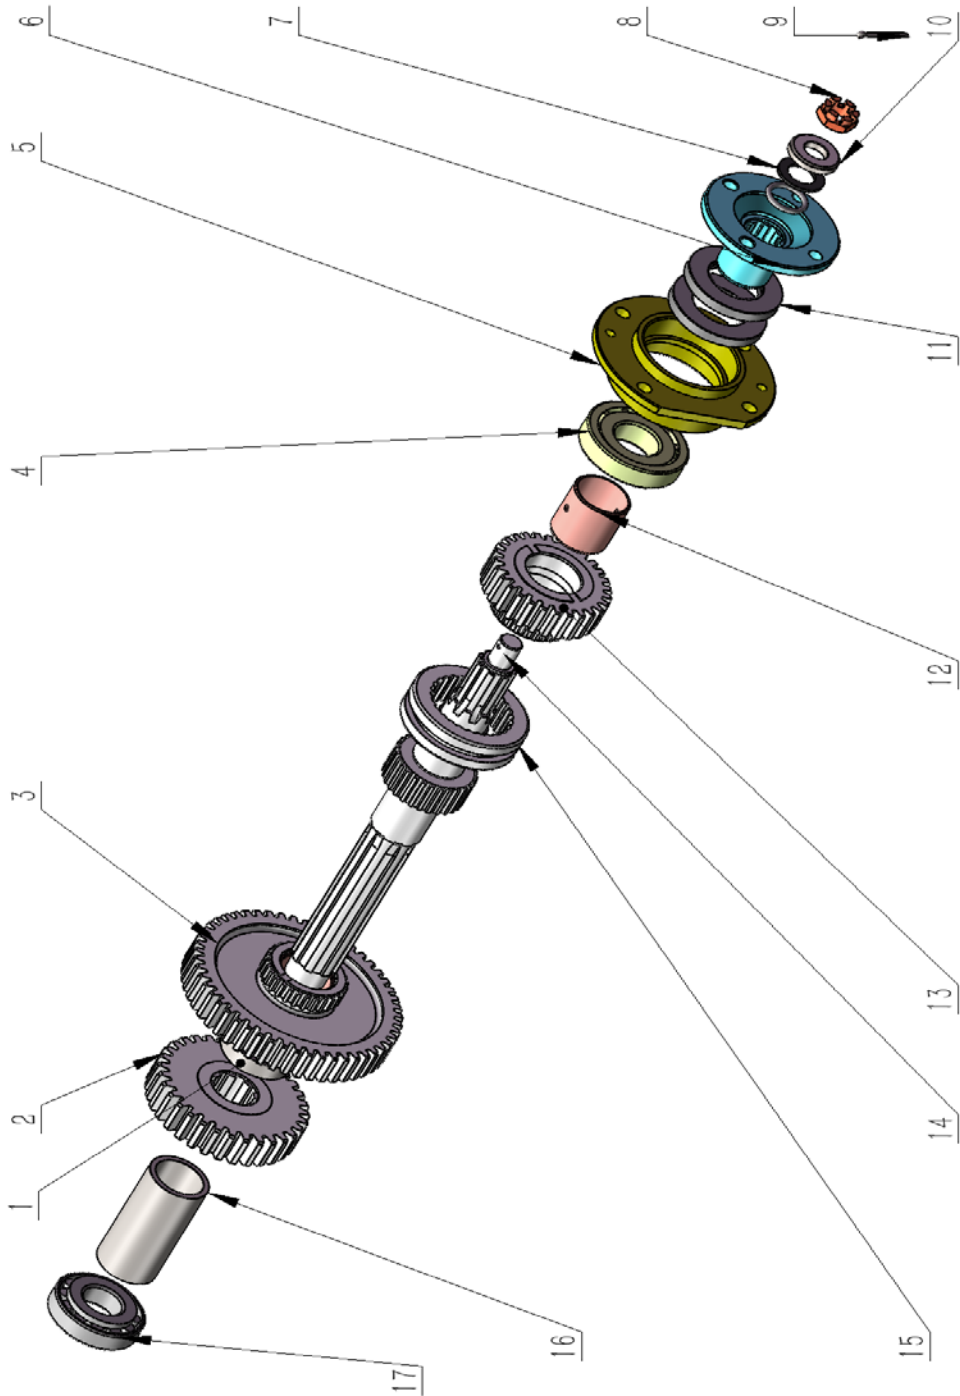

高低速轴总成 HIGH AND LOW SPEED SHAFT ASSEMBLY

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	W024500720	Ring 16	隔环 16	1	
2	W024500730	上输出齿轮 32	上输出齿轮 32	1	
3	W024500740	Output low gear 51	输出低档齿轮 51	1	
4	W084001320	Bearing	轴承 30308	1	
5	W024500750	Output shaft housing	输出轴轴承座	1	
6	W024500760	Output Flange	输出法兰	1	
7	W084000620	Gasket rubber gasket	垫圈胶垫	1	
8	W023800540	Slotted nut (M20 × 1.5)	槽型螺母(M20×1.5)	1	
9	B08010440	Pin 4 × 40	开口销 4×40	1	
10	W023800550	Washer	垫圈	1	
11	W084001460	Skeleton Oil Seal	骨架油封 47*84*10	2	
12	W024500770	Wear-resistant sleeve 50	耐磨轴套 50	2	
13	W024500780	Output high-grade gear 28	输出高档齿轮 28	1	
14	W024500790	On the output shaft	上输出轴	1	
15	W024500800	Joint sleeve	接合套	1	
16	W024500810	Output long spacer 106	输出长隔套 106	1	
17	W024501030	Bearing 30307	轴承 30307	1	


底部离合器总成 BOTTOM CLUTCH ASSEMBLY

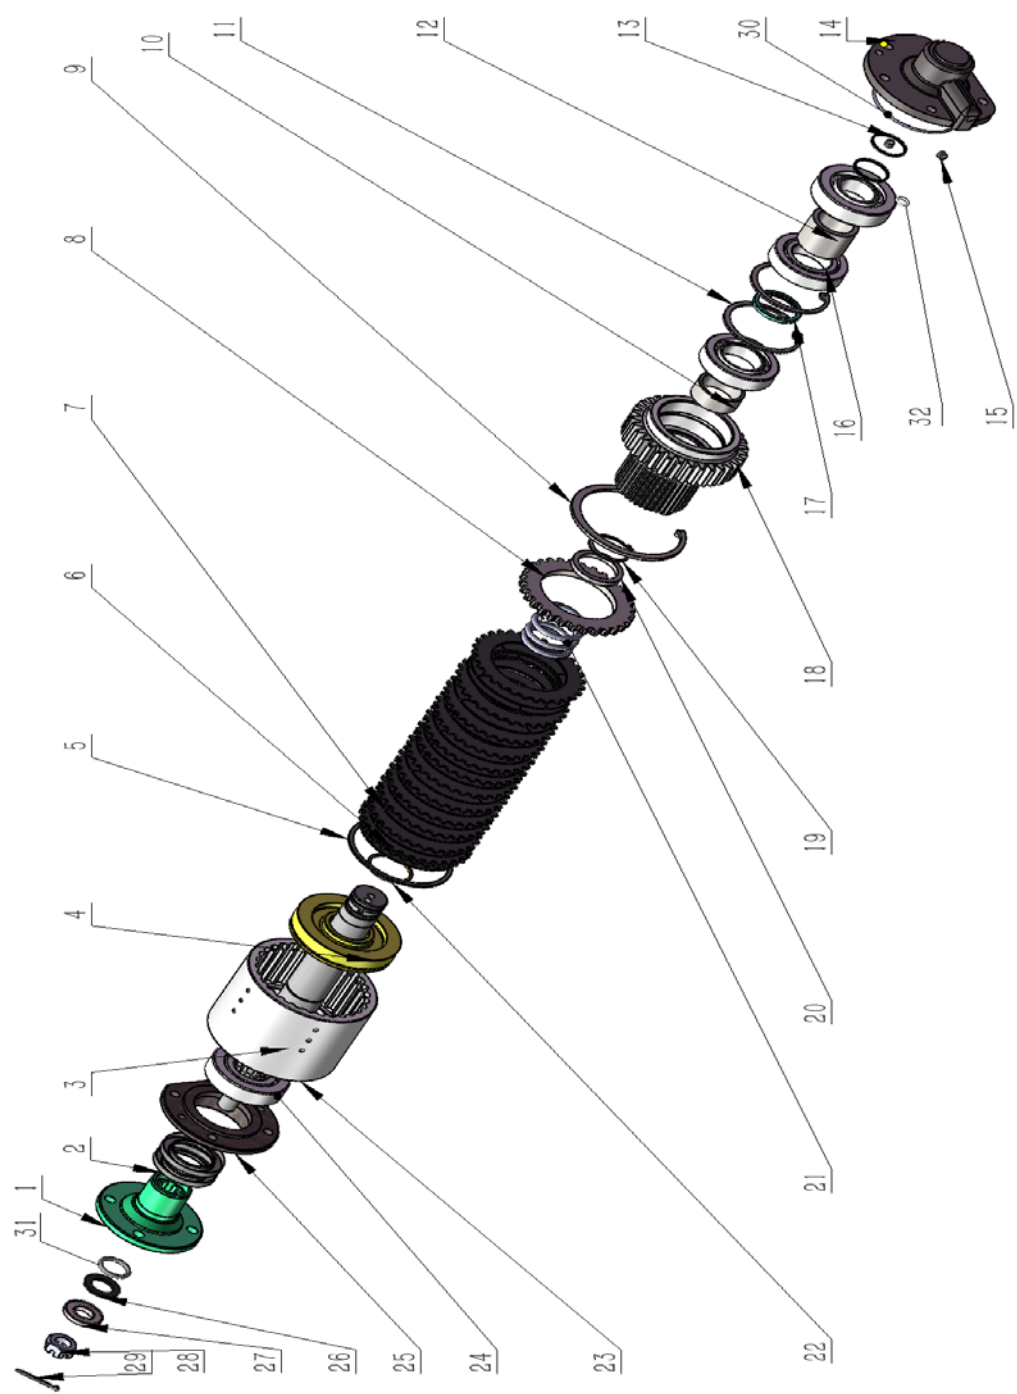

底部离合器总成 BOTTOM CLUTCH ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W024500820	Output Flange	输出法兰	1	
2	W024501040	Oil Seal 47 x 72 x 8	油封 47×72X8	2	
3	W024500830	Bottom output clutch shaft	底输出离合器轴	1	
4	W024500840	Piston	活塞	1	
5	W099000070	Sealing ring	密封环	1	
6	W024500850	Outer steel sheet	外钢片	12	
7	W024500860	Inside the paper	内纸片	13	
8	W024500870	Friction plate	摩擦片压板	1	
9	B070151805	Hole with retaining ring 125	孔用挡圈 125	1	
10	W024500880	A condom	隔套 21.5	1	
11	B070158503	Hole with retaining ring 85	孔用挡圈 85	2	
12	W024500890	A condom	隔套	1	
13	W024200940	Seal ring 40	密封环 40	2	
14	W024500900	Oil Inlet end cap	进油端盖	1	
15	W084000350	Hexagon insert	内六角螺塞 R1 / 8	2	
16	B1204522213	Bearing	轴承 NJ 209 E	2	
17	W024500910	Rings	隔环 5	1	
18	W024500920	Bottom output gear	底输出齿轮 32	1	
19	B070114502	Shaft with elastic retaining ring	轴用弹性挡圈 45	1	
20	W024500930	Spring seat	弹簧座 6	1	
21	W024500940	Return Spring	回位弹簧	1	
22	W024500950	Sealing ring	密封环 45	1	
23	W024500960	Clutch housing	离合器壳体	1	
24	B1204522211	Bearing	轴承 NJ 308 E	2	
25	W024100900	The upper output oil seal seat	上输出油封座	1	
26	W084000620	asket rubber gasket	垫圈胶垫	1	
27	W084001370	Washers	垫圈	1	
28	W024100395	Nuts	螺母	1	
29	B08010440	Pin 4 × 40	开口销 4×40	1	
30	B160120950	O-ring 95X2.65	O 型圈 95X2.65	1	
31	W024101070	O-ring 28X4.5	O 型圈 28×4.5	1	
32	B160120106	O-ring 10.6X2.65	O 型圈 10.6×2.65	1	

拨叉轴总成 FORK SHAFT ASSEMBLY

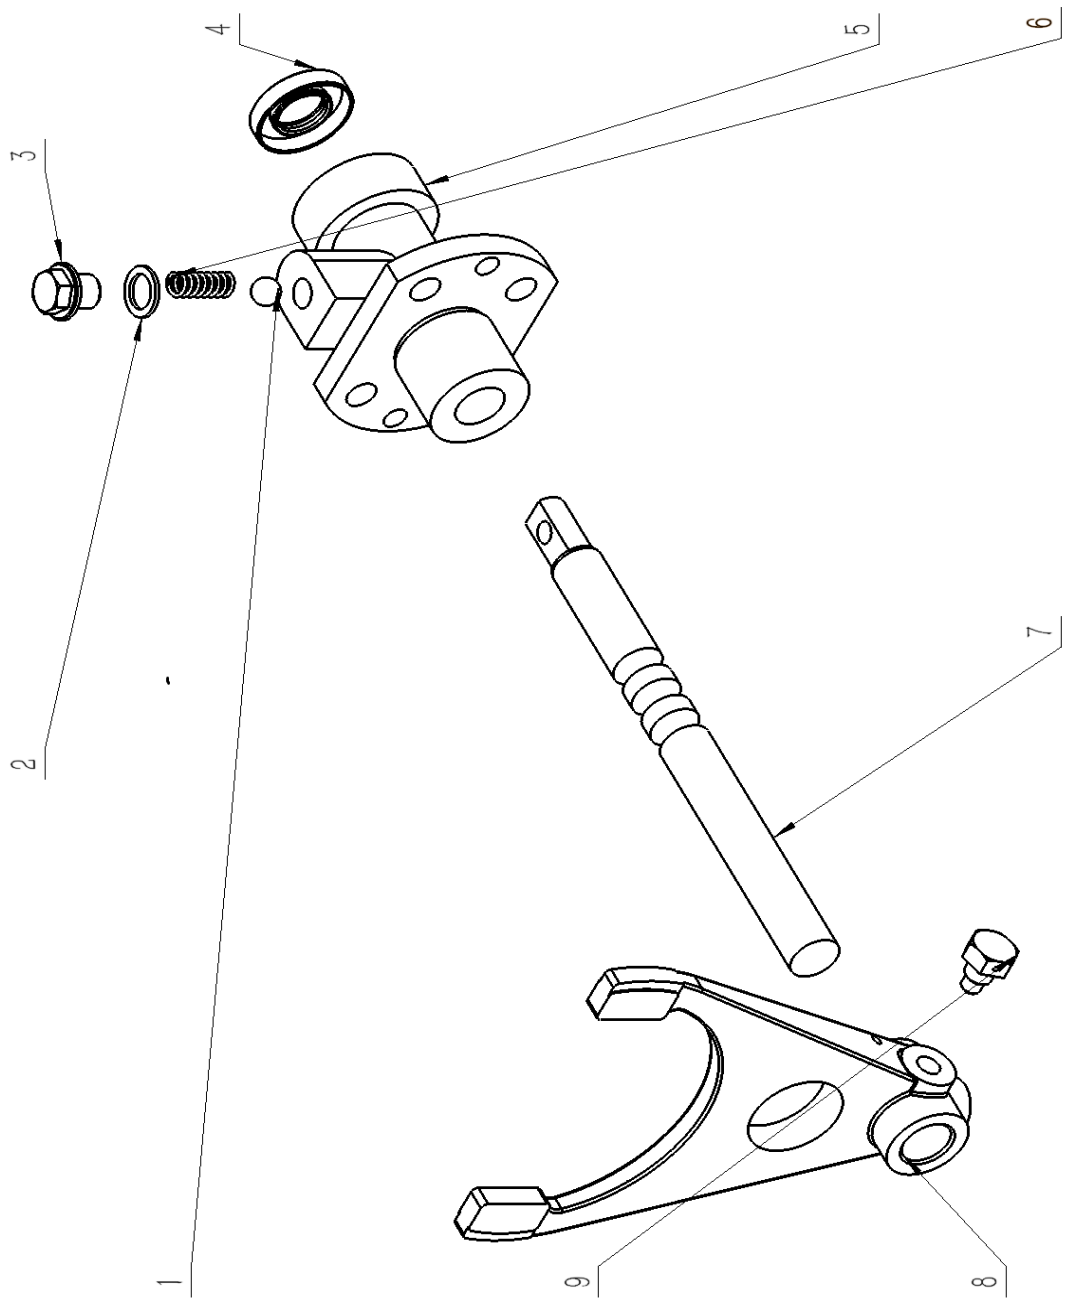


拨叉轴总成 FORK SHAFT ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W031600246	Ball 10	钢球 10	1	
2	B060811203	Combination pad 12	组合垫 12	1	
3	W031600244	Positioning bolt M12	定位螺栓 M12	1	
4	B160420050	Oil Seal 18 x 35 x 10	油封 18×35X10	1	
5	W024500970	Fork-lift bracket	拨叉支架	1	
6	W024500980	Spring	弹簧	1	
7	W024500990	Dialing Fork shaft	拨叉轴	1	
8	W024501000	Pick a fork	拨叉	1	
9	W024501010	Positioning bolts	定位螺栓	1	

前驱动桥总成

FRONT DRIVE AXLE ASS'Y

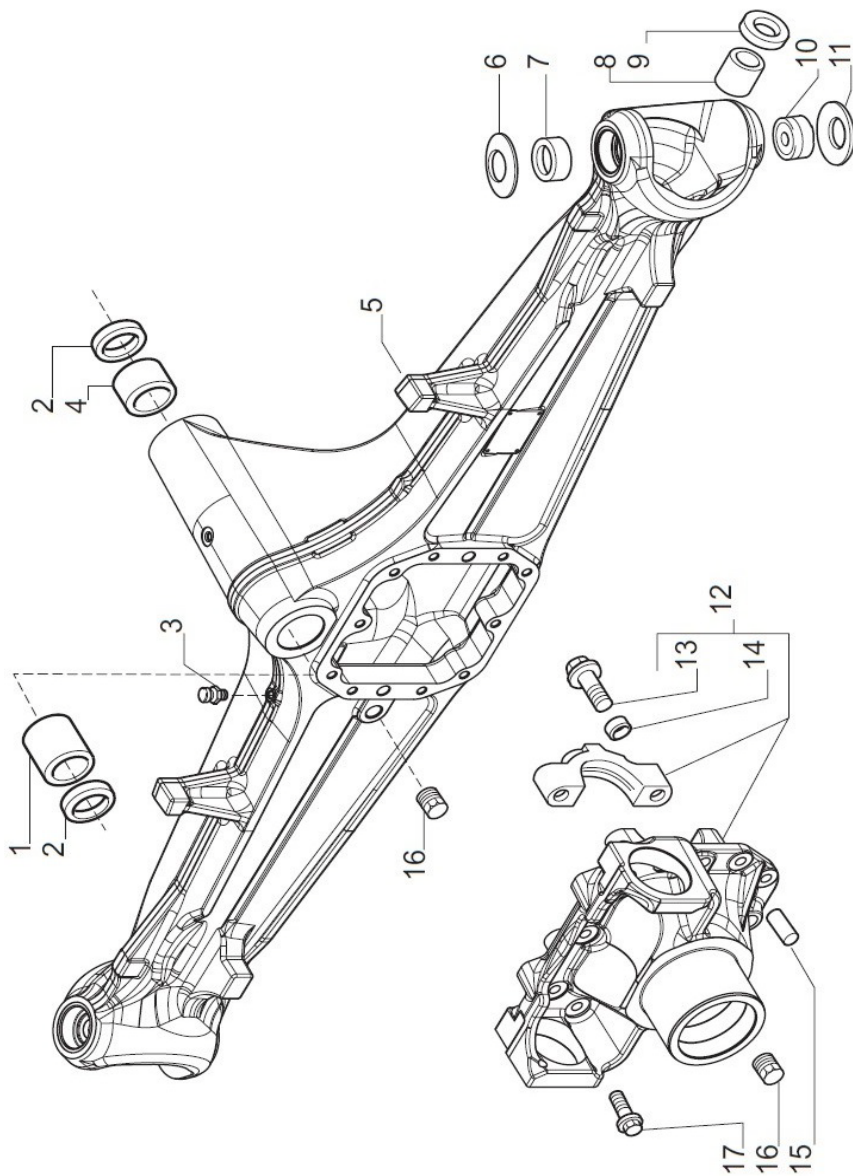


前驱动桥总成

FRONT DRIVE AXLE ASS'Y

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400280	Long shaft sleeve	长轴套	1	
2	W044400290	Dust seal FB 50X60X5	防尘密封圈 FB 50X60X5	2	
3	W084001550	Vent plug assembly	通气塞总成	1	
4	W044400310	Short axle sleeve	短轴套	1	
5	W044400320	axle housing	前桥壳	1	
6	W044400781	Dish spring 71x36x2.5	碟形弹簧	2	
7	W044400340	Knuckle bush	转向节衬套	2	
8	W044400350	Axle housing sleeve	桥壳轴套	2	
9	W044400360	Axle housing oil seal 35X52X16	桥壳油封	2	
10	W044400370	External spherical seat	外球面座	2	
11	W044400781	Dish spring 70x48x1	碟形弹簧	2	
12	W044400390	Main reducer shell components	主减速器壳组件	1	
13	W044400764	Blot M14x75	轴承盖螺栓	4	
14	W044400400	Centering bush	定位套	4	
15	B080611233	Cylindrical pin Φ 15x30	圆柱销 Φ 15x30	1	
16	W044400410	Screw plug NPT1/2	螺塞 NPT1/2	2	
17	W044400765	Blot M12x33	螺栓 M12x33	10	

WZZD75D 前桥转向节及油缸总成

Wzzd75D front axle knuckle and cylinder assembly

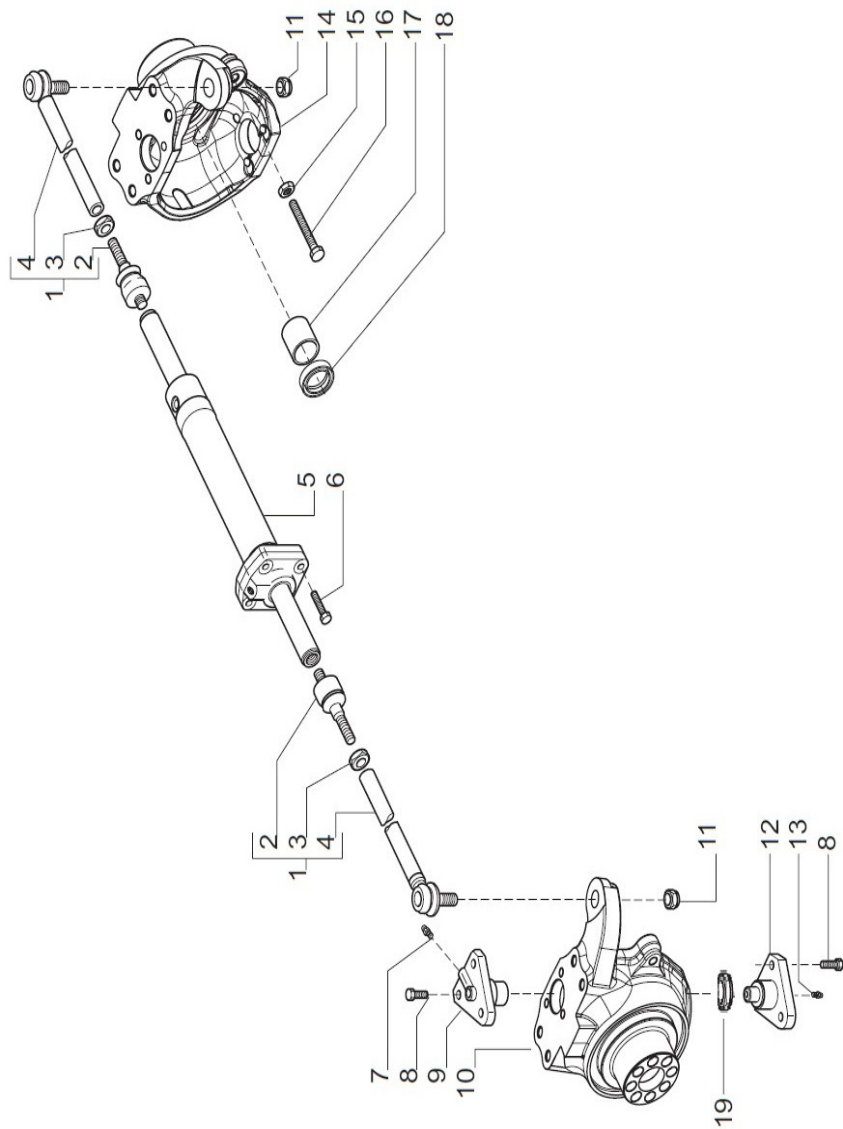


WZZD75D 前桥转向节及油缸总成

Wzzd75D front axle knuckle and cylinder assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400090	Steering rod assembly	转向拉杆总成	2	
2	W044400430	Ball joint assembly	球铰接头总成	2	
3	B051202201	Nut M20X1.5	螺母 M20X1.5	2	
4	W044400440	Steering joint assembly	转向接头总成	2	
5	W044400766	Steering cylinder	转向油缸总成	1	
6	B040711245	Blot M12x45	螺栓 M12x45	4	
7	B150100602	Greaser nipple M6	油杯 M6	2	
8	B040911435	Blot M14x45	螺栓 M14x35	12	
9	W044400460	King pin	上连接座	2	
10	W044400210	Left steering knuckle	左转向节	1	
11	B051202201	Nut M20X1.5	螺母 M20X1.5	2	
12	W044400470	King pin	下连接座	2	
13	B150100602	Greaser nipple M6	油杯 M6	2	
14	W044400783	R steering knuckle	右转向节	1	
15	B050332016	Nut M20	螺母 M16	2	
16	B040911675	Blot M16X75	螺栓 M16x75	2	
17	W044400480	Bush	转向节衬套	2	
18	W044400500	Oil seal ring 45x60x16	油封 45x60x16	2	
19	W044400490	Inner spherical seat	内球面座	2	

WZZD75D 前桥主被动锥齿轮总成

Wzzd75D front axle knuckle and cylinder assembly

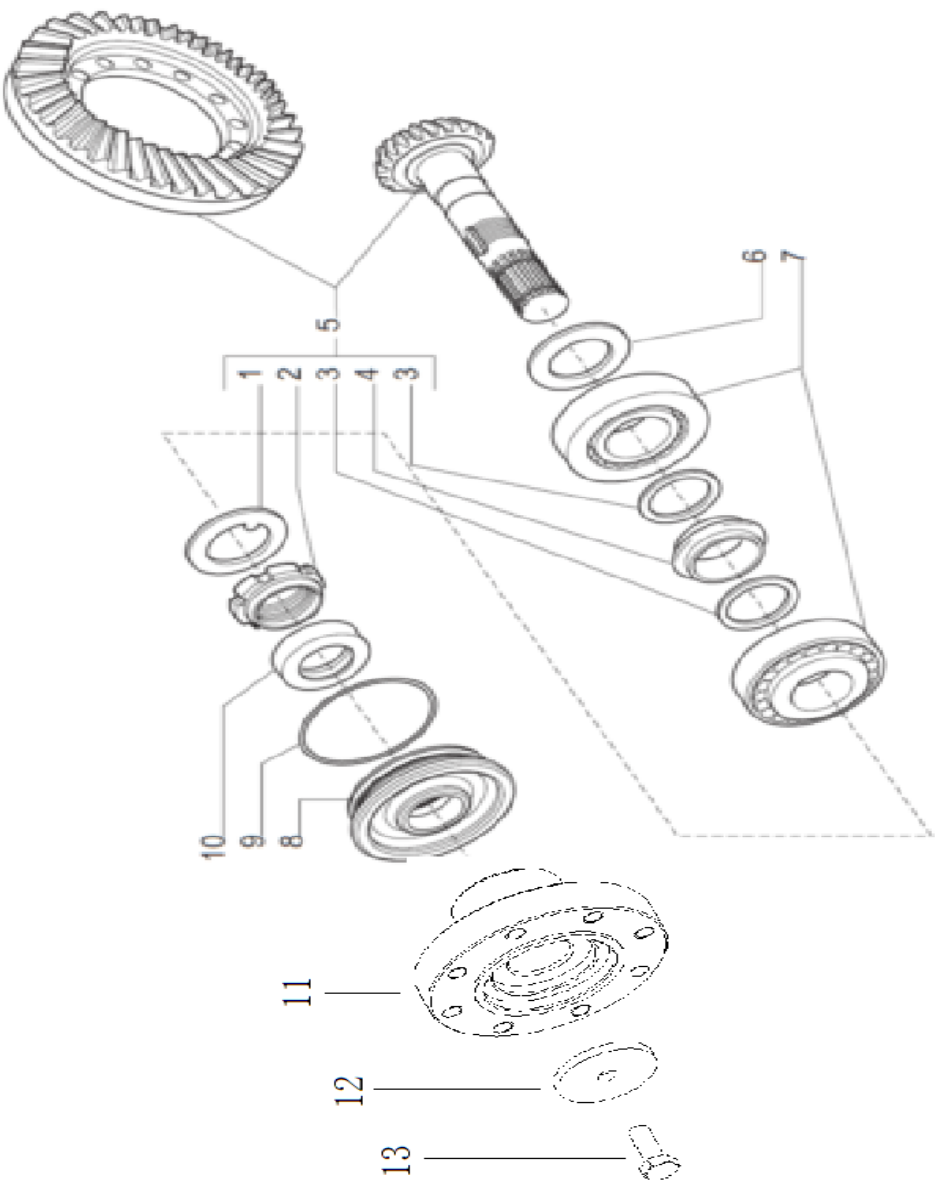


WZZD75D 前桥主被动锥齿轮总成

Wzzd75D front axle knuckle and cylinder assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400510	Lockwasher	主动齿轮锁垫	1	
2	W044400741	Ring nut	角齿锁紧螺母	1	
3	W044400520	Washer	轴承隔套调整垫	2	
4	W044400530	Collapsible spacer	轴承隔套	1	
5.1	W044400230	Driving spiral bevel gear	主动螺旋锥齿轮	1	
5.2	W044400240	Driven spiral bevel gear	从动螺旋锥齿轮	1	
6	W044400540	Washer	主动锥齿轮调整垫	1	
7	W044400784	Tapered roller bearing	圆锥滚子轴承	2	
8	W044400560	Oil seal seat	油封座	1	
9	B160130851	O.ring 85x2.65	O 型圈 85x2.65	1	
10	W044400360	Axle housing oil seal	桥壳油封 35x52x16	1	
11	W044400767	Input flange	输入法兰	1	
12	W044400768	Retaining ring	挡圈	1	
13	B041121025	Bolt M10X1X25	螺栓 M10X1X25	1	

WZZD75D 前桥差速器总成

Wzzd75D front axle differential assembly

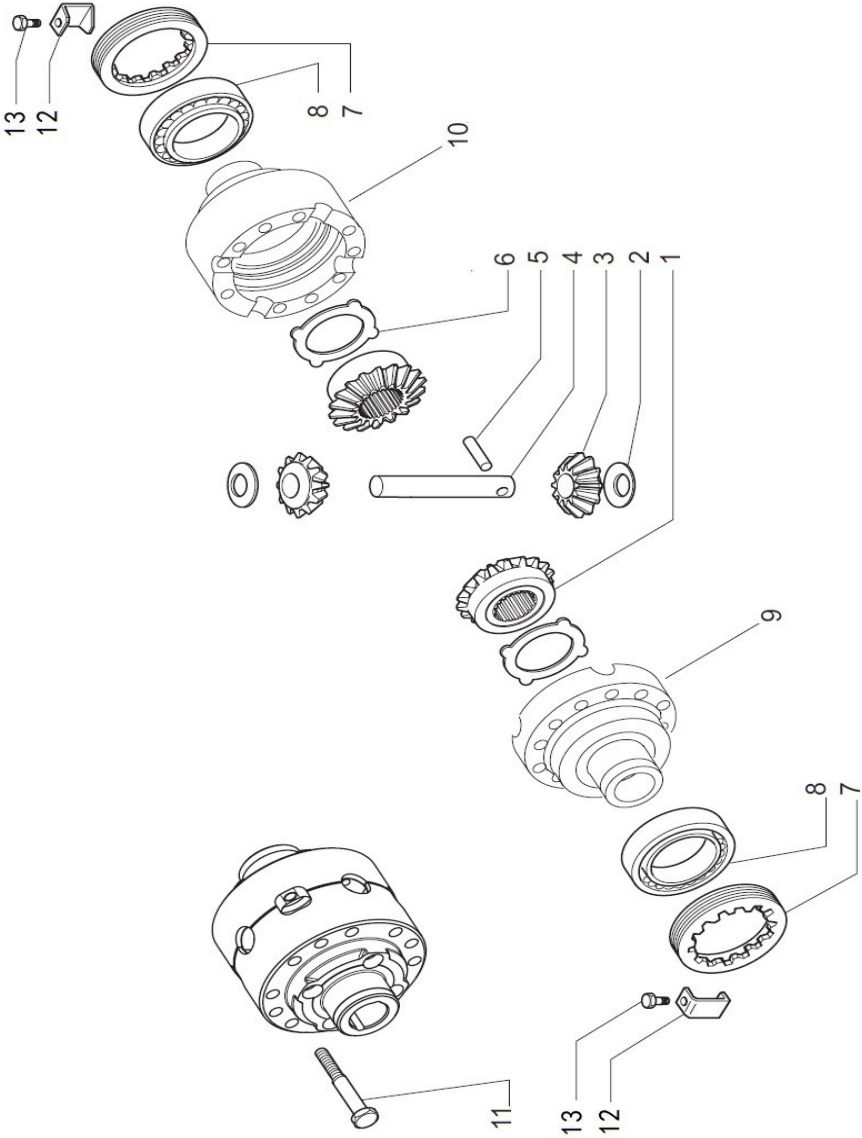


WZZD75D 前桥差速器总成

Wzzd75D front axle differential assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400570	Half shaft gear	半轴齿轮	2	
2	W044400580	Thrust washer	行星齿轮垫	2	
3	W044400590	Planet gear	行星齿轮	2	
4	W044400600	Planetary gear shaft	行星齿轮轴	1	
5	W044400745	Cylindrical pin Φ7x40.5	圆柱销Φ7x40.5	1	
6	W044400610	Halfshaft gear pad	半轴齿轮垫	2	
7	W044400746	Adjusting nut	调整螺母	2	
8	W044400784	Tapered roller bearing	圆锥滚子轴承	2	
9	W044400630	Differential left case	差速器左壳	1	
10	W044400640	Differential right case	差速器右壳	1	
11	B040811075	Bolt M10x75	螺栓 M10x75	12	
12	W044400650	Locking plate	调整螺母锁片	2	
13	B040710610	Bolt M6x10	螺栓 M6x10	2	

WZZD75D 前桥传动轴总成

Wzzd75D front axle transmission shaft assembly

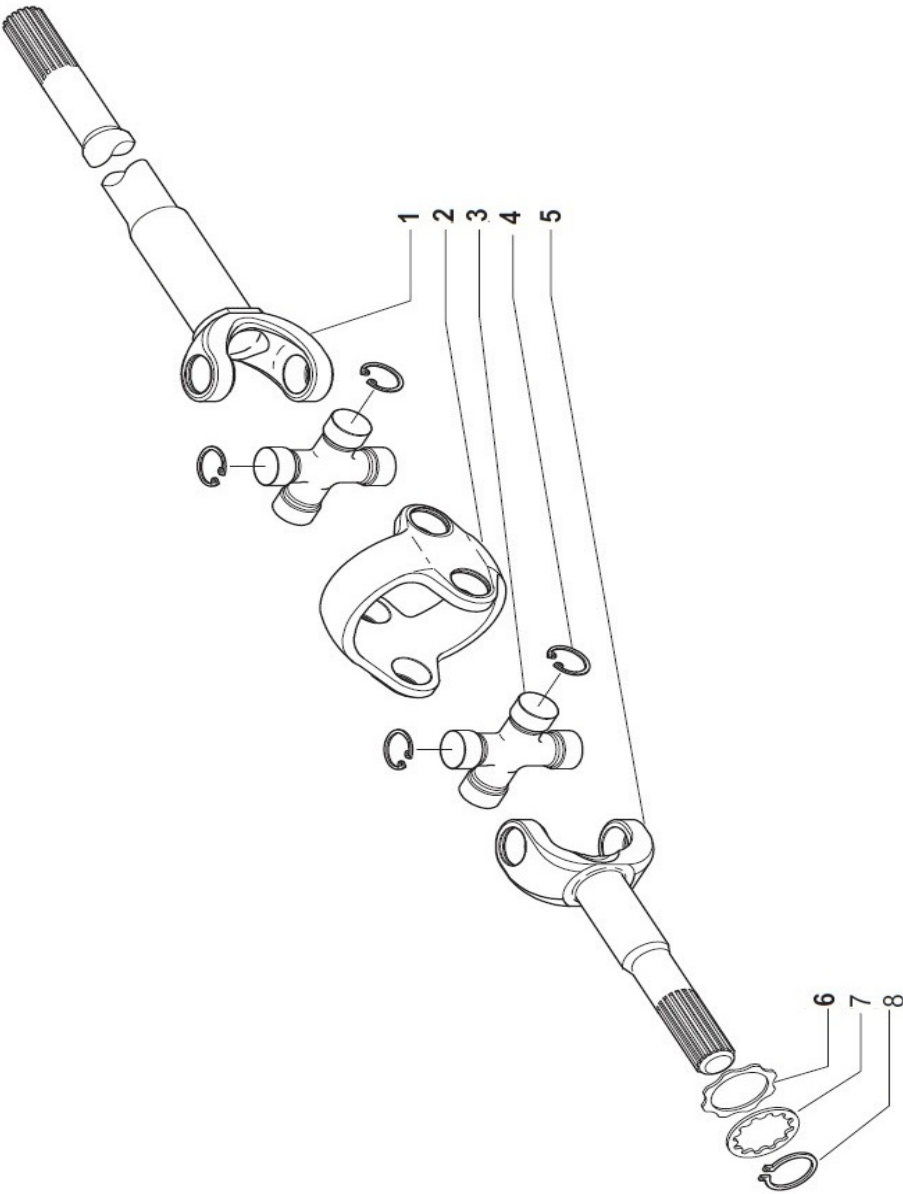


WZZD75D 前桥传动轴总成

Wzzd75D front axle transmission shaft assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400660	Long axis	长半轴	2	
2	W044400180	Central body	双联叉	2	
3	W044400670	Cross shaft	十字轴	4	
4	W044400785	Circlip for hole 30x1.5	孔用弹性挡圈	16	
5	W044400680	Short half shaft	长半轴	2	
6	W044400786	Washer	垫圈	2	
7	W044400787	Washer	调整垫	2	
8	W044400788	Shaft ring 44x2.5	轴用挡圈 44x2.5	2	

WZZD75D 前桥轮边总成

Wzzd75D front axle wheel side assembly

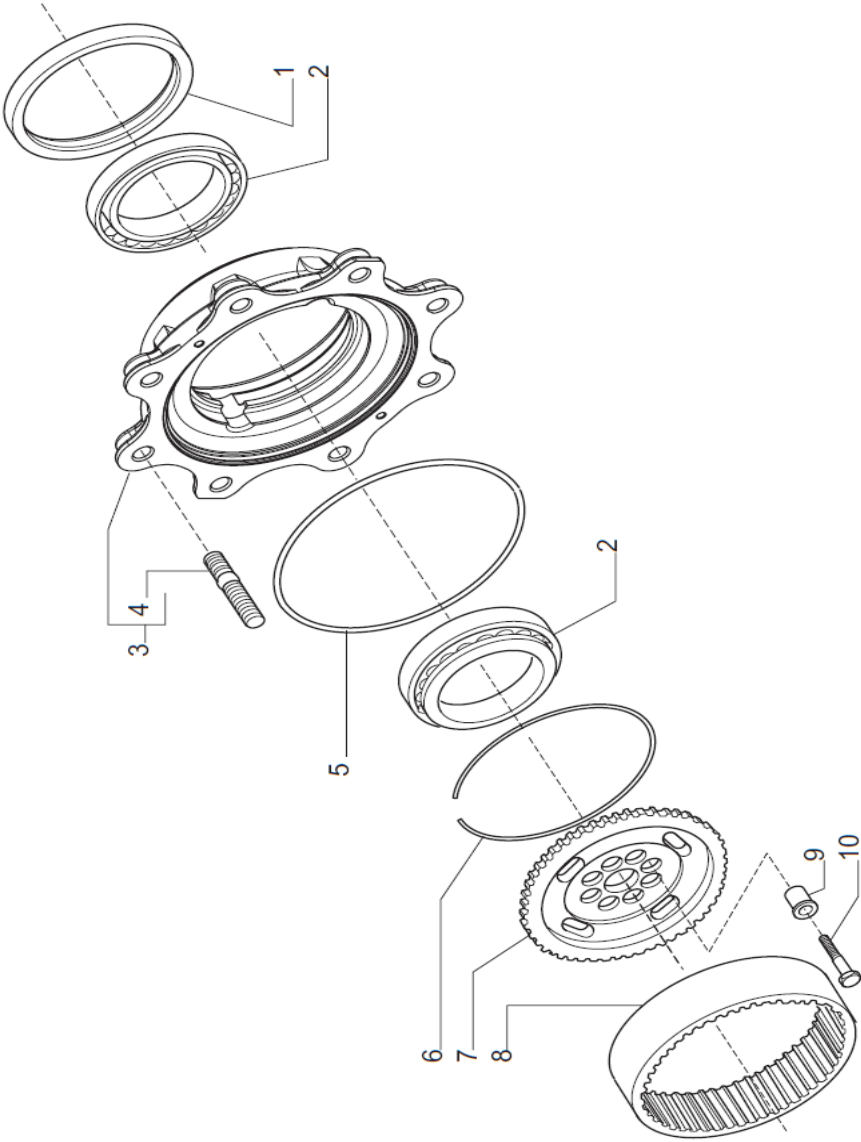


WZZD75D 前桥轮边总成

Wzzd75D front axle wheel side assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400790	Oil seal	RWDR- 箱 式	2	
2			CFW150x180x14.5	4	
3	W044400791	Tapered roller bearing 37431	圆锥滚子轴承	2	
4	W044400150	Hub	轮毂	16	
5	W044400769	Stud	轮辋螺栓	2	
6	W044400789	O-Ring 212x2.65	O 型密封圈	2	
7	W044400748	Spring retaining ring	弹簧挡圈	2	
8	W044400260	Gear ring support	齿圈支撑	2	
9	W044400270	Crown gear	齿圈	16	
10	W044400710	Fixed sleeve	固定套	16	
	B040911245	Bolt M12x45	螺栓 M12x45		

WZZD75 前桥行星架总成

Wzzd75D front axle planetary carrier assembly

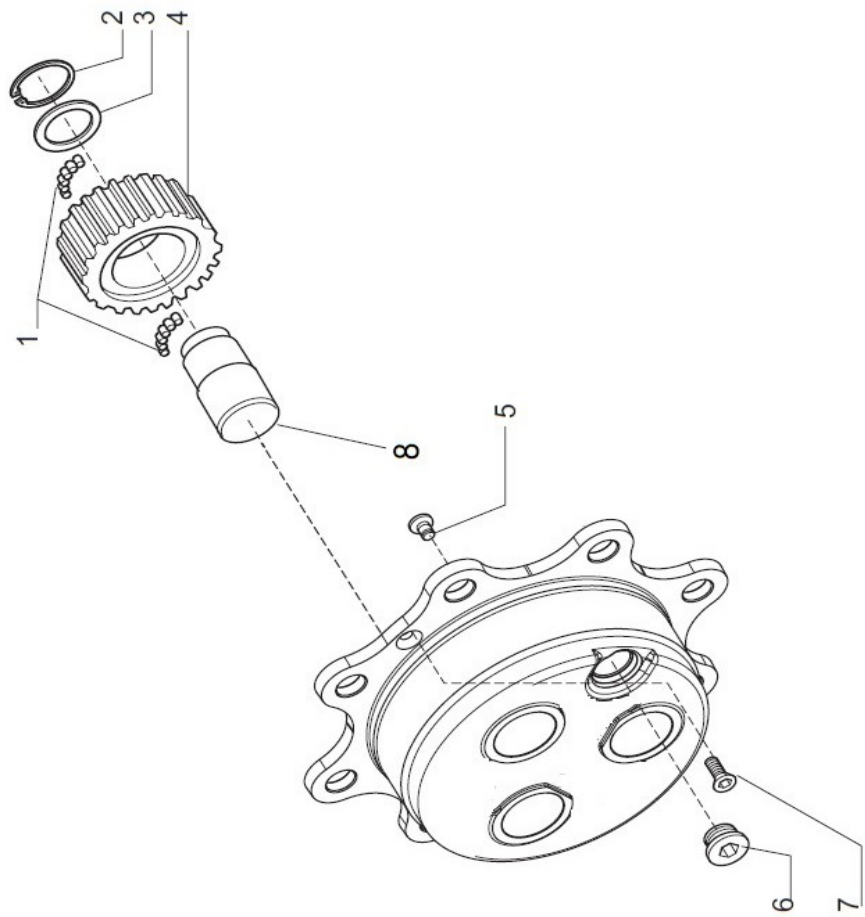


WZZD75 前桥行星架总成

Wzzd75D front axle planetary carrier assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400420	Needle bearings	滚针 5x10	336	
2	W044400751	External Circlips	轴用弹性挡圈	6	
3	W044400450	Planetary gear washer	行星轮垫圈	6	
4	W044400720	Planet gear	行星轮	6	
5	W044400752	Baffle block	挡销	2	
6	W044400730	Screw plug	螺塞总成	2	
7	B010310820	Screw M8x20	螺钉 M8x20	4	
8	W044400740	Planet wheel axle	行星轮轴	6	


后驱动桥安装 Axle Assembly _Rear

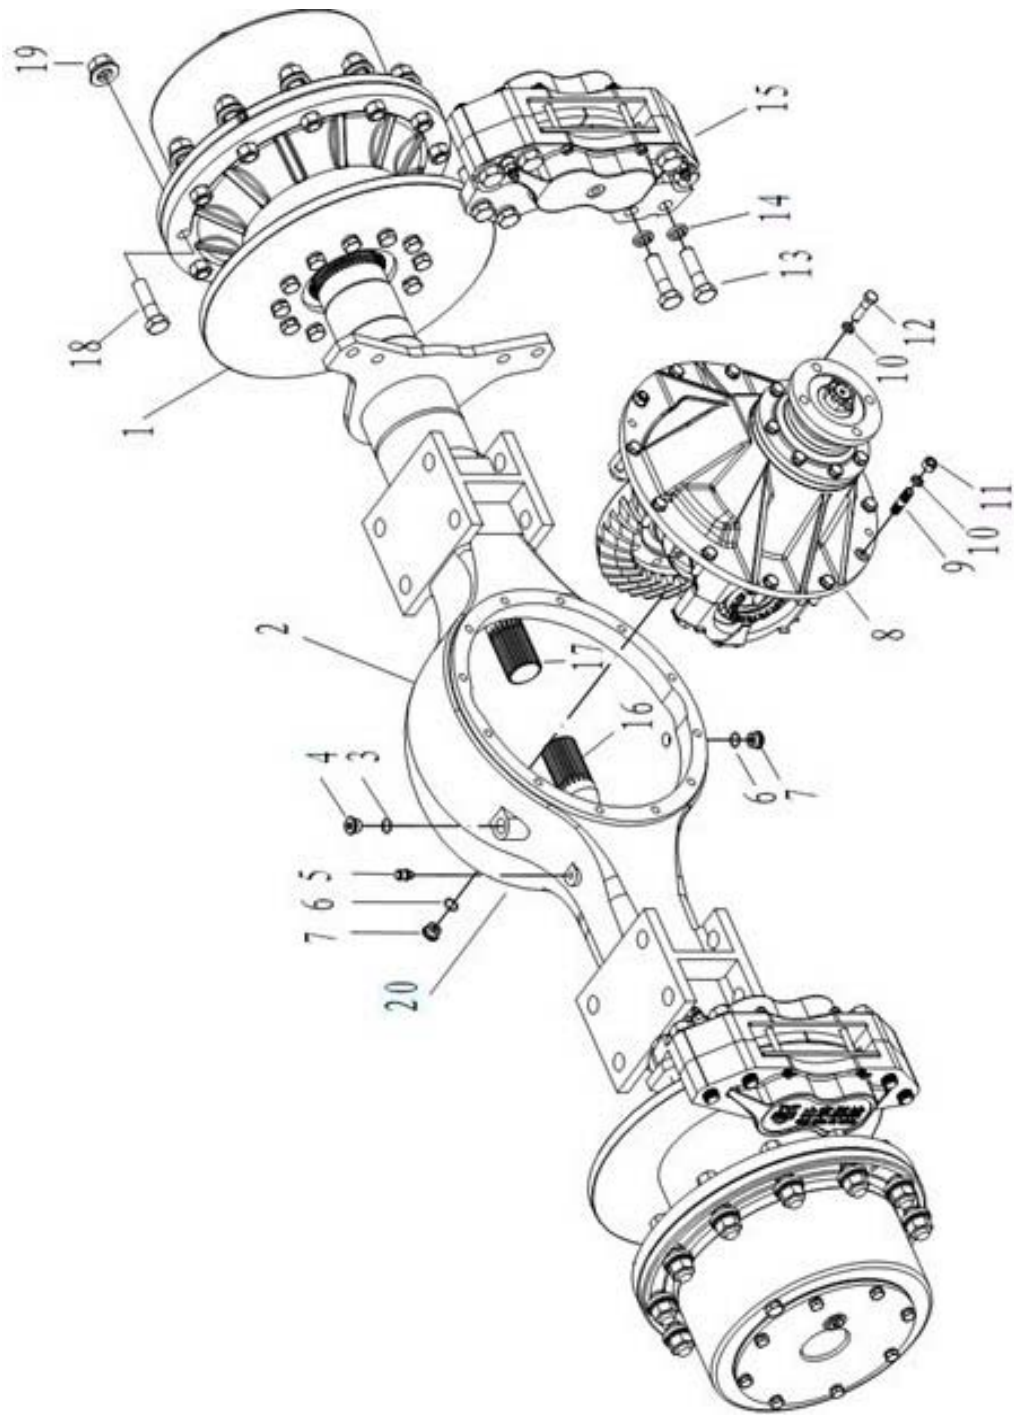

后驱动桥安装 Axle Assembly _Rear

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W041700130	Wheel-end redactor assembly	轮边总成	2	
2	W041700920	Axle housing assembly	桥壳总成	1	
3	W044400770	Sealing ring	密封圈	1	
4	W044400771	Plug screw M24×1.5	螺塞	1	
5	W044400772	Exhaust plug	放气嘴	1	
6	W044400770	Sealing ring	密封圈	2	
7	W044400773	Plug screw M20×1.5	螺塞	2	
8	W041700160	Final drive assembly	主减速器总成	1	
9	W044400775	Double end stuWasher 12	双头螺柱	2	
10	W041701020	Washer	垫圈	12	
11	B050332012	Nut M12	螺母	2	
12	B040961235	Bolt M12×35-10.9	螺栓	10	
13	W044400774	Bolt M20×1.5×56	螺栓	8	
14	B061022004	Washer 20	垫圈	8	
15	W041700001	Disc brake assembly	盘式制动器总成	2	
16	W041700003	long axle shaft	长半轴	1	
17	W041700200	short axle shaf	短半轴	1	
18	W041700010	Rim bolt	轮辋螺栓	24	
19	W041700002	Rim nut	轮辋螺母	24	


桥壳总成 Bridge housing assembly

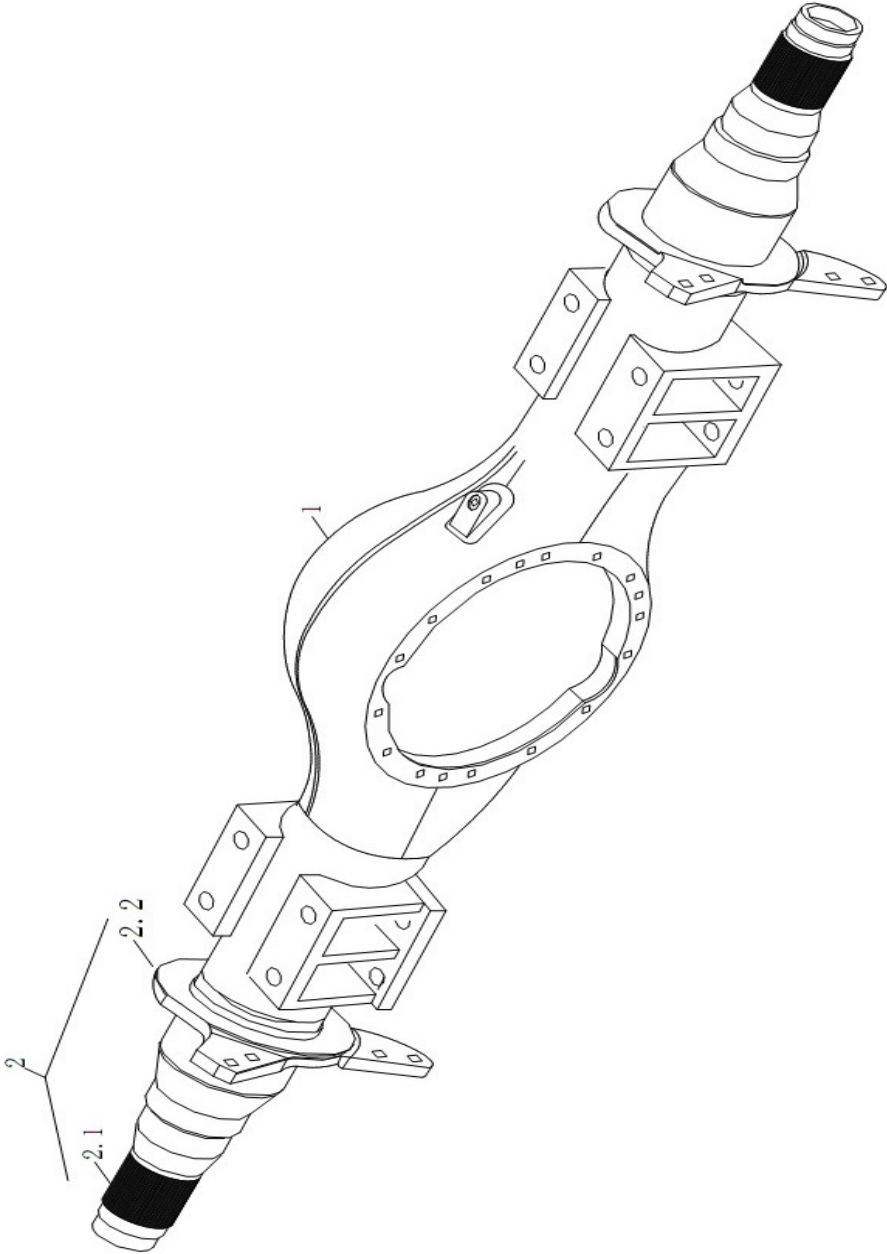

桥壳总成 Bridge housing assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W041700860	Housing	桥壳	1	
2	W041700210	Shaft tube assembly	轴管总成	2	
2.1	W041700220	Shaft tube	轴管	2	
2.2	W041700230	Brake carrier	制动钳支架	2	


轮边 Reduction Assembly

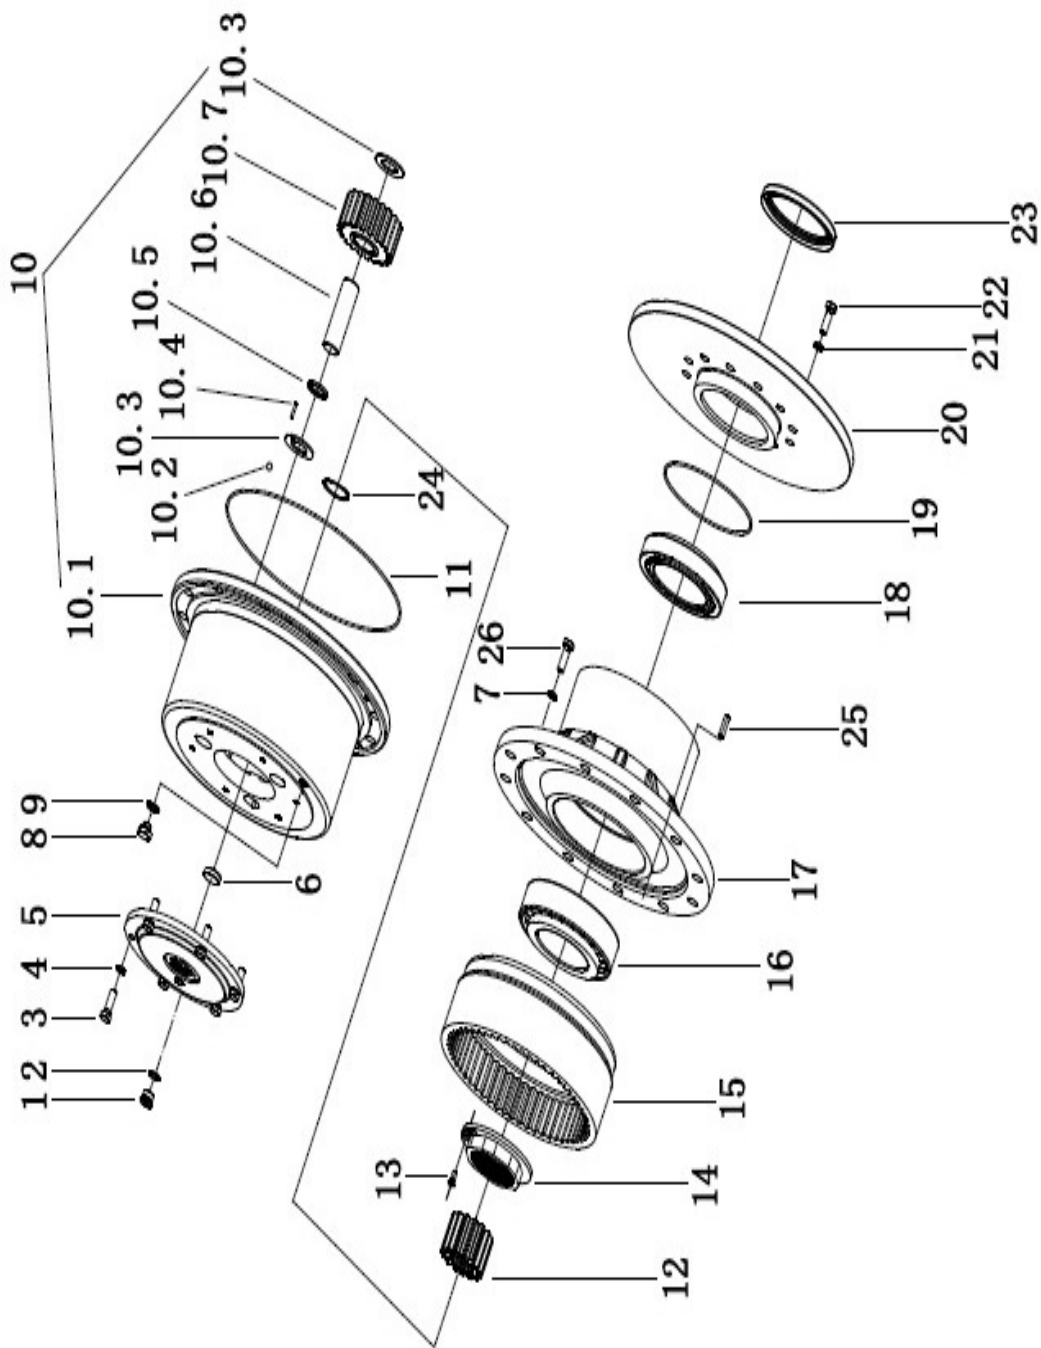

轮边 Reduction Assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W044400773	Plug screw M20×1.5	螺塞	1	
2	W044400770	Sealing ring	密封圈	1	
3	B041111235	Bolt M12×1.5	螺栓	6	
4	B061621225	Washer 12	垫圈	6	
5	W041700240	Cover	端盖	1	
6	W041700250	Retaining plate	挡块	1	
7	B060131203	Washer 12	垫圈	3	
8	W041701030	Plug screw M16×1.5	螺塞	1	
9	W044400770	Sealing ring	密封圈	1	
10	W041700830	Planet carrier assembly	行星架总成	1	
10.1		Planet carrier	行星架	1	
10.2	W041700850	Steel ball Φ6	钢球	3	
10.3	W041700009	Washer	行星轮垫片	6	
10.4	W041700006	Needle roller 4×23.8	滚针	168	
10.5	W041700300	Spacer	隔套	3	
10.6	W041700005	Planet pin	行星轮轴	3	
10.7	W041700320	Planet gear	行星轮	3	
11	W044400776	O-ring	O 型密封圈	1	
12	W041700330	Sun gear	太阳轮	1	
13	B010310821	Screw M8×20	内六角沉头螺钉	2	
14	W044400777	Locknut	锁紧螺母	1	
15	W041700350	Ring gear	内齿轮	1	
16	W044300150	Bearing 32221	轴承	1	
17	W041700800	Hub	轮毂	1	
18	W044300160	Bearing 32022	轴承	1	
19	W044400780	O-ring	O 型密封圈	1	
20	W041700050	Braking disc	制动盘	1	
21	B060411603	Washer 16	垫圈	12	
22	B040911645	Bolt M16×45	螺栓	12	
23	B160420011	Oil seal FB 120×150×24	油封	1	
24	B070114802	Criclip 48	挡圈	1	
25	B080611232	Straight pin 12×32	圆柱销	2	
26	B0409A1240	Bolt M12×40	螺栓	3	


主减速器总成 Main reducer assembly

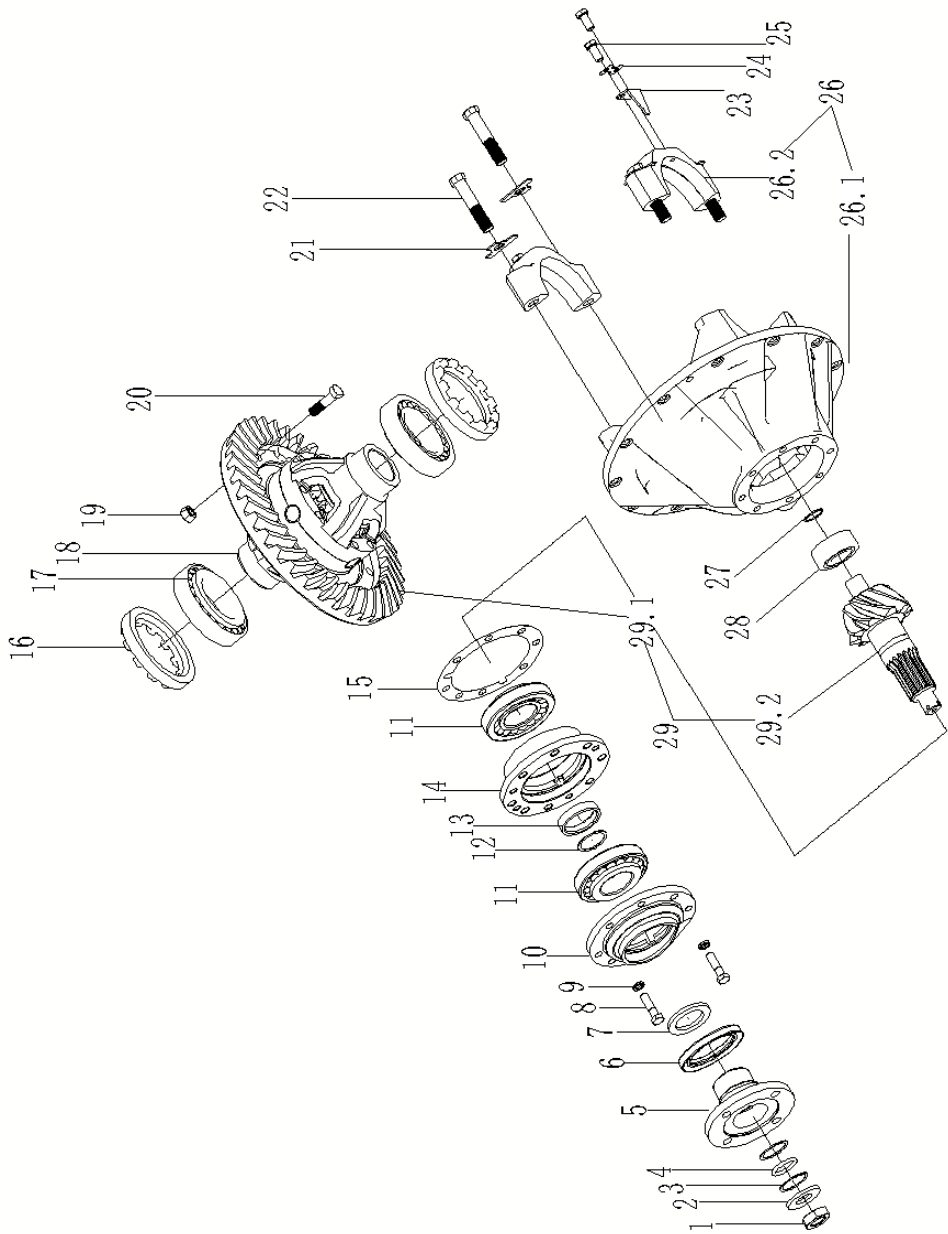

主减速器总成 Main reducer assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B051202720	Nut M27×1.5-7H	螺母	1	
2	W041700370	Washer	垫圈	1	
3	W041700380	Baffle plate	O 型挡板	2	
4	B160130402	O-ring 40×5.3	O 型密封圈	1	
5	W041700013	Input flange weld	输入法兰组件	1	
6	B1602410159	Oil seal FB62×93×20	油封	1	
7	W041700290	Thrust washer	止推垫圈	1	
8	B040961245	Bolt M12×45-10.9	螺栓	8	
9	B061431201	Washer12	垫圈	8	
10	W041700410	Oil seal seat	油封座	1	
11	B120406534	Bering 31311	轴承	2	
12	W041700950	Adjust shim	调整垫片	一组 set	
13	W041700440	Spacer	隔套	1	
14	W041700450	Bearing seat	轴承座	1	
15	W041700960	Adjust shim	调整垫片	一组 set	
16	W041700970	Adjust nut	调整螺母	2	
17	W044400778	Bearing 32216	轴承	2	
18	W041700190	Differential assembly	差速器总成	1	
19	B050411412	Nut M14×1.5	螺母	12	
20	W090800260	Bolt M14×1.5	螺栓	12	
21	B060821801	Washer 18	垫圈	4	
22	W044400779	Bolt M18×90	螺栓	4	
23	W041700560	Lock plate	锁紧片	2	
24	W041700570	Lock plate	锁紧片	2	
25	B040910812	Bolt M8×12	螺栓	4	
26	W041700520	Final drive housing assy.	主减速器壳组件	1	
26.1	W041700530	Final drive housing	主减速器壳	1	
26.2	W041700540	Differential bearing cap	差速器轴承盖	2	
27	B070113002	Circlip 30	挡圈	1	
28	W041700980	Bearing NUP2306E	轴承	1	
29	W041700470	Spiral bevel gear pair	主被动齿轮副	1	
29.1	W041700480	Driven bevel gear	从动螺旋锥齿轮	1	
29.2	W041700500	Drive bevel gear	主动螺旋锥齿轮	1	


差速器总成 Differential Assembly

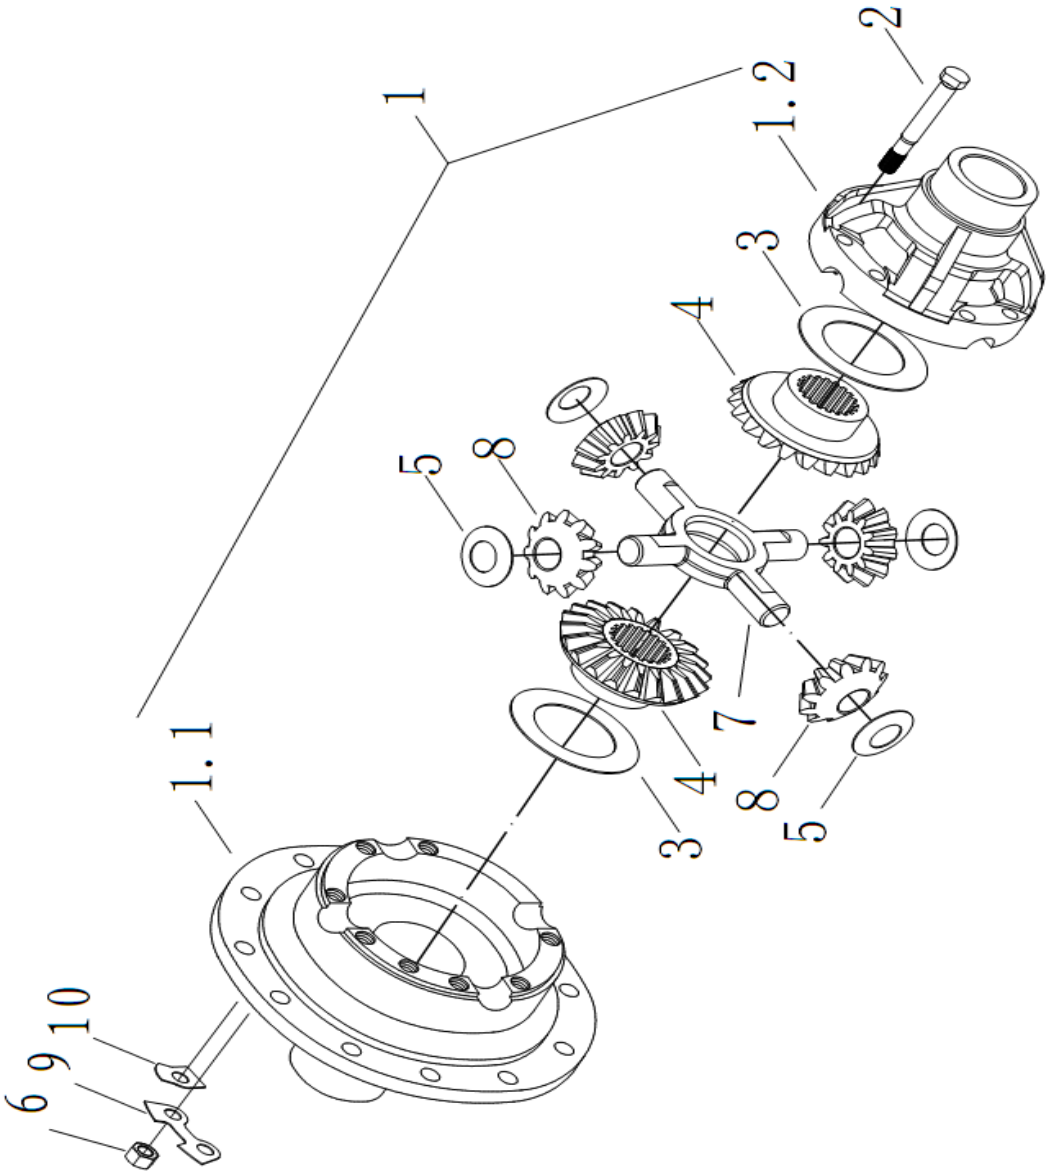

差速器总成 Differential Assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W041700580	Differential case assy.	差速器壳体组件	1	
1.1	W041700590	Left differential case	差速器左壳	1	
1.2	W041700600	Right differential case	差速器右壳	1	
2	W090800260	Bolt M14×1.5	螺栓	8	
3	W041700610	Gear washer	半轴齿轮垫	2	
4	W041700620	Axle shaft gear	半轴齿轮	2	
5	W041700630	Gear washer	行星齿轮垫	4	
6	B050411412	Nut M14×1.5	螺母	8	
7	W041700100	Cross pin	十字轴	1	
8	W041700640	Planet bevel gear	行星齿轮	4	
9	W041700650	Lock plate	锁紧片	2	
10	W041700660	Lock plate	锁紧片	4	


制动器总成 Brake Assembly

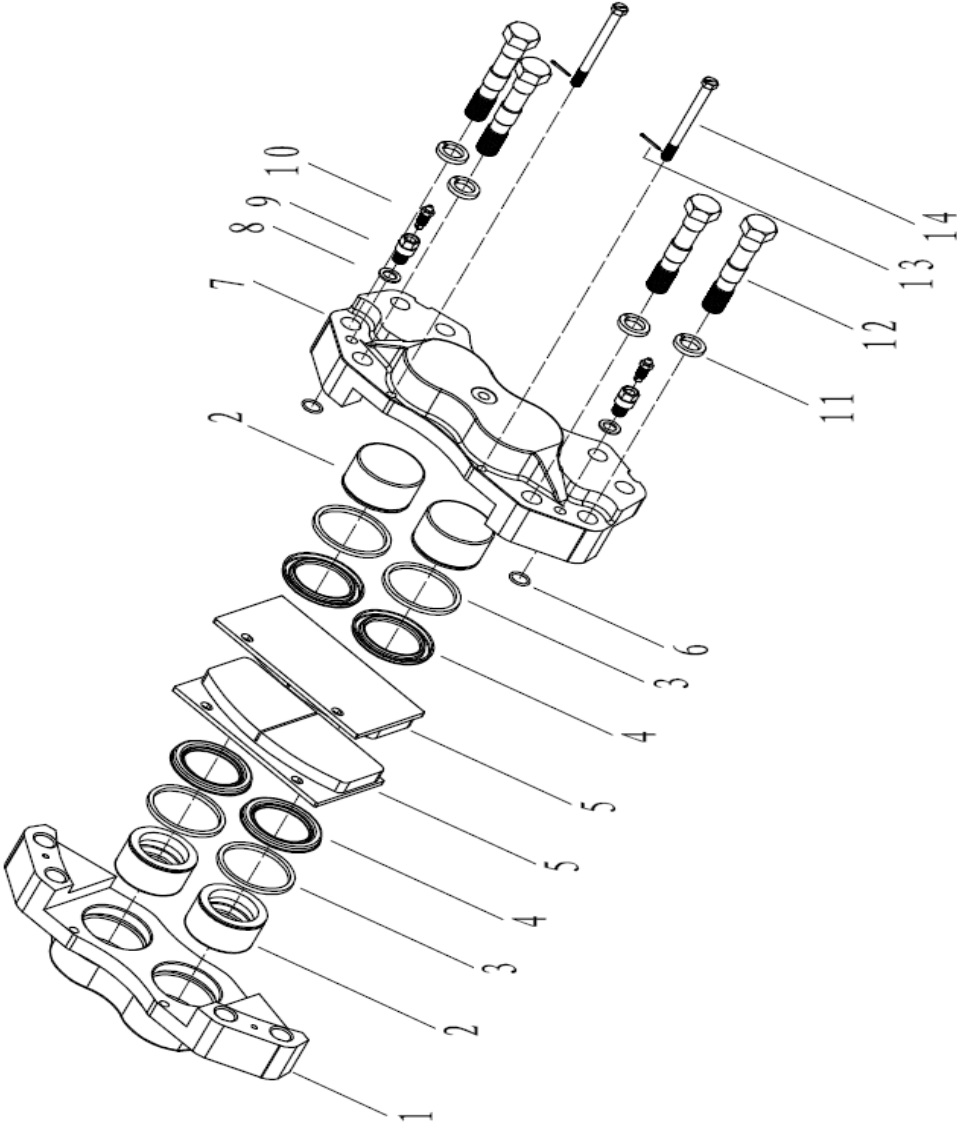

制动器总成 Brake Assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W041700670	Outside brake	外钳	1	
2	W041700011	Piston	活塞	4	
3	W041700680	Square seal ring	矩形密封圈	4	
4	W041700040	Dust shroud	防尘罩	4	
5	W041700030	Braking plate	制动片	2	
6	W084001730	O-ring 20×2.4	O 型圈 20×2.4	2	
7	W041700690	Inside brake	内钳	1	
8	W041700990	Washer	垫圈	2	
9	W041701000	Joint	接头	2	
10	W041701010	Exhaust plug	放气嘴	2	
11	B060112005	Washer 20	垫圈 20	4	
12	W041701040	Bolt	螺栓	4	
13	B080220220	Split pin 2×20	开口销 2×20	2	
14	W041700012	Bolt pin	螺栓销	2	


前车轮总成 FRONT WHEEL ASSEMBLY

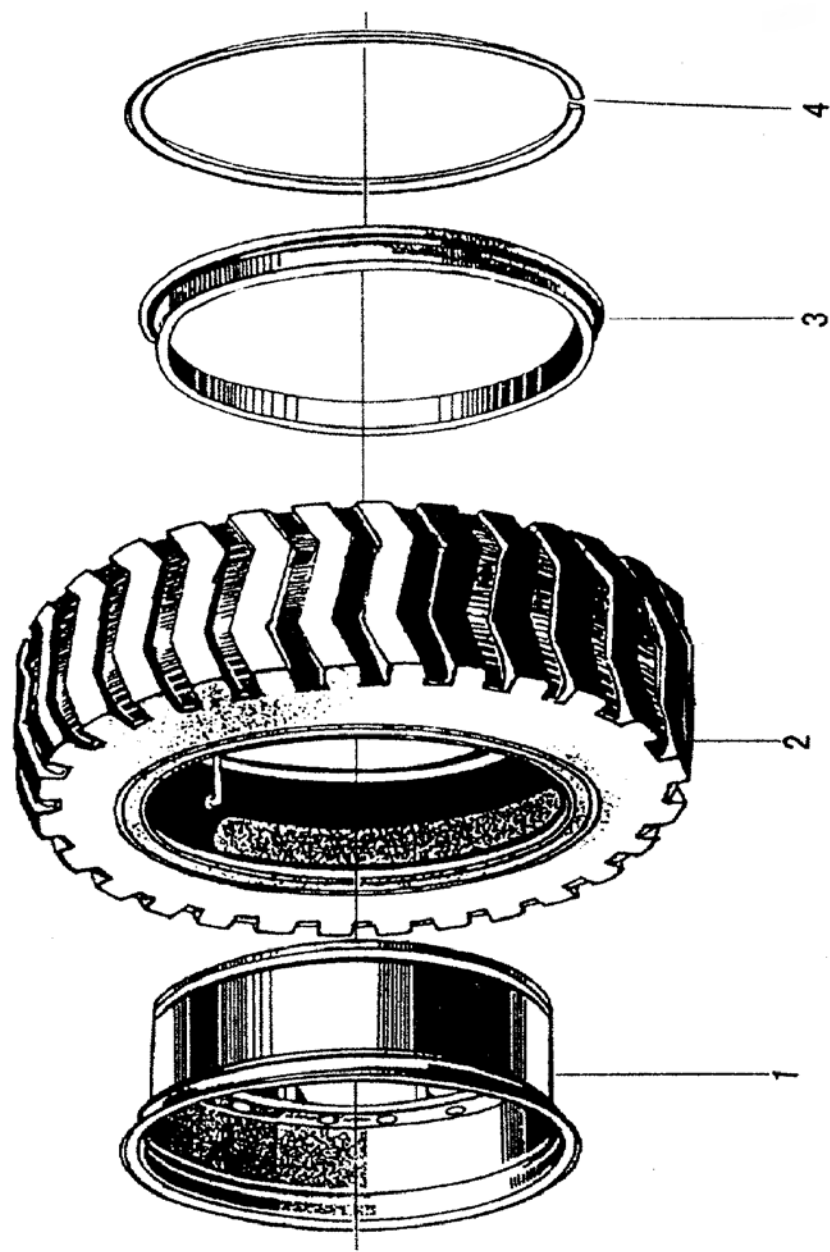

前车轮总成 FRONT WHEEL ASSEMBLY

序号 ITEM	零件号 PART NO.	零件名称	Part Name	数量 Q'TY	备注 Remark
1	W110600230	轮辋	RIM	2/2	
2	W110001640	轮胎	TYRE	2/2	
3	W110600230-1	外挡圈	OUTER SNAP	2/2	
4	W110600230-2	锁圈	LOCK RING	2/2	


后车轮总成 REAR WHEEL ASSEMBLY

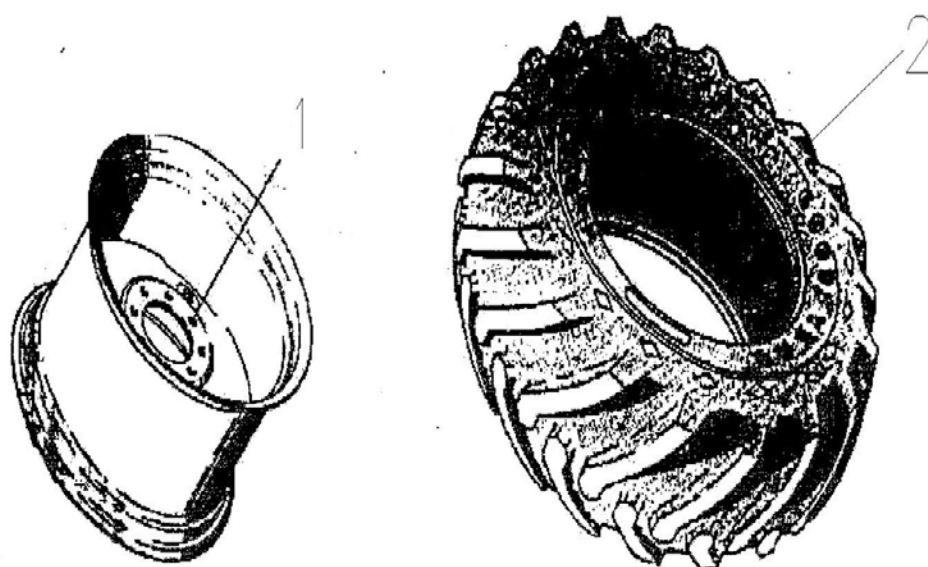

后车轮总成 REAR WHEEL ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	名称	数量 Q'TY	备注 Remark
1	W110600250	Rear axle rim	后桥轮辋	2	
2	W110001660	Rear axle tire	后桥轮胎	2	


传动油散连接油路 TRANSMISSION OIL COOLING OIL-WAY

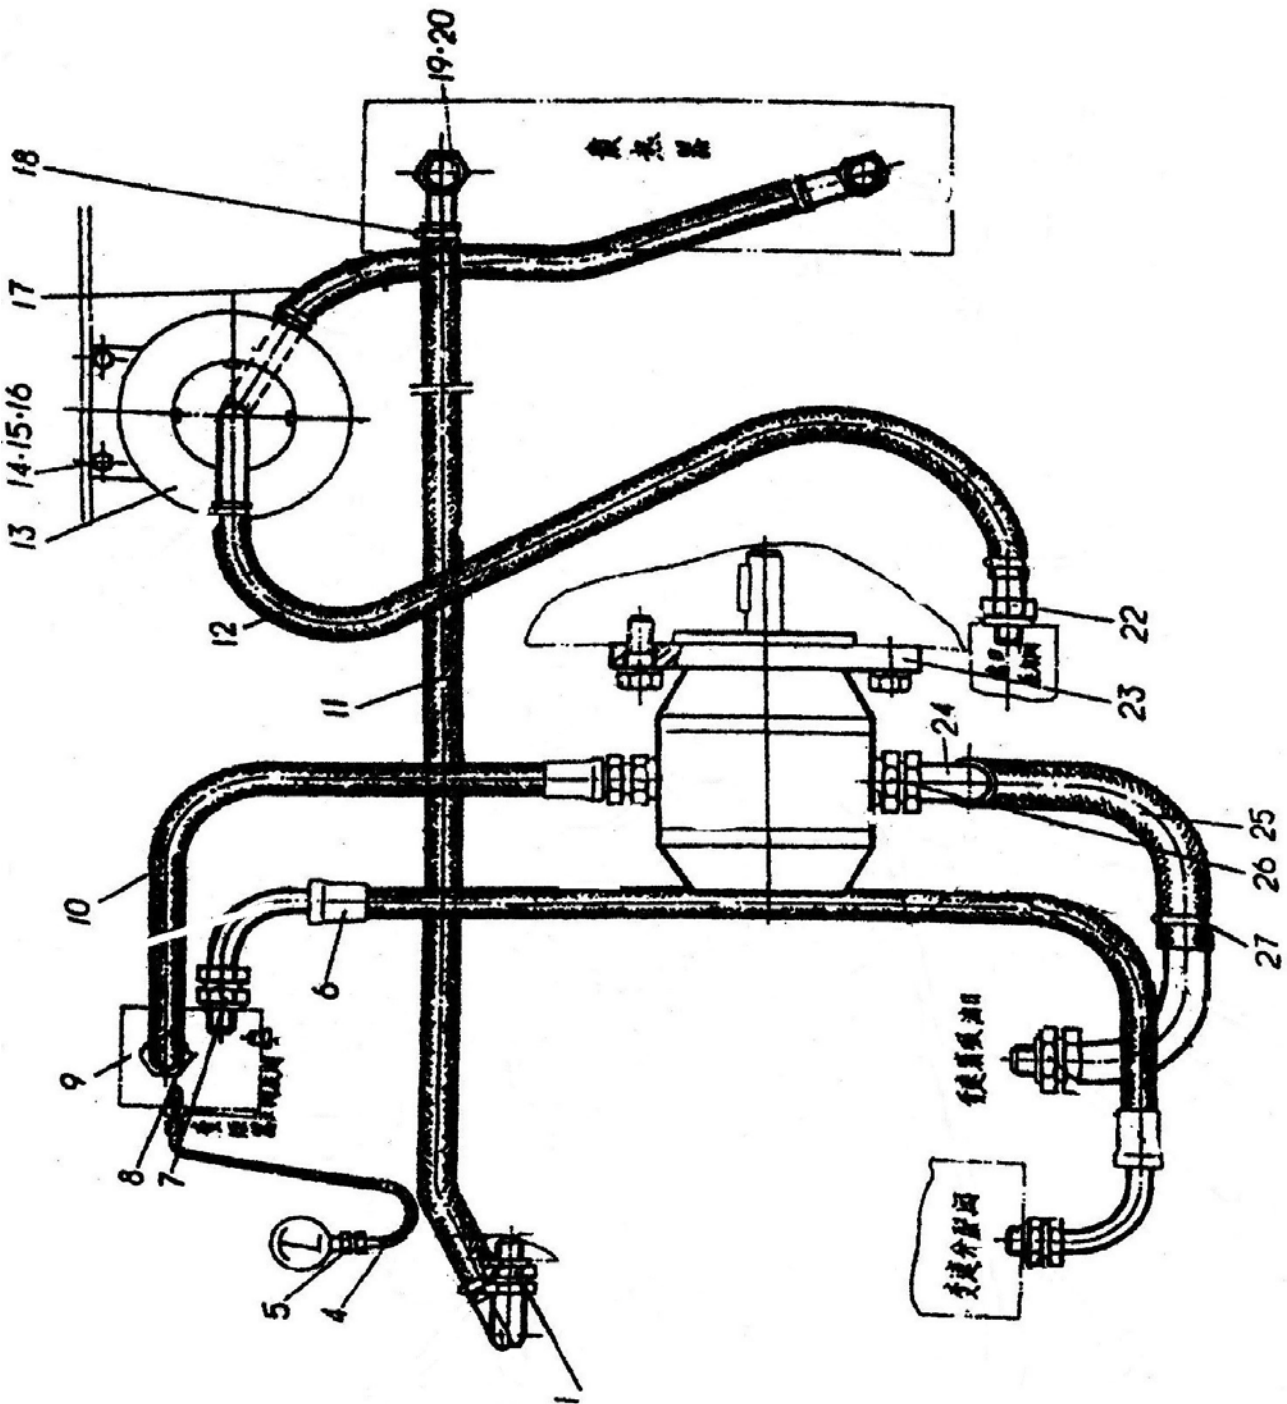

传动油散连接油路 TRANSMISSION OIL COOLING OIL-WAY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W024200840	Oil return joint	回油接头	1	
4	Z060110140	Transmission valve tubing	变速阀油管	1	
5	Z590220230	Tubing fittings	油管接头	1	
6	Z110100180	Variable speed distribution valve tubing	变速分配阀油管	1	
7	Z110100010	Main pressure regulating valve oil outlet joint	主调压阀出油中接头	2	
8	W024100340	Pressure reducing valve	减压阀	1	
9	Z150190990	Three-way connector	三通接头	1	
10	Z110100191	oil resistant rubber hose	高压耐油胶管	1	
11	Z050120030	oil resistant hose	低压耐油胶管	1	
12	Z061120010	converter outlet pipe	变矩器出油管	1	
13	Z110100451	Oil Filter	滤油器	1	
14	B040711030	Bolt	螺栓	2	
15	B050311210	Nuts	螺母	2	
16	B060111203	Spring washer	弹簧垫圈	2	
17	Z061120030	Radiator inlet pipe	散热器进油管	1	
18	B190110320	Throat band	喉箍	4	
19	Z060120010	Torque converter outlet pipe	变矩器出油管	1	
20	Z590110050	Joint	接头	2	
22	Z350170040	Joint	接头	1	
23	W061000050	Hydraulic gear pump	液压齿轮泵	1	
24	Z110100200	Oil pump suction joint	油泵吸油接头	1	
25	Z110100060	oil resistant hose	低压耐油胶管	1	
26	Z110190050	Joint	接头	1	
27	B190120255	Throat band	喉箍	4	


优先阀总成 PRIORTY VALVE ASSEMBLY

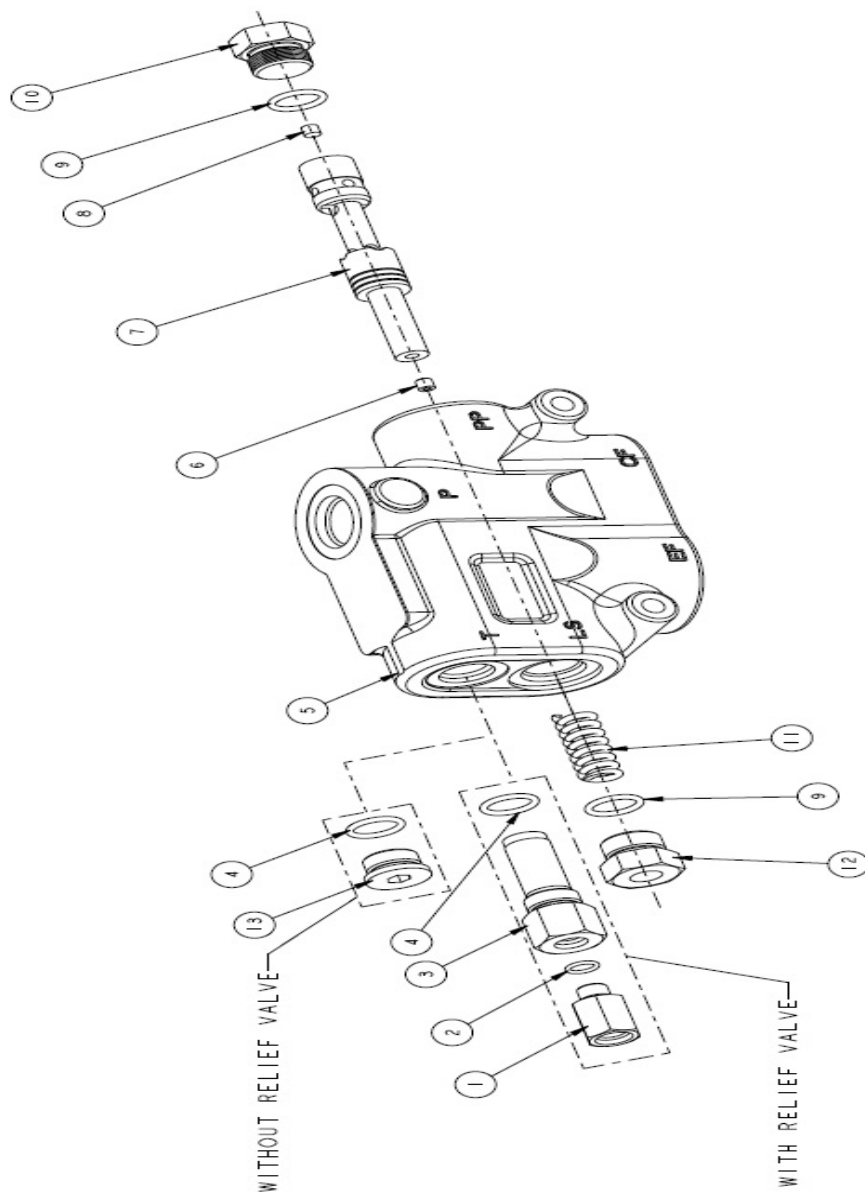

优先阀总成 **PRIORITY VALVE ASSEMBLY**

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remar k
1	W110000300-1	PLUG	接头螺栓	1	
2	W110000300-2	O-RING	O 型圈	1	
3	W110000300-3	LS RELIEF VALVE	负荷传感溢流阀	1	
4	W110000300-4	O-RING	O 型圈	1	
5	W110000300-5	HOUSING	阀体	1	
6	W110000300-6	ORIFICE	阀套	1	
7	W110000300-7	POPPET	阀芯	1	
8	W110000300-8	ORIFICE	阀套	1	
9	W110000300-9	O-RING	O 型圈	1	
10	W110000300-10	PLUG	螺栓	1	
11	W110000300-11	SPRING	弹簧	1	
12	W110000300-12	PLUG	螺栓	1	
13	W110000300-13	PLUG	调压螺栓	1	


齿轮泵总成 GEAR PUMP ASSEMBLY

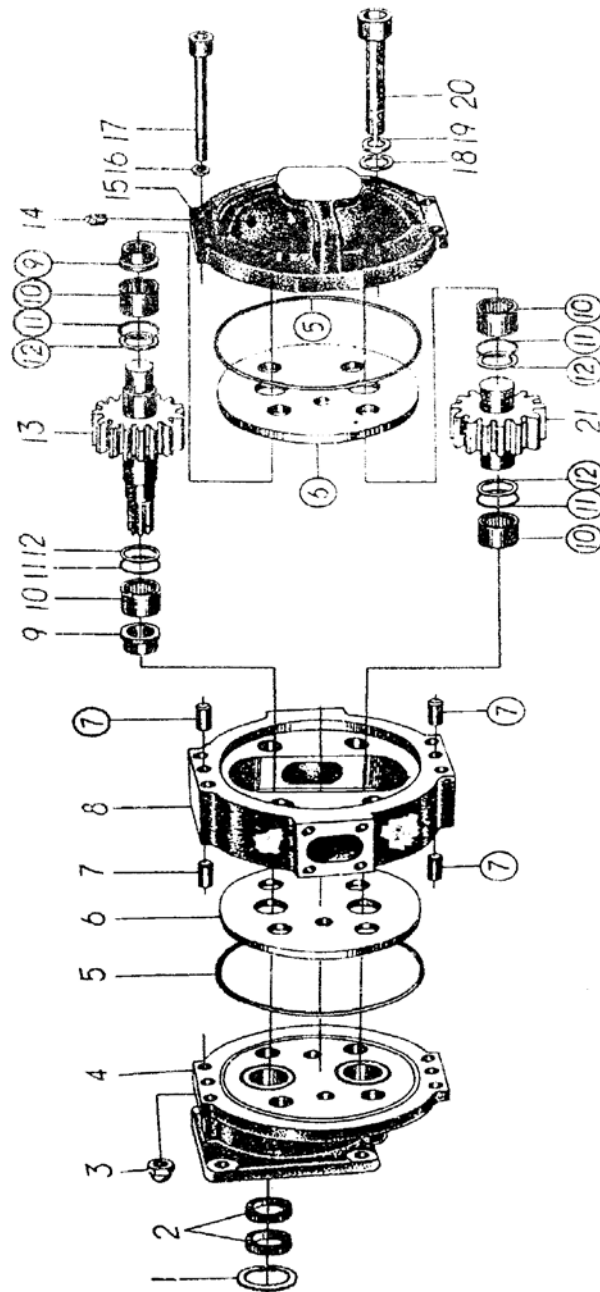

齿轮泵总成 GEAR PUMP ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1		Snap ring	挡圈 52	1	
2		Seal	骨架式油封	2	
3		Nut	螺母	4	
4		Nut	螺母	1	
5		O- ring	O 型圈	2	
6		Side plate	侧板	2	
7		Pin	园柱销	4	
8		Pump body	泵体	1	
9		Seal ring	密封环	2	
10		Needle roller	滚针轴承	2	
11		O- ring	O 型圈	4	
12		Snap ring	挡圈	4	
13		Driven gear	主动齿轮	1	
14		Pulg	螺塞 ZG1/8	1	
15		Rear cover	后泵盖	1	
16		Washer	垫圈	2	
17		Bolt	螺钉	2	
18		Washer	密封铜垫	2	
19		Washer	垫圈	2	
20		Bolt	螺钉	2	
21		Driven gear	从动齿轮	1	


加油机构 ACCELERATION CONTROL MEDCHANISM

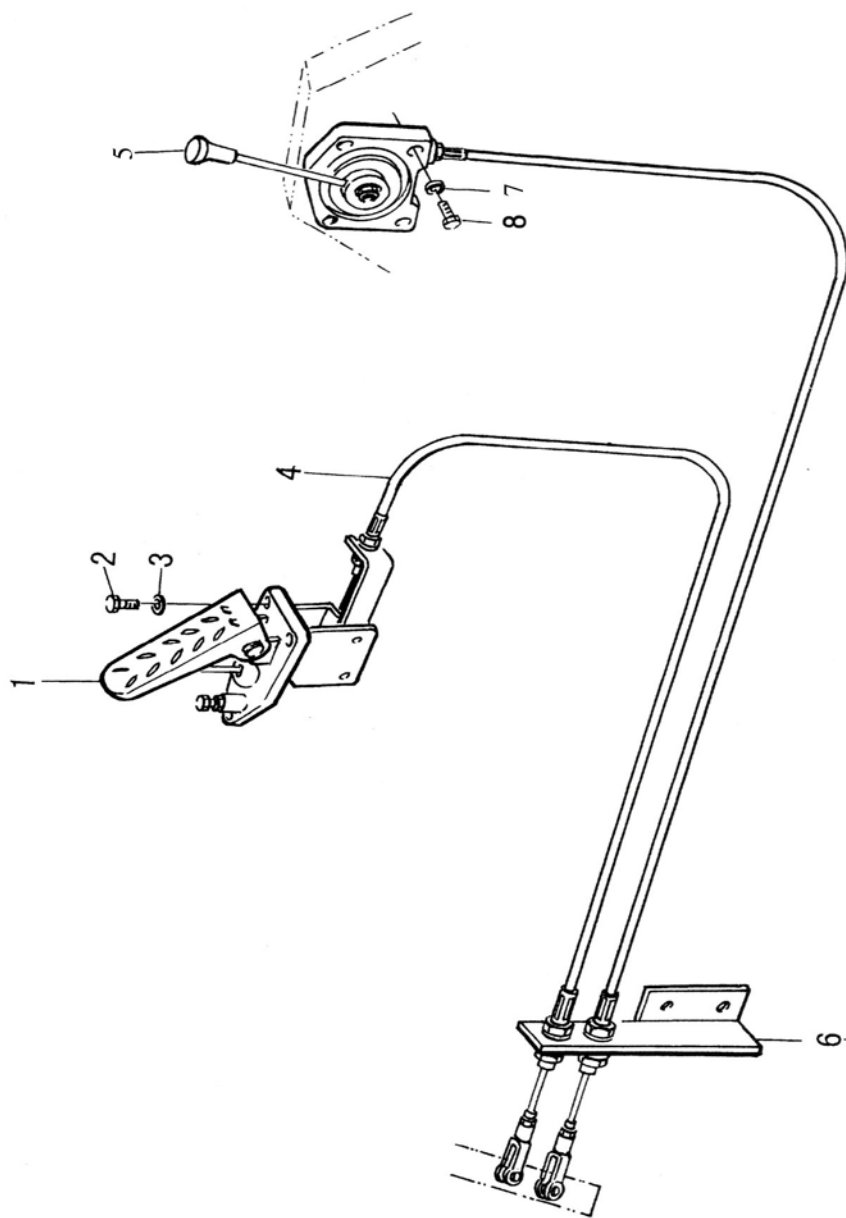

加油机构 ACCELERATION CONTROL MEDCHANISM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W110001840	油门踏板	油门踏板	1	
2	B040910620	Bolt M6X20	螺栓 M6×20	3	
3	B060110602	Washer 6	垫圈 6	3	
4	Z050170010	Throttle control soft shaft	油门操纵软轴	1	
5	Z060170010	Flexible Shaft controller assembly	软轴控制器总成	1	
6	Z060170020	Throttle bracket	油门支架	1	
7	B040710830	Bolt M8X30	螺栓 M8×30	4	
8	B060410802	Washer 8	垫圈 8	4	


驾驶室 Cab assembly

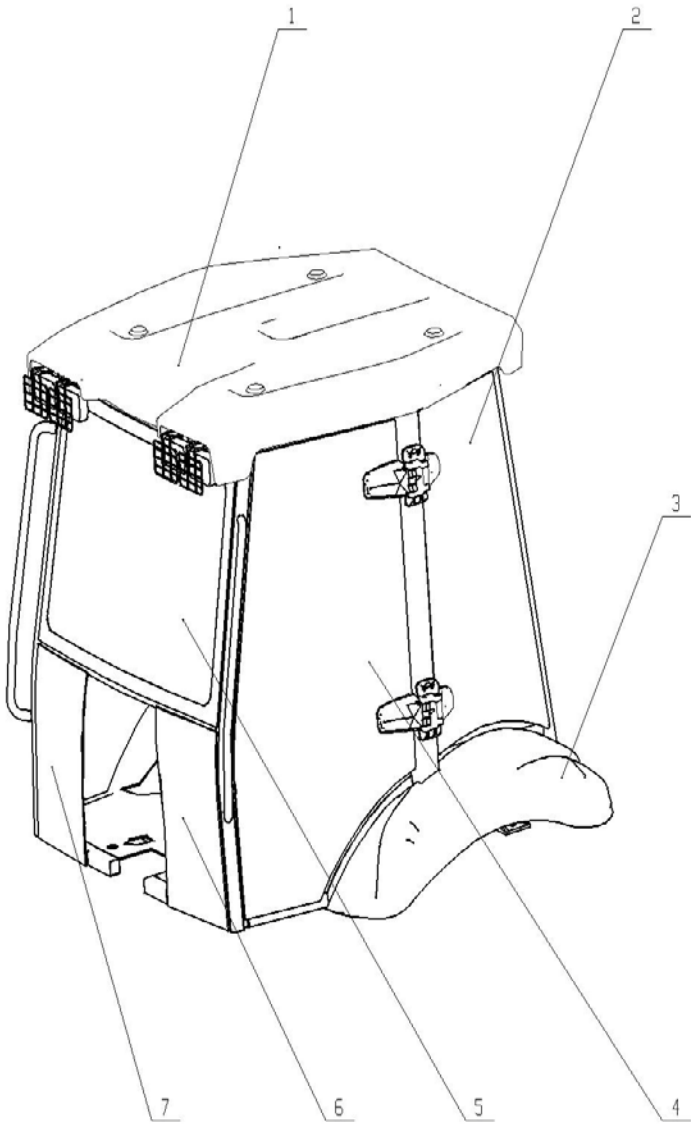

驾驶室 Cab assembly

序号 ITEM	零件号 PART NO.	零件名称	Part Name	数量 Q'TY	备注 Remark
1	Z06020102002-10	Top cover	顶盖	1	
2	Z06020102002-11	Back Glass	后侧玻璃	2	
3	Z06020102002-12	Left mudguard tile	左挡泥瓦	1	
	Z06020102002-13	Right Mudguard tile	右挡泥瓦	1	
4	Z06020102002-14	Left door glass	左门玻璃	1	
	Z06020102002-15	Right door glass	右门玻璃	1	
5	Z06020102002-16	Front up to the glass	前上玻璃	1	
6	Z06020102002-17	Front right lower glass	前右下玻璃	1	
7	Z06020102002-18	Front left lower glass	前左下玻璃	1	


顶盖线路(24V)TOP COVER WIRING(24V)

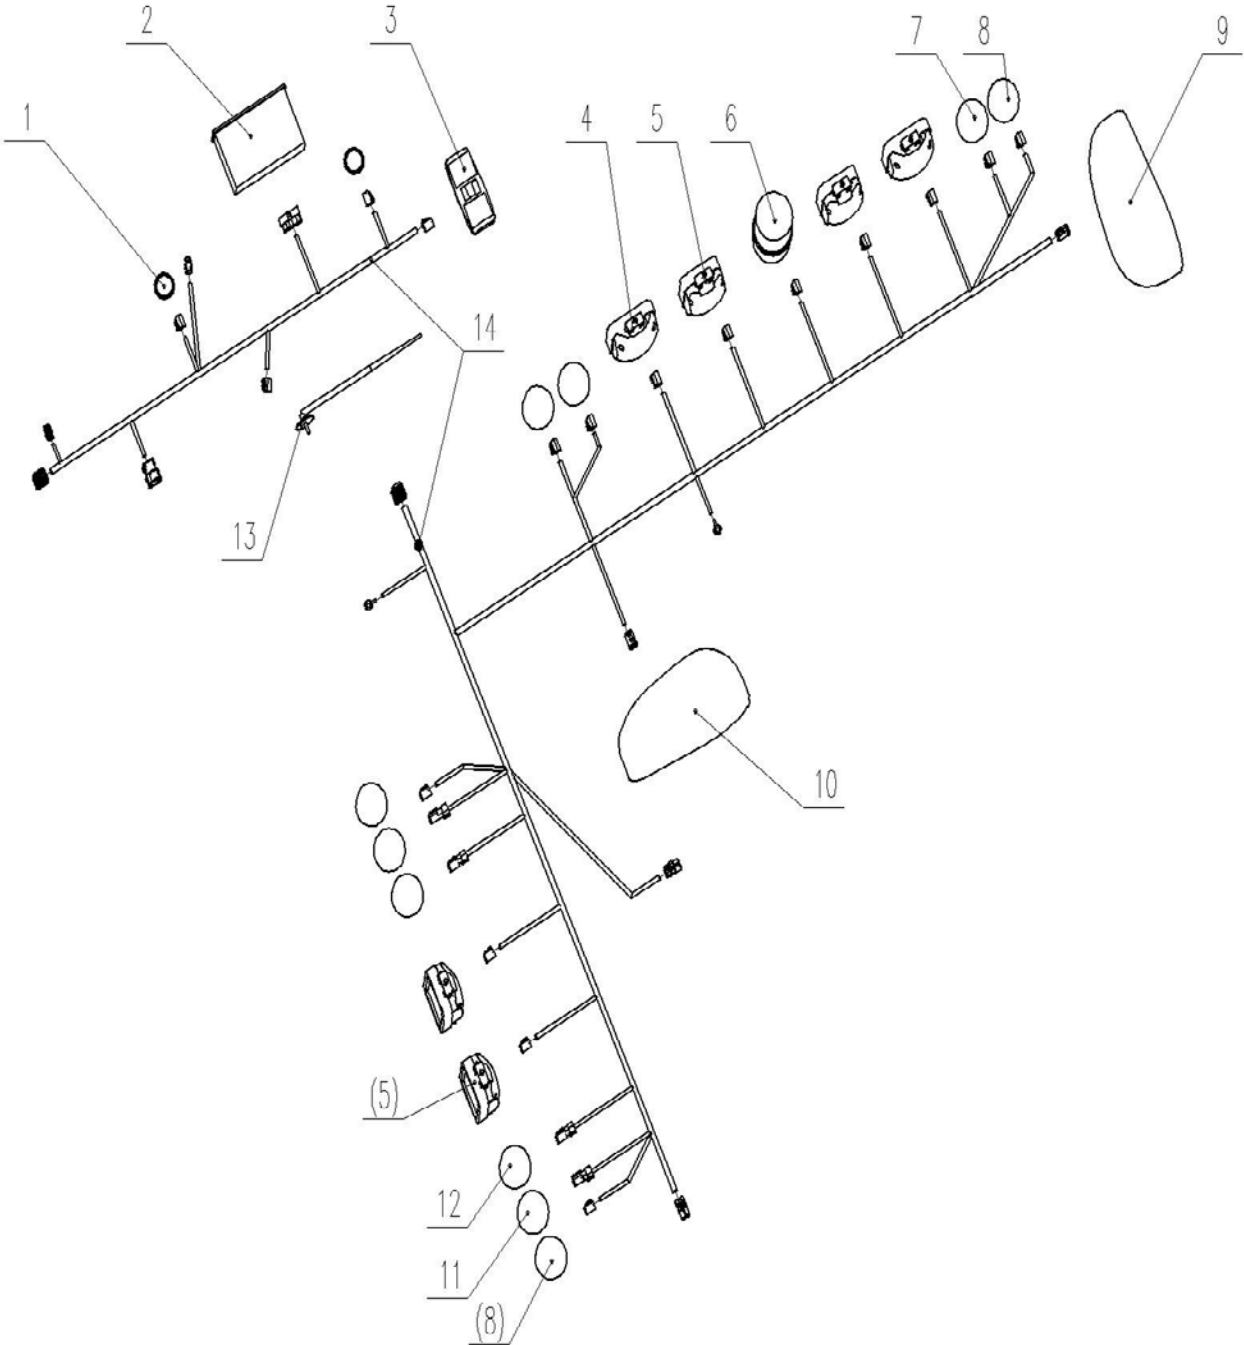

顶盖线路(24V)TOP COVER WIRING(24V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062200011-38	Radio player horn	收放机喇叭	2	
2	B4610-66A030000	Radio player	收放机	1	
3	Z062200011-39	dome light	顶灯	1	
4	Z062200011-10	High and low beam work lights	远近光工作灯	2	
5	Z062200011-11	Work lights	工作灯	4	
6	Z062200011-40	Warning lights	警示灯	1	
7	Z062200011-7	position light	示廓灯	2	
8	Z062200011-6	turn signal	转向灯	4	
9	Z062200011-2	Left front combination lamp	左前组合灯	1	
10	Z062200011-3	Right front combination lamp	右前组合灯	1	
11	Z062200011-4	Reversing lights	制动行车灯	2	
12	Z062200011-5	Warning lights	倒车灯	2	
13	Z062200011-41	Radio player antenna	收放机天线	1	
14	WM16F.24	Top cover harness	顶盖线束	1	

仪表台总成
DASH PANEL ASSEMBLY

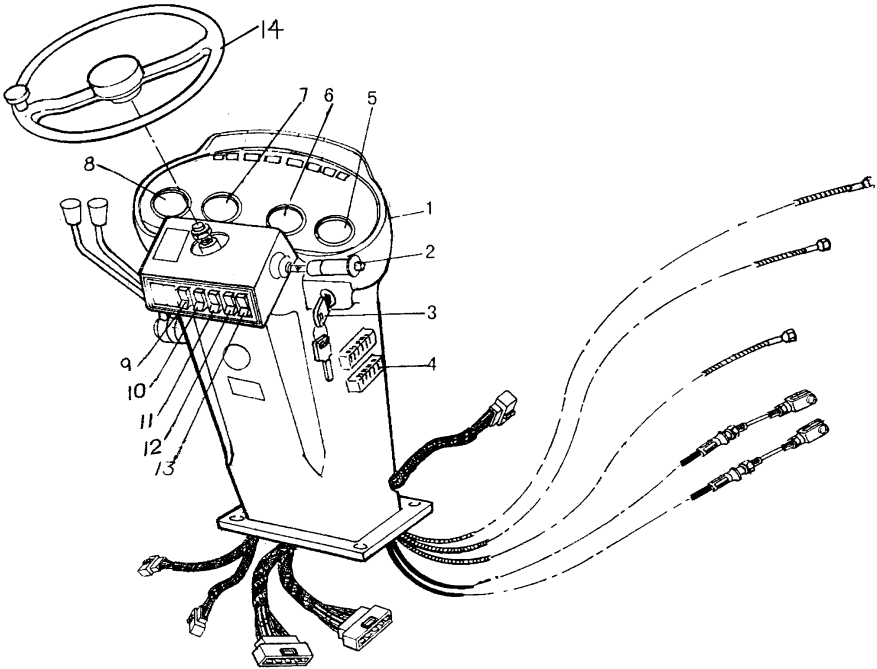


仪表台总成

DASH PANEL ASSEMBLY

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	W013900900	Dassh panel	仪表盘	1	
2	W110060050	Front lamp s' witch	前大灯开关	1	
3	W013900900-5	<u>Electric lock</u>	电锁	1	
4	W013900900-6	Fuse box	保险盒	1	
5	W013900900-7	Voltmeter	电压表	1	
6	W013900900-9	<u>Enging oil ppressure</u>	机油压力表	1	
7	W013900900-8	Oil thermometer	变矩器油温表	1	
8	W013900900-10	Enging coolnt thermometer	发动机水温表	1	
9	W113025070	<u>Wiper switch</u>	雨刮器开关	1	
10	W110000670	Anti fog lamp <u>switch</u>	防雾灯开关	1	
11	W110001400	Lamp <u>switch</u>	远近光开关	1	
12	W110001450	<u>Fan switch</u>	风扇开关	1	
13	W110001440	Rear lamp <u>switch</u>	后大灯开关	1	
14	W090120000	Speering wheel	方向盘	1	


电瓶组系统(24V) BATTERY CASES SYSTEM(24V)

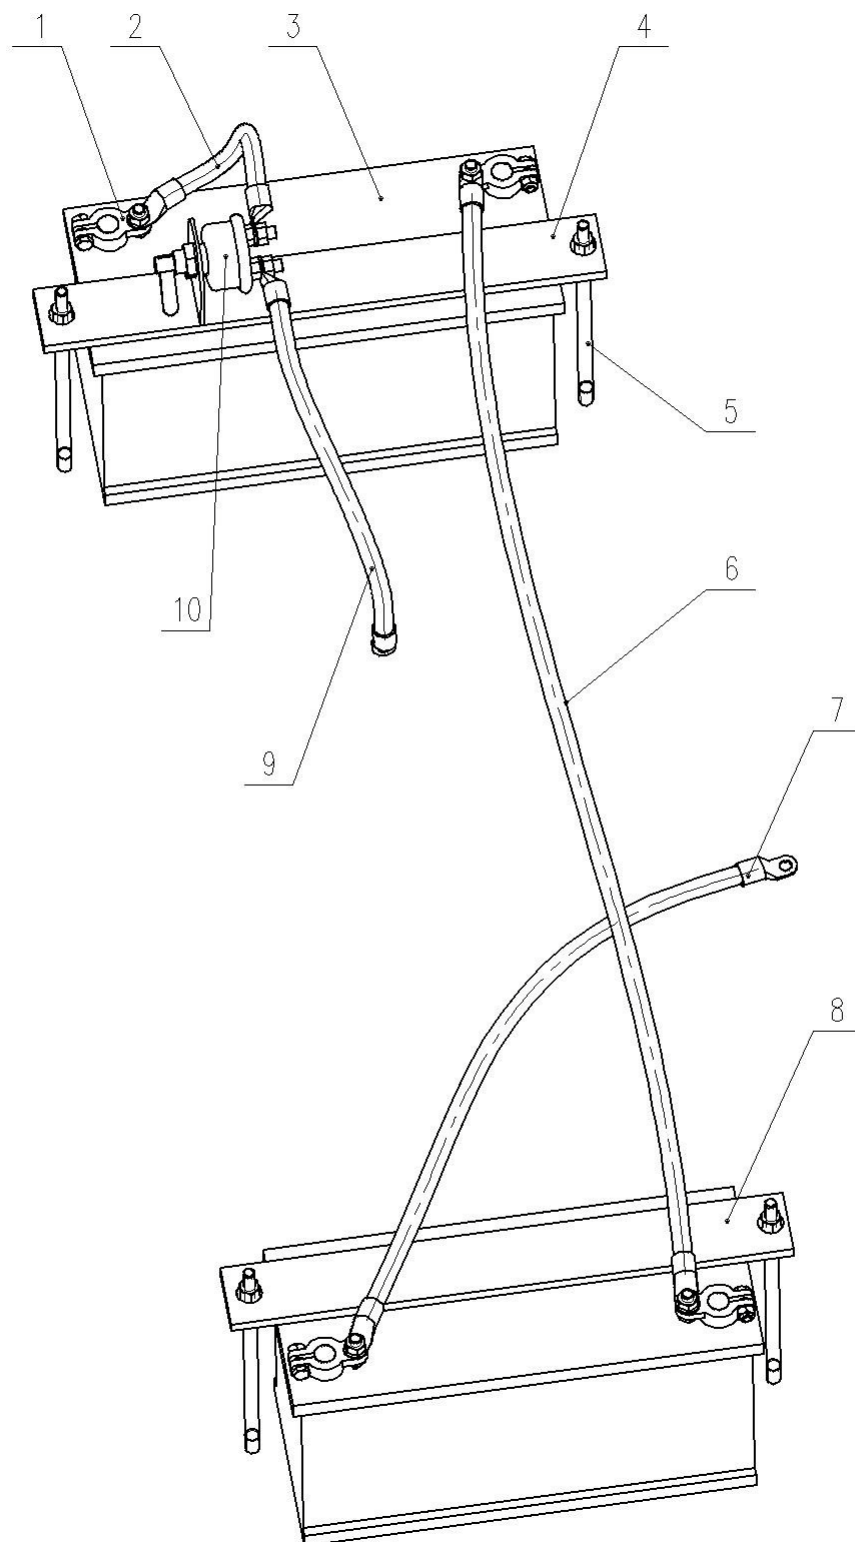

电瓶组系统(24V) BATTERY CASES SYSTEM(24V)

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	W110001770	Battery clamp	电瓶夹子	4	
2	Z050210060	battery cable	电瓶线	1	
3	W110001434	storage battery	蓄电池	2	
4	Z065210020	Battery pressure plate	电瓶压板	1	
5	Z593210071	Tighten the stud	压紧螺柱	4	
6	Z062210220	battery cable	电瓶线	1	
7	Z110180080	battery cable	电瓶线	1	
8	Z065210030	platen	压板	1	
9	Z050210070	battery cable	电瓶线	1	
10	W110000147	Main power switch	电源总开关	1	


电瓶组系统(12V) BATTERY CASES SYSTEM(12V)

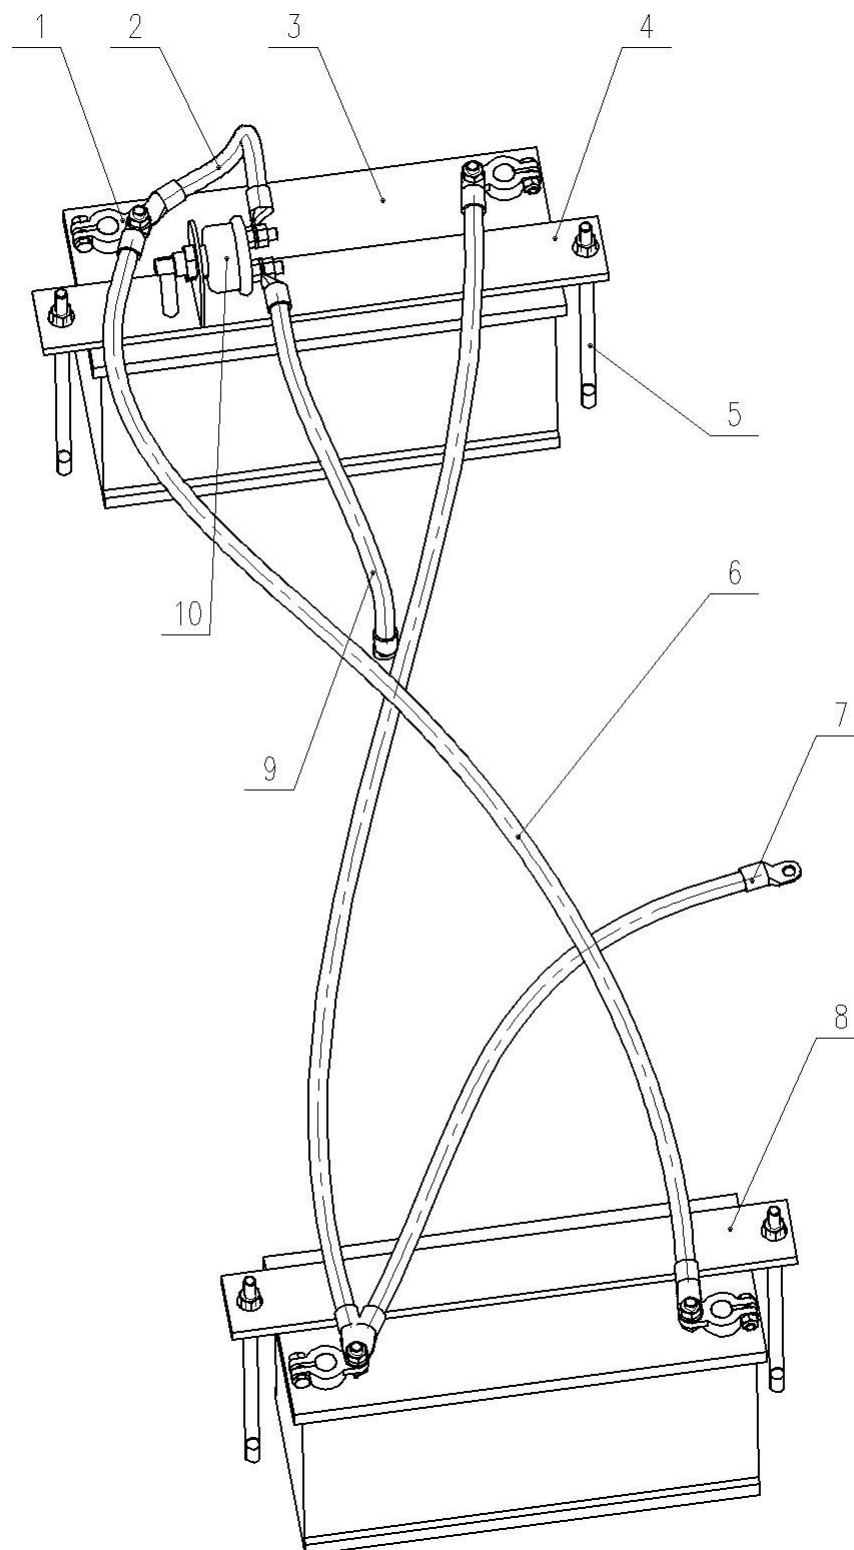

电瓶组系统(12V) BATTERY CASES SYSTEM(12V)

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	W110001770	Battery clamp	电瓶夹子	4	
2	Z050210060	battery cable	电瓶线	1	
3	W110001434	storage battery	蓄电池	2	
4	Z065210020	Battery pressure plate	电瓶压板	1	
5	Z593210071	Tighten the stud	压紧螺柱	4	
6	Z062210220	battery cable	电瓶线	2	
7	Z110180080	battery cable	电瓶线	1	
8	Z065210030	platen	压板	1	
9	Z050210070	battery cable	电瓶线	1	
10	W110000147	Main power switch	电源总开关	1	


底盘液压系统 CHASSIS HYDRAULIC SYSTEM

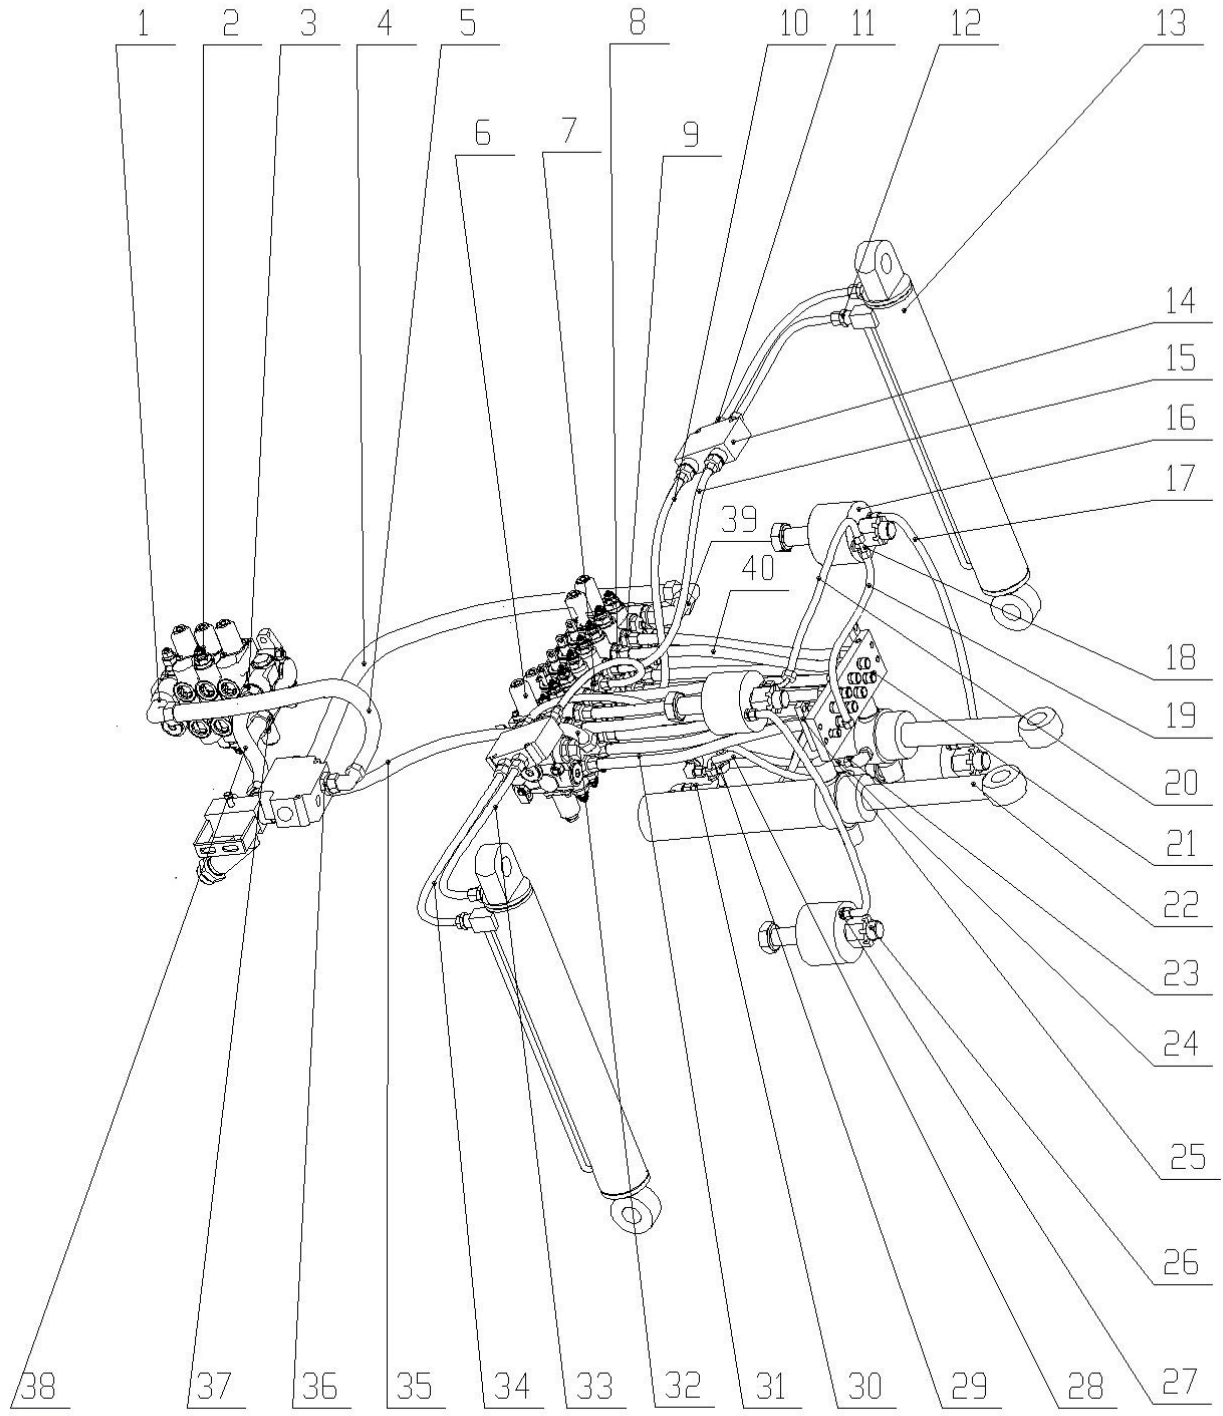

底盘液压系统 CHASSIS HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	QLWZG078-003030	Right angle combination joint	直角组合接头	3	
2	W070400050	Triple valve	三联工作阀	1	
3	QLWZG074-003633	Direct connection	直通接头	2	
4	Z060250198	Excavate valve return pipe	挖掘阀回油管	1	
5	Z060100338	Load valve inlet pipe	装载阀进油管	1	
6	W070400006	Excavate the valve	挖掘阀	1	
7	QLWZG074-001630	Direct connection	直通接头	4	
8	Z020100200	Direct connection	直通接头	14	
9	QLWZG074-001830	Direct connection	直通接头	2	
10	Z061251010	Right hydraulic lock tubing	右液压锁油管	2	
11	W110251890	Joint	接头	8	
12	Z050251730	Joint	接头	4	
13	W053025040	Outrigger jars	支腿缸	2	
14	W073025010	Two-way hydraulic lock	双向液压锁	2	
15	Z061251030	Right hydraulic lock tubing	右液压锁油管	1	
16	W053025100	Clamping cylinder II	夹紧缸 II	2	
17	Z050251051	Clamp tubing	夹紧油管	2	
18	Z050251720	Three-way combined connector	三通组合接头	1	
19	Z050250921	Clamp tubing	夹紧油管	1	
20	Z050251012	Clamp tubing	夹紧油管	1	
21	Z050420011	Oil Road block	油路块	1	
22	W053025175	Rotary cylinder	回转缸	2	
23	Z190180370	Joint	接头	4	
24	Z062241483	Rotary cylinder tubing	回转缸油管	2	
25	Z050610180	Fixing plate	固定板	2	
26	W053025010	Clamping cylinder I	夹紧缸 I	2	
27	Z590190940	Joint	接头	6	
28	Z050250313	To the rotary cylinder tubing	到回转缸油管	2	
29	Z062241405	Left turn cylinder large cavity connector	左回转缸大腔接头	1	
30	Z062241455	Right rotary cylinder large cavity connector	右回转缸大腔接头	1	
31	Z050250711	Excavate the connecting tubing	挖掘联出油管	8	
32	Z060250012	Excavate valve into oil pipe	挖掘阀进油管	1	
33	Z061251070	Outrigger cylinder tubing 1	支腿缸油管 1	2	
34	Z061251090	Outrigger cylinder tubing	支腿缸油管 2	1	


底盘液压系统 CHASSIS HYDRAULIC SYSTEM

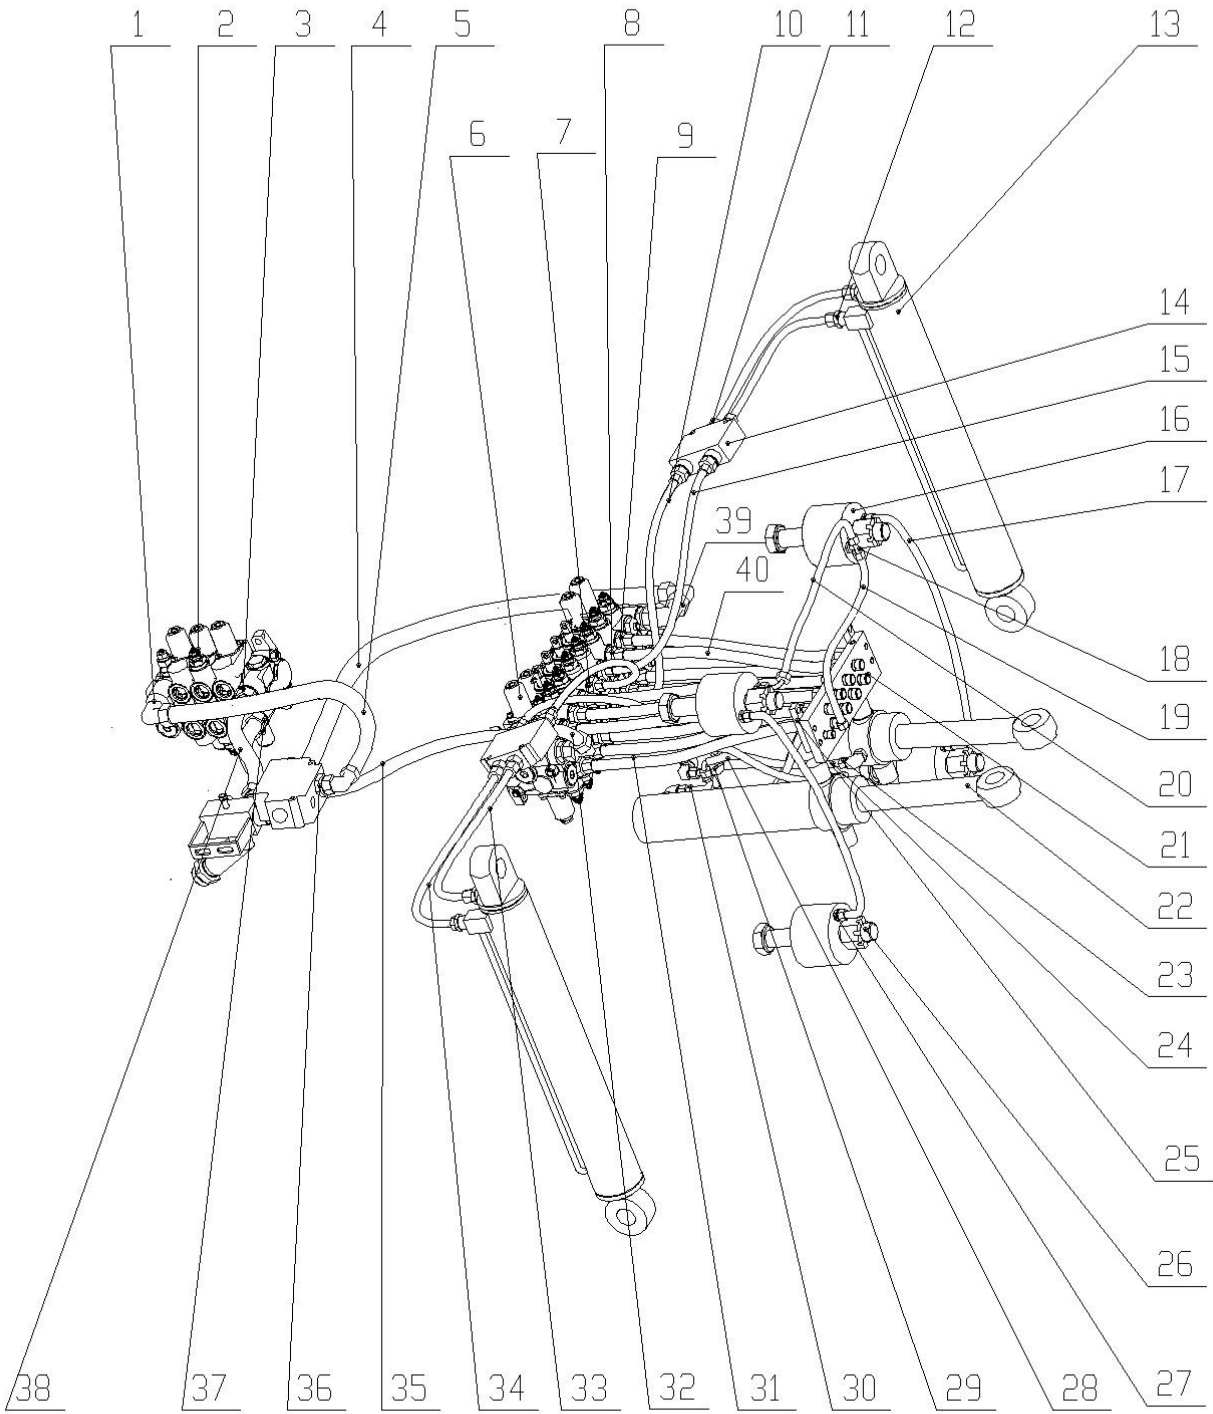

底盘液压系统 CHASSIS HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
35	Z060250065	Excavate valve into oil pipe	挖掘阀进油管	1	
36	Z062240600	Joint	接头	1	
37	QLWZG074-003030	Direct connection	直通过接头	3	
38	Z060100344	Load valve return pipe	装载阀回油管	1	
39	Z060250032	Tap valve return pipe	挖掘阀回油接管	1	
40	Z061250133	Rotary connection out of the tubing	回转联出油管	2	


挖掘液压系统(一) EXCAVATE THE HYDRAULIC SYSTEM (ONE)

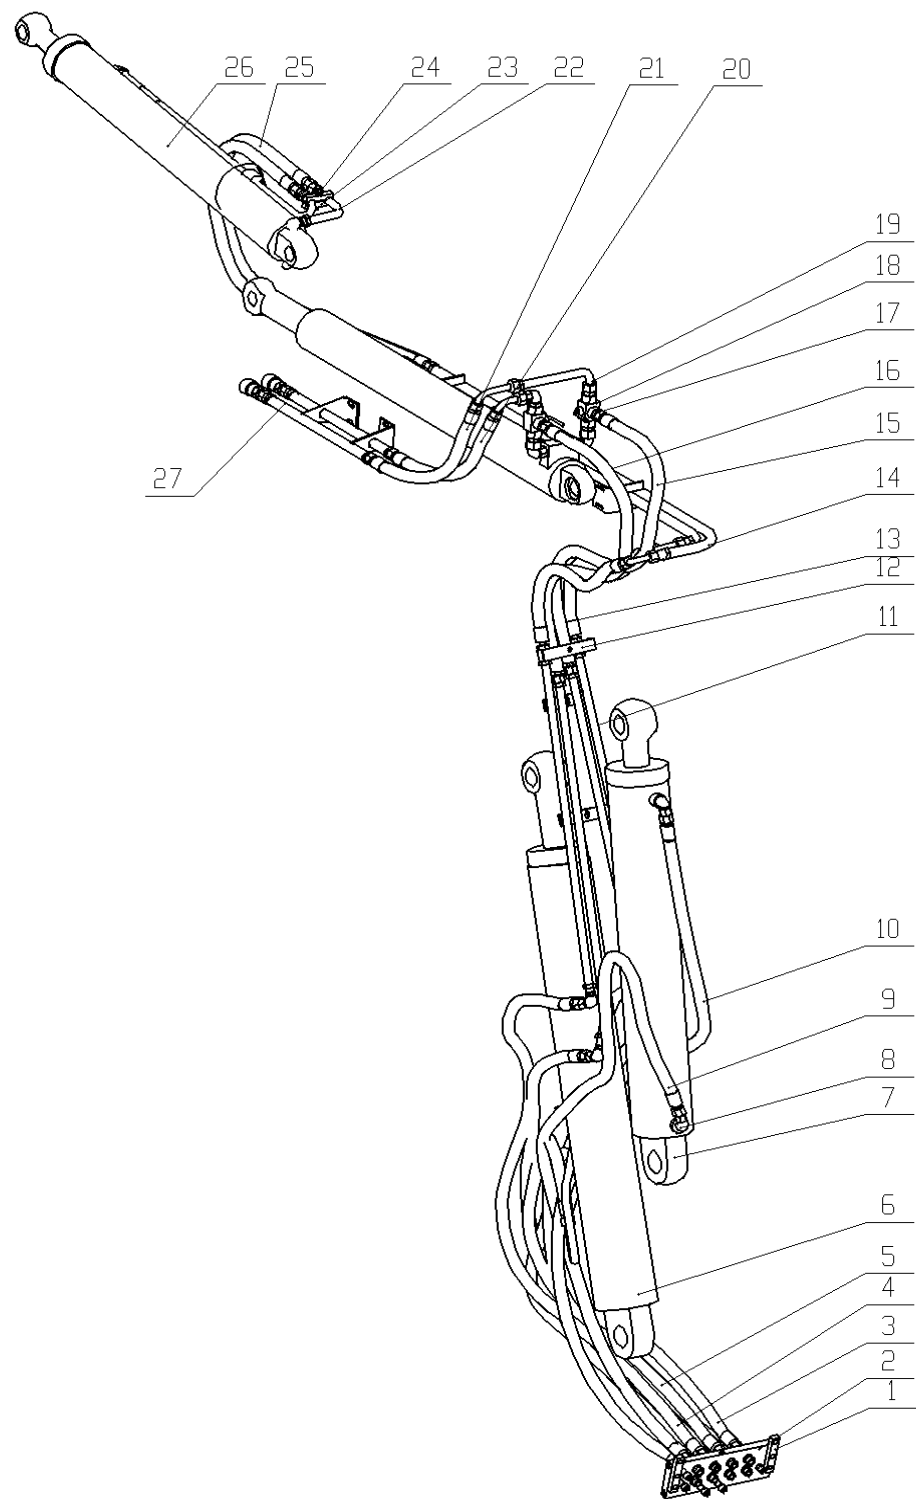

挖掘液压系统(一) EXCAVATE THE HYDRAULIC SYSTEM (ONE)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z050251045	Fixing plate	固定板	2	
2	Z050420011	Oil Road block	油路块	1	
3	Z062580113	Hard tubing tubing 1	硬管油管 1	3	
4	Z062580213	Hard tubing tubing3	硬管油管 3	1	
5	Z062580013	Boom cylinder large cavity tubing	大臂缸大腔油管	2	
6	W053025800	Big Arm cylinder	大臂缸	1	
7	W053025850	Bucket rod cylinder	斗杆缸	1	
8	Z060100580	Right angle adjustable joint	直角可调接头	4	
9	Z062580073	Large cavity into the tubing	大腔进油管	1	
10	Z062580093	Small cavity into the tubing	小腔进油管	1	
11	Z062580135	Middle hard tube	中间硬管	1	
12	Z062580510	Pipe clamp plate	管卡板	1	
13	Z062580275	Tubing	进油管	2	
14	Z062580290	Excavate hard oil pipe into cylinder	挖掘缸进油硬管	1	
15	Z062580535	Tubing	油管	2	
16	Z062580255	Tubing	进油管	1	
17	Z350170030	Joint	接头	4	
18	W079600055	Three-way ball valve	三通球阀	2	
19	Z062880035	Flex and break hard pipe	伸缩破碎硬管	1	
20	Z062880010	Tubing	油管	1	
21	Z062880050	Tubing	油管	1	
22	Z061250925	Excavate cylinder large cavity hard tube	挖掘缸大腔硬管	1	
23	Z061250955	Pipe Card	管卡	1	
24	B042520835	Transition joint	螺栓 M8×35	2	
25	Z062250050	Excavate the cylinder	挖掘缸进油管	2	
26	W053025055	Direct connection	挖掘缸	1	
27	Z050380402	Additional device hard tube	附加装置硬管	1	


挖掘液压系统（二） EXCAVATE THE HYDRAULIC SYSTEM (TWO)

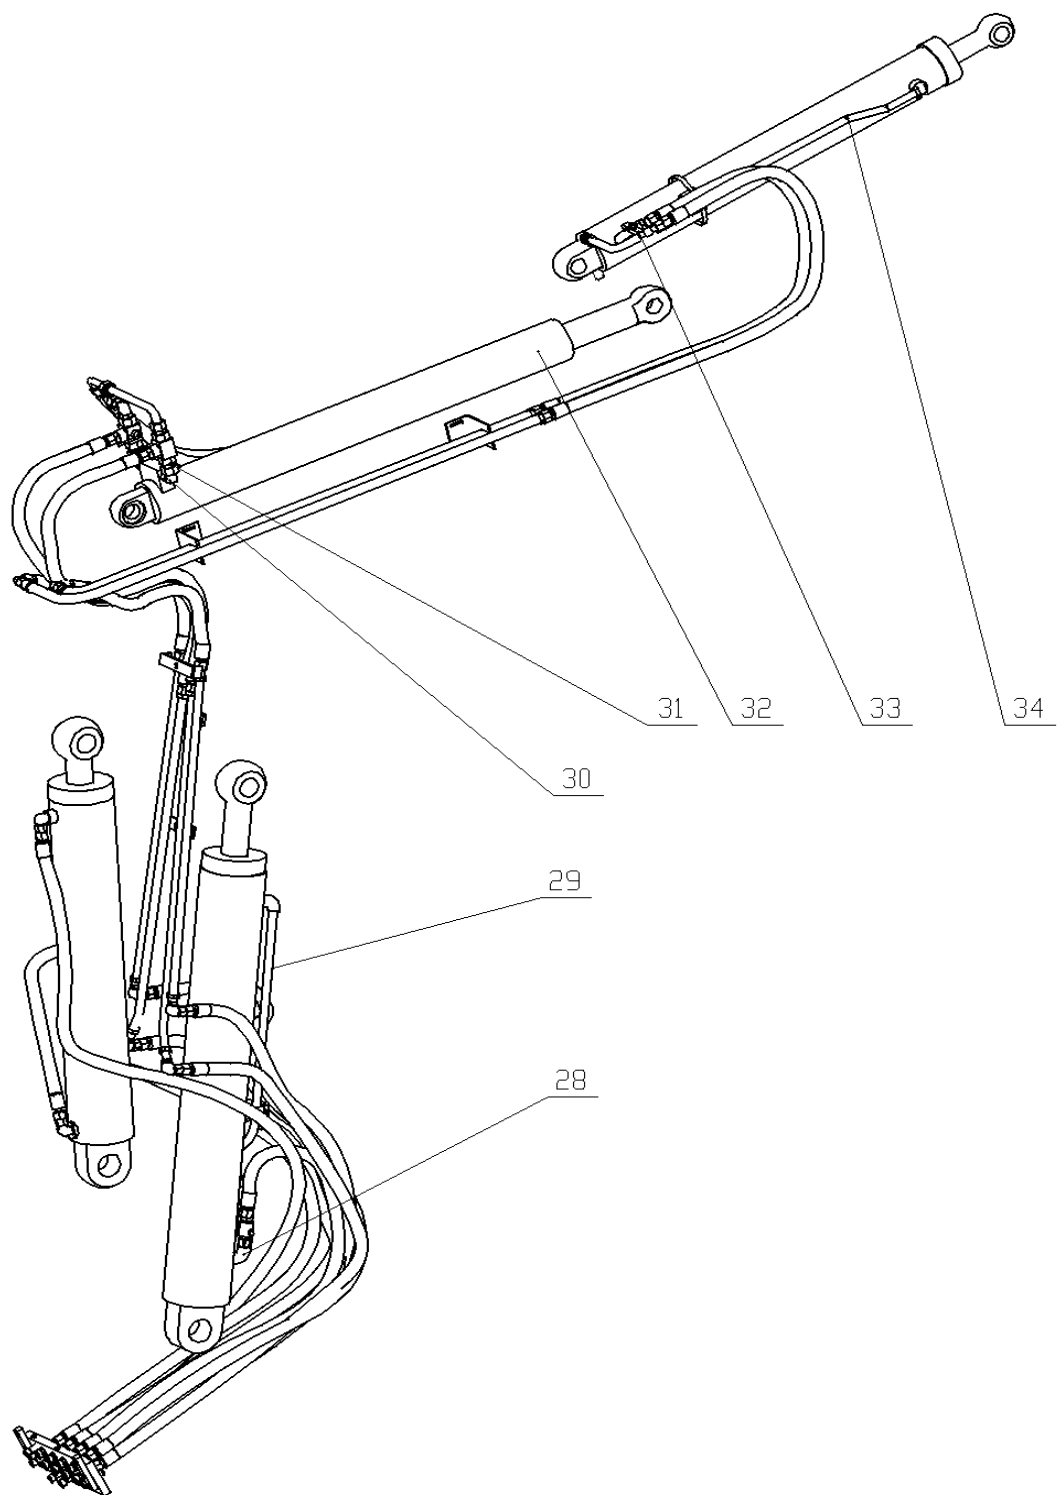

挖掘液压系统（二） EXCAVATE THE HYDRAULIC SYSTEM（TWO）

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
28	Z062580035	Arm cylinder large cavity hard tube	大臂缸大腔硬管	1	
29	Z062580055	Big arm cylinder small lumen hard tube	大臂缸小腔硬管	1	
30	Z060100580	Right angle adjustable joint	直角可调接头	1	
31	Z061250850	Transition joint	过渡接头	1	
32	W053025151	Retractable cylinder	伸缩油缸	1	
33	Z061250945	Pressure Plate	压板	1	
34	Z061250526	Small lumen hard tube	挖掘缸小腔硬管	1	


挖掘阀支架 BACKHOE VALVE FRAME

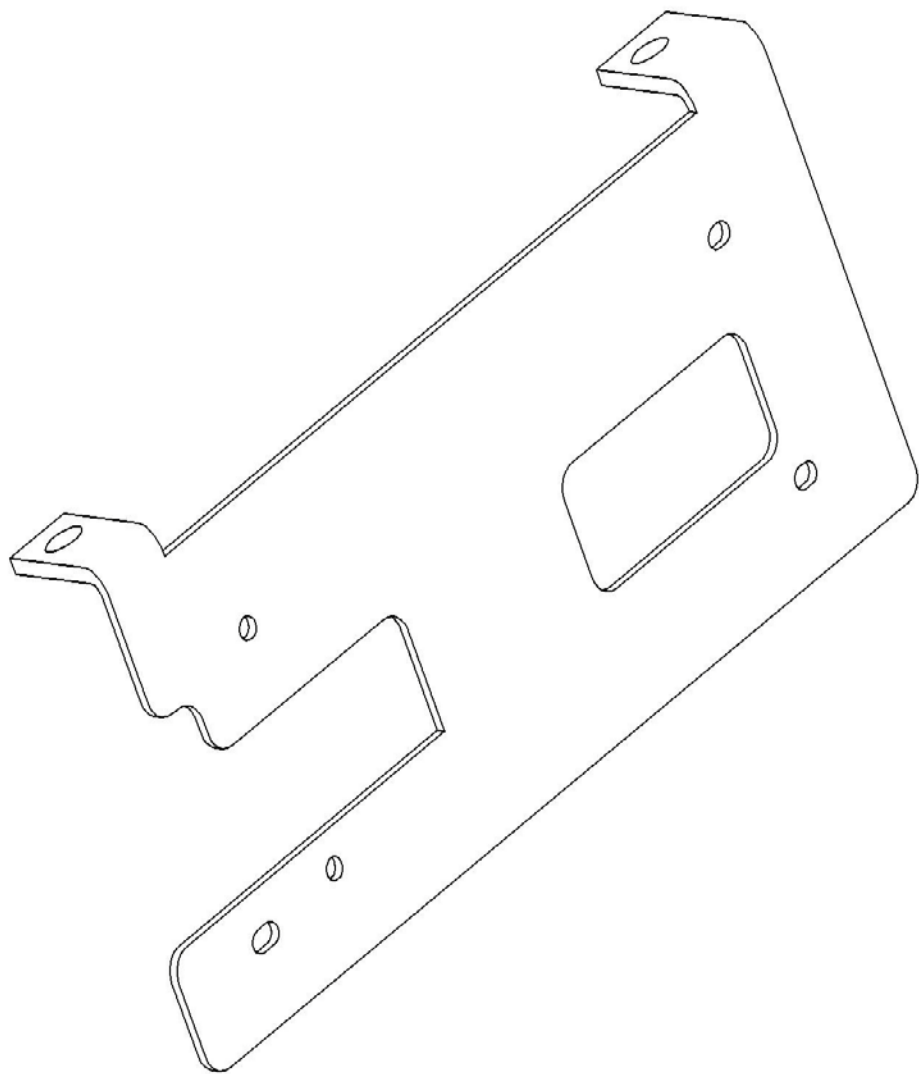

挖掘阀支架 BACKHOE VALVE FRAME

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z050380025	Excavate the control valve bracket	挖掘控制阀支架	1	


油缸及阀 CYLINDER AND VALVE

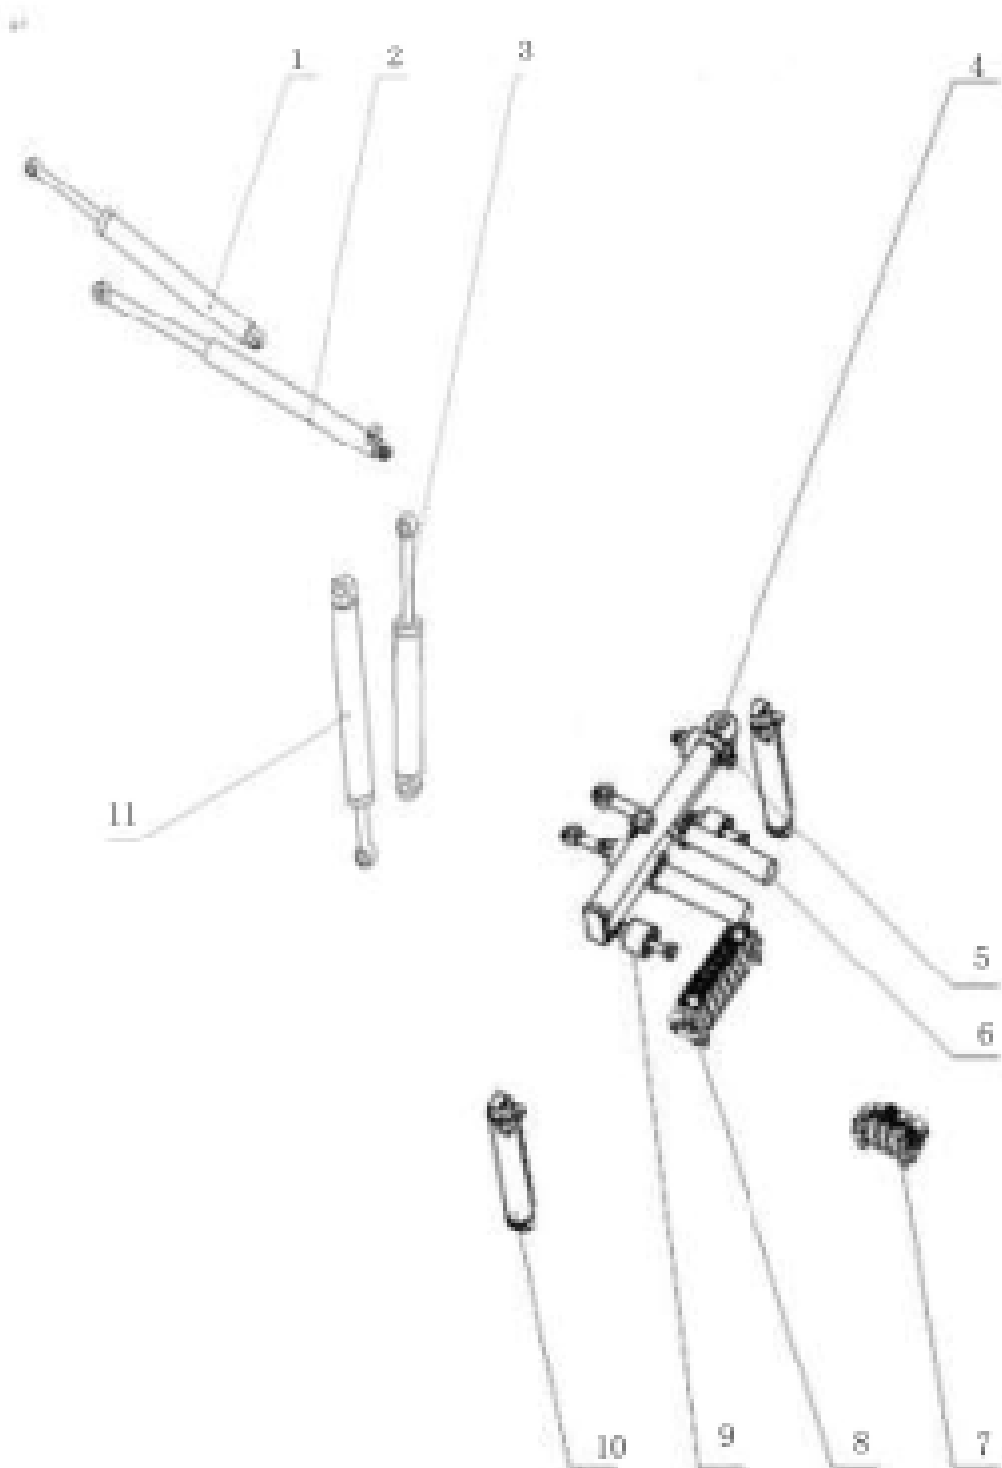

油缸及阀 CYLINDER AND VALVE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	W053025055	Excavate the cylinder	挖掘缸	1	
2	W053025151	Retractable cylinder	伸缩油缸	1	
3	W053025850	Excavate the cylinder	斗杆缸	1	
4	W053025750	Sliding frame push-pull cylinder	滑架推拉缸	1	
5	W053025010	Clamping cylinder I	夹紧缸I	2	
6	W053025175	Rotary cylinder	回转缸	2	
7	W070300400	Triple loading valve	三联装载阀	1	
8	W076400005	Excavate the valve	挖掘阀	1	
9	W053025100	Clamping cylinderII	夹紧缸II	2	
10	W053025040	Outrigger jars	支腿缸	2	
11	W053025800	Big Arm cylinder	大臂缸	1	

挖掘阀总成 BACKHOE VALVE ASSEMBLY

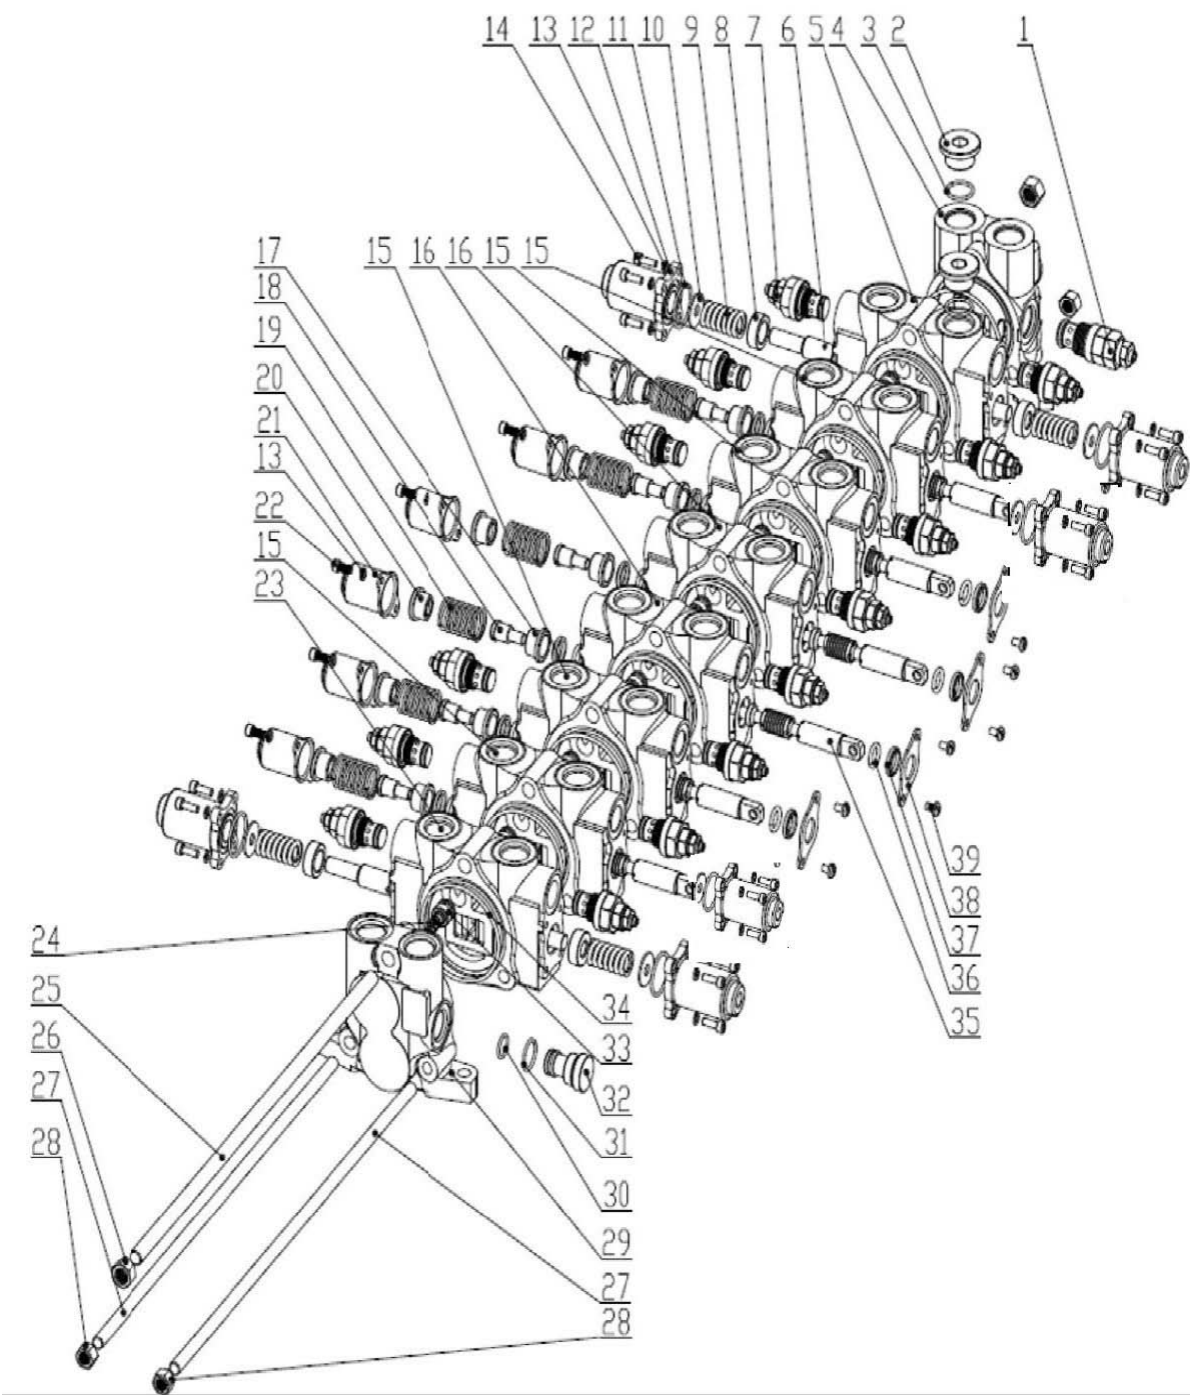


挖掘阀总成 BACKHOE VALVE ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注
1	W070400009-17	Main Relief Valve	溢流阀	1	
2	W070400009-1	Screw plug	螺塞	3	
3	ISO6149/26.6x2.9	O-ring 26.6X2.9	O 形密封圈 26.6X2.9	3	
4	W070400009-2	Inlet valve body	进油阀片	1	
5	W070400006-01	Valve Body	阀体	1	
6	W070400006-02	ype 0 stem	O 型阀杆	2	
7	W070400009-6	Secondary Relief Valve	二次溢流阀	14	
8	W070400006-03	Spring seat	弹簧座	4	
9	W070400006-04	Spring	弹簧	4	
10	W070400006-05	Limit Gasket	限位垫片	4	
11	B160110345	O-ring	O 形密封圈 34.5x2.65	4	
12	W070400006-06	End Cap II	端盖 II	4	
13	B060110602	PAD/6	垫圈 6	28	
14	B010410618	Hexagon Screw	螺钉 M6x18	16	
15	W070400009-4	Valve Body	阀体	4	
16	W070400006-07	Valve Body	阀体	2	
17	W070400009-5	Spring seat	弹簧座	6	
18	W070400009-18	Setting screw	定位螺钉	6	
19	W070400009-22	Spring	弹簧	6	
20	W070400009-7	Spring seat	弹簧座	6	
21	W070400009-8	Positioning end cap	定位端盖	6	
22	B010410614	Hexagon Screw/M6X14	螺钉 M6x14	12	
23	W070400006-08	Valve Body	阀体	1	
24	W070400009-12	Spring	单向阀弹簧	4	
25	W070400006-09	Double head bolts	双头螺栓 M14X1.5X525	1	
26	B050411412	Nut M14X1.5	螺母 M14X1.5	2	
27	W070400006-10	Double head bolts	双头螺栓 M12X1.25X525	2	
28	B050410001	Nut M12X1.25	螺母 M12X1.25	4	
29	W070400009-10	Return valve body	回油阀片	1	
30	B160131222	O-ring	O 型圈/22x2.4	1	
31	B160120236	O-ring 23.6X2.65	O 形密封圈 23.6x2.65	1	
32	W070400006-11	Screw plug	螺塞	1	
33	W070400009-13	Check Valve	单向阀	8	
34	B160110875	O-ring 87.5X3.55	O 形密封圈 87.5X3.55	9	
35	W070400009-16	ype 0 stem	O 型阀杆	6	
36	B160121185	O-ring	O 型圈 18.64x3.53	12	
37	W070400009-21	Nylon retaining ring	尼龙挡圈 25x3.2	12	
38	W070400009-15	Backing Plate	垫板	12	

39	B010710610	Half Round head screw	螺钉 M6x10	12	
----	------------	-----------------------	----------	----	--


回转油缸 SWING CYLINDER12

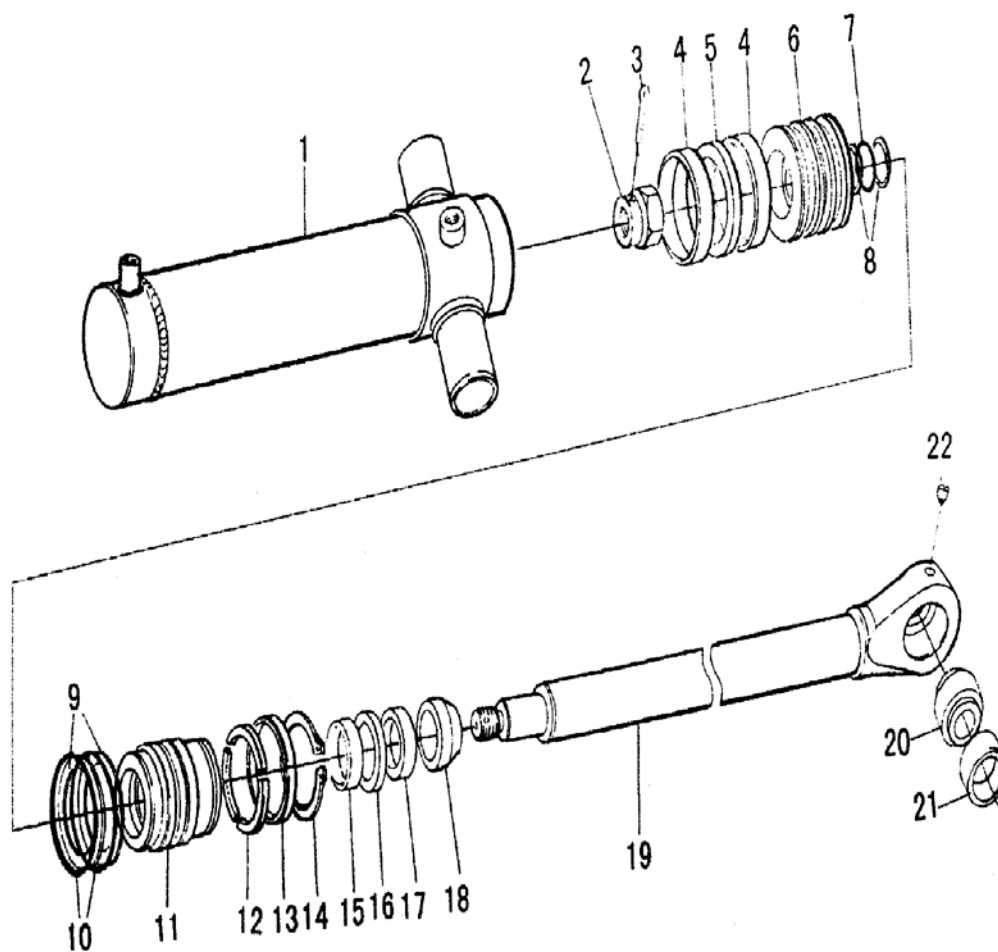

回转油缸 SWING CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025175-1	Cylinder block assembly	缸体组件	1	
2	W053025175-2	Lock nut	锁紧螺母	1	
3	W053025175-3	Pin	开口销	1	
4	W053025175-4	Guide ring	导向环	2	
5	W053025176-1.1	Circle of Grays	格莱圈	1	
6	W053025175-6	Piston	活塞	1	
7	B160130316	O-ring 32.5X2.65	O 型圈 32.5X2.65	1	
8	W053025175-8	Block Circle D32X27X1.5	挡圈 D32X27X1.5	1	
9	W053025175-9	Block Circle D80X75X1.5	挡圈 D80X75X1.5	2	
10	B160131020	O-ring 100X2.65	O 型圈 100X2.65	2	
11	W053025175-11	Guide sleeve	导向套	1	
12	W053025175-12	Snap key	卡键	3	
13	W053025175-13	Block sleeve	挡套	1	
14	W053025175-14	Axle collar	轴用挡圈	1	
15	W053025175-15	Axle collar	导向环	1	
165	W053025176-1.2	Steé Feng	斯特封	1	
17	W053025176-1.3	U-RING	U 型密封圈	1	
18	W053025176-1.4	Dust Ring	防尘圈	1	
19	W053025175-19	Piston rod	活塞杆	1	
20	B120524028	Joint Bearing 40	关节轴承 40	1	
21	B070156202	Block sleeve 62	挡圈 62	1	
22		Oil Cup	油杯	1	
	W053025176	Sealed package	密封包	1	


挖掘缸 BACKHOE CYLINDER

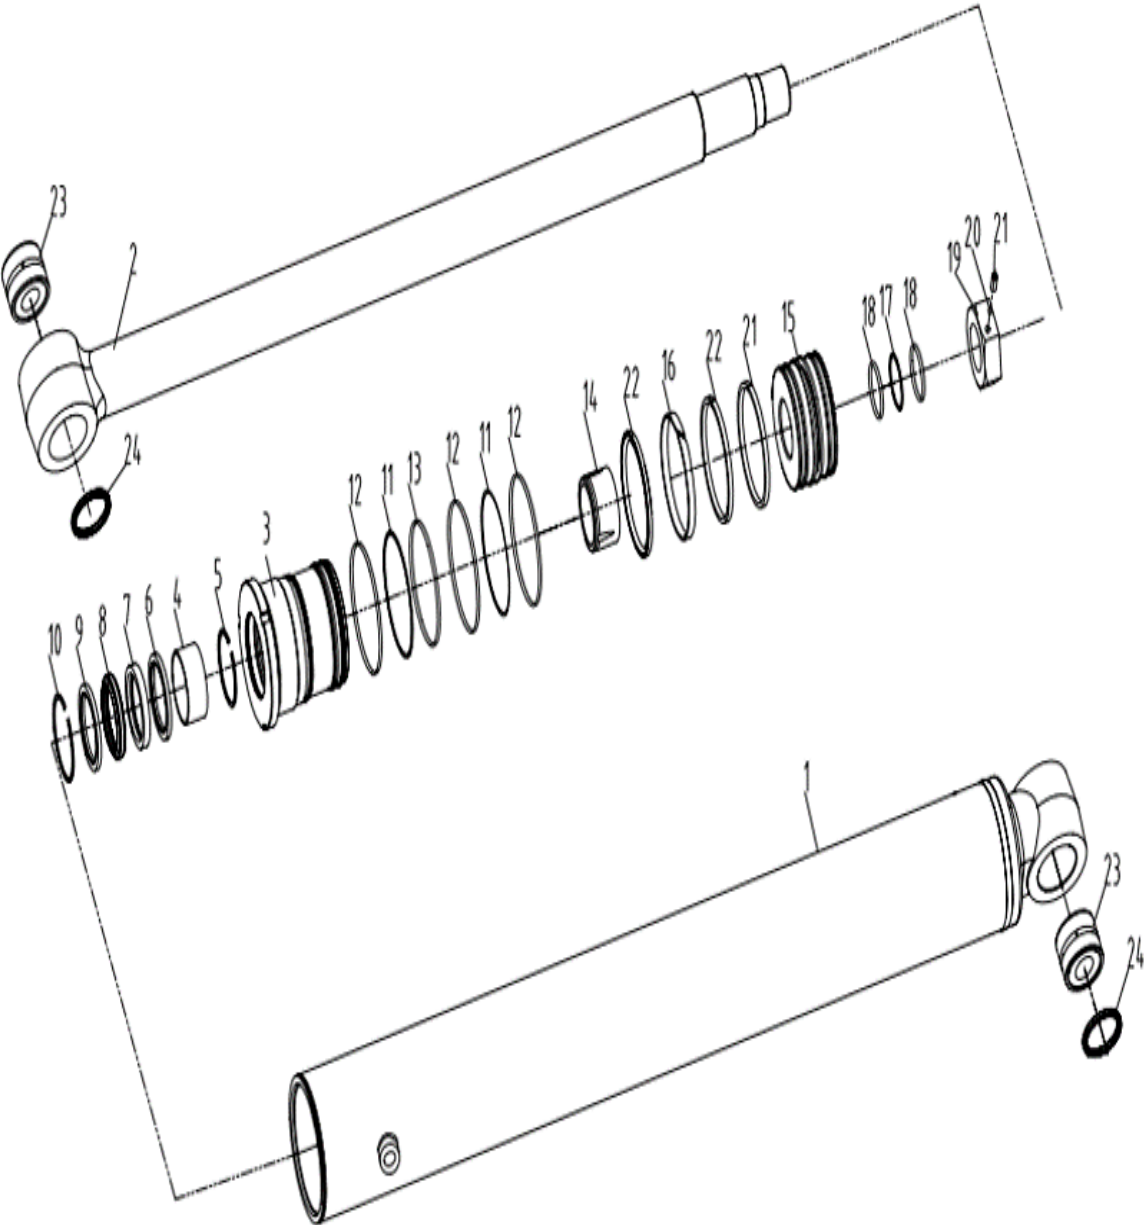

挖掘缸 BACKHOE CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025055-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025055-3	Piston rod assembly	活塞杆总成	1	
3	W053025055-4	Cylinder head	缸盖	1	
4	W053025055-5	Bushings	衬套	1	
5	W053025055-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025051-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025051-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025051-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025051-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025055-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160110840	O-rings	O 形圈 84.4X3.1	2	
12	W053025055-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160120900	O- Ring	O 形圈 90X2.65	1	
14	W053025055-9	Buffer sleeve	缓冲套	1	
15	W053025055-10	Piston	活塞	1	
16	W053025051-1.5	Seals-piston rod	密封件-活塞	1	
17	B160110346	O- Ring	O 形圈 34.4X3.1	1	
18	W053025055-11	Stop ring-o-ring	挡圈-O 形圈	2	
19	W053025055-12	Piston back mother	活塞背母	1	
20	W053025055-16	Steel Ball	钢球	1	
21		Screw	螺钉	2	
22	W053025055-18	Support Ring	支承环	1	
23	B120524028	Joint Bearing	关节轴承 40	2	
24	B070156202	Elastic retaining ring	弹性挡圈 62	2	
25	W053025051	Seal repair kit	密封件维修包	1	


斗杆油缸 CROWD CYLINDER

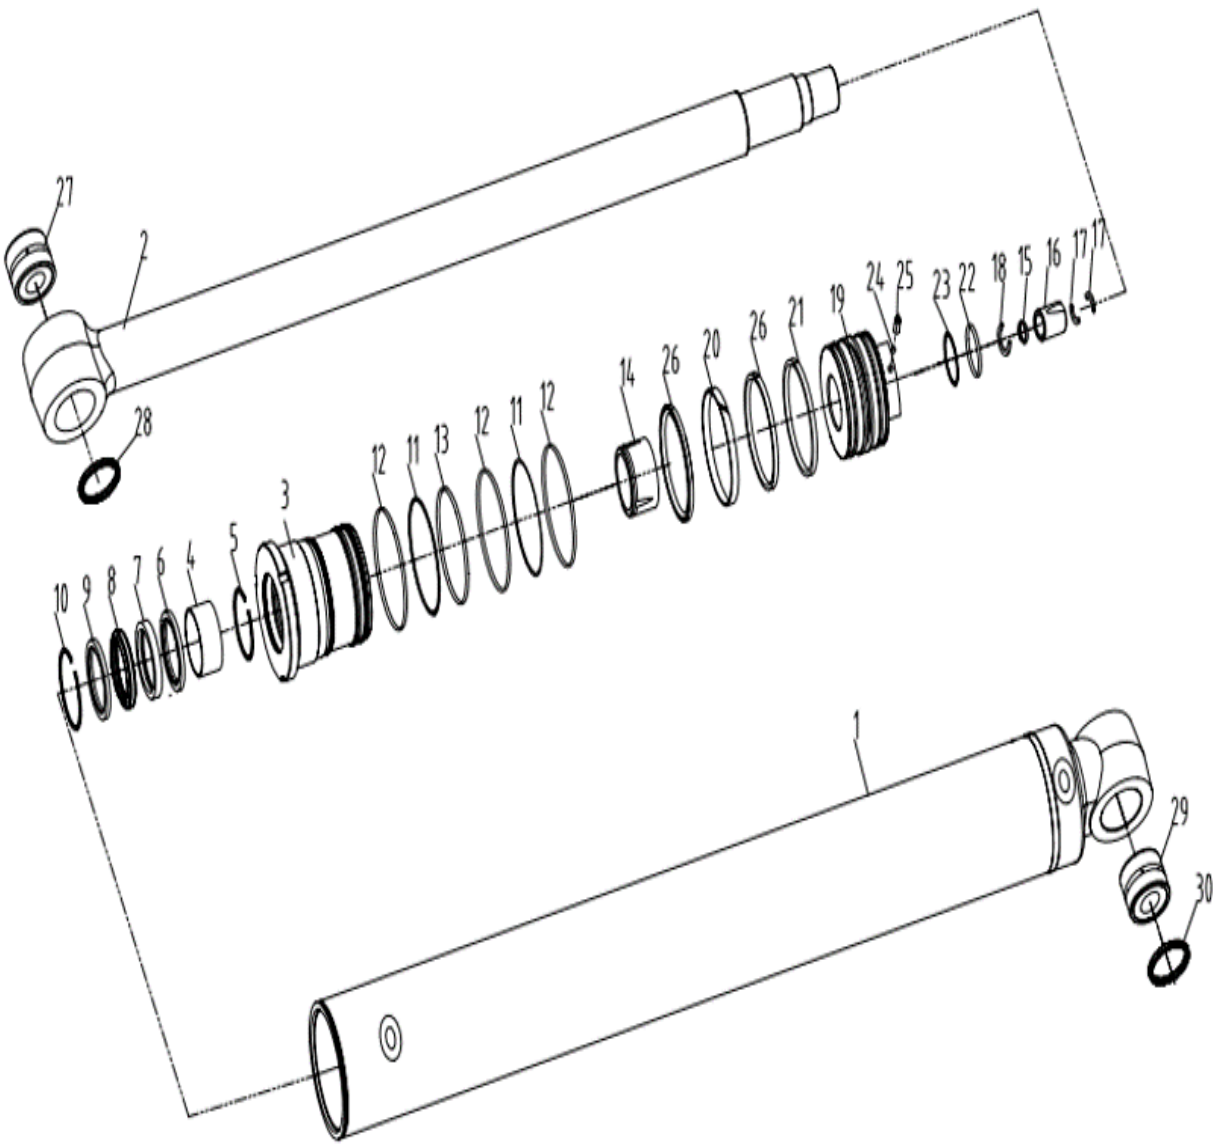

斗杆油缸 CROWD CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025850-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025850-3	Piston rod assembly	活塞杆总成	1	
3	W053025850-4	Cylinder head	缸盖	1	
4	W053025850-5	Bushings	衬套	1	
5	W053025850-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025850-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025850-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025850-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025850-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025850-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160131190	O-rings	O 形圈 19.4X3.1	2	
12	W053025850-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160131252	O- Ring	O 形圈 125X2.65	1	
14	W053025850-9	Buffer sleeve	缓冲套	1	
15	W053025850-1.5	Air Cushion Seal	气垫密封	1	
16	W053025850-10	Buffer sleeve	缓冲套	1	
17	W053025850-11	Stop rings	止动环	2	
18	W053025850-12	Stop rings	止动环	1	
19	W053025850-13	Piston	活塞	1	
20	W053025850-1.6	Seals-piston rod	密封件-活塞	1	
21	W053025850-14	Environmental pollution	纳污环	1	
22	B160110346	O- Ring	O 形圈 34.4X3.1	1	
23	W053025850-15	Stop ring-o-ring	挡圈-O 形圈	1	
24	W053025850-16	Steel Ball	钢球	1	
25		Screw	螺钉	1	
26	W053025850-18	Support Ring	支承环	2	
27	B120525035	Joint Bearing	关节轴承 50	1	
28	B070157503	Elastic retaining ring	弹性挡圈 75	1	
29	B120526044	Joint Bearing	关节轴承 60	1	
30	B070159003	Elastic retaining ring	弹性挡圈 90	1	
31	W053025850-1	Seal repair kit	密封件维修包	1	


大臂油缸 BOOM CYLINDER

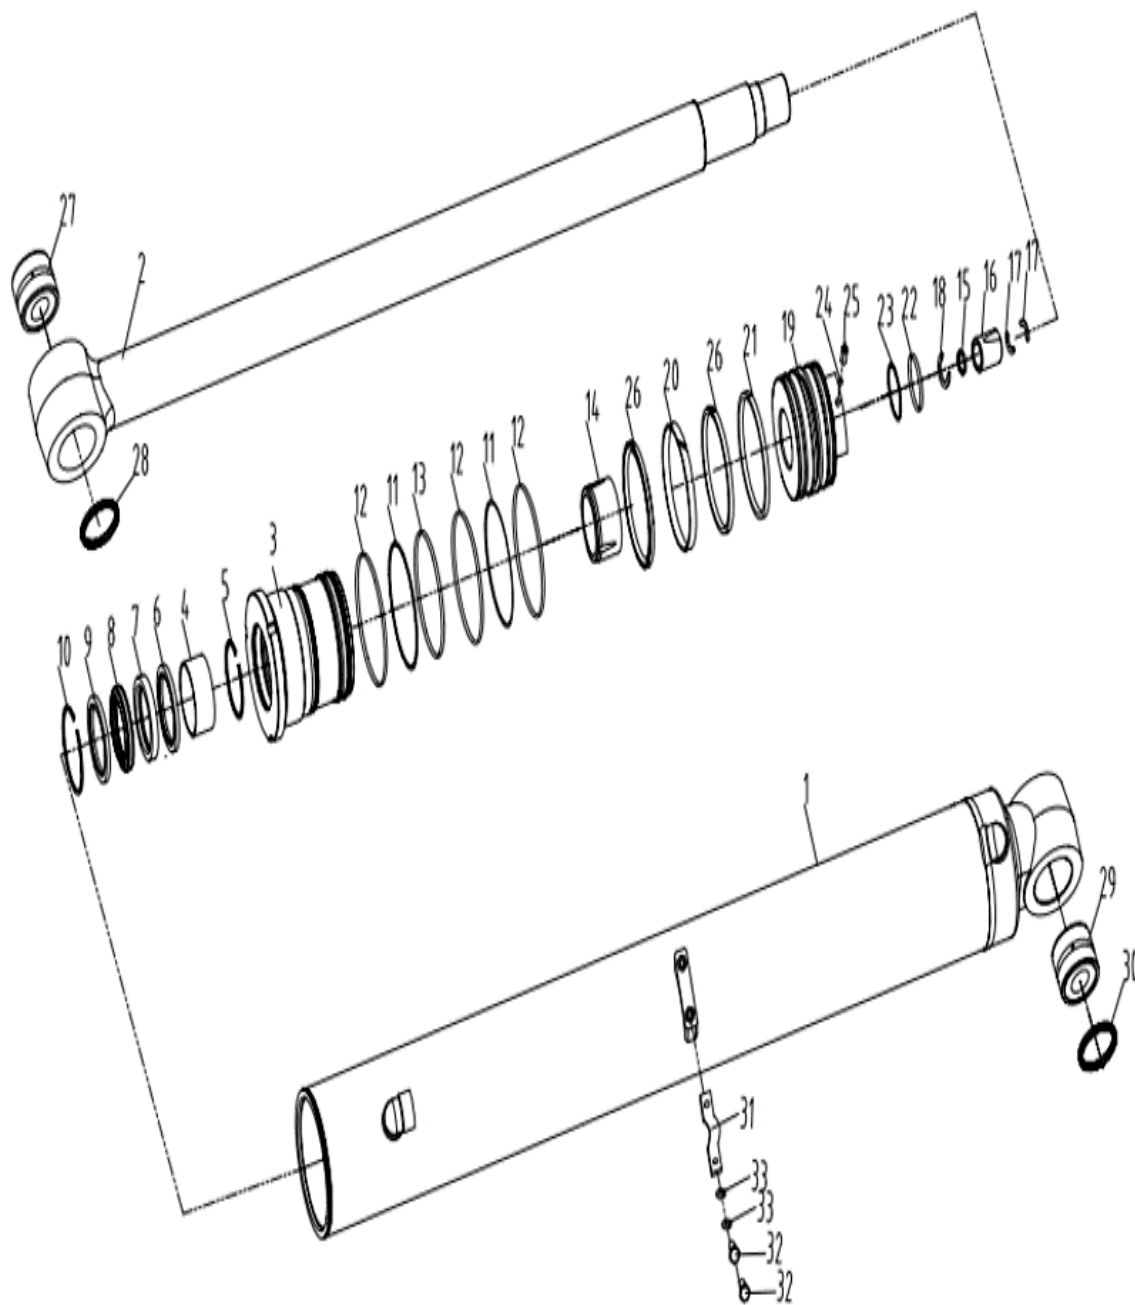

大臂油缸 BOOM CYLINDEDR

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025800-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025800-3	Piston rod assembly	活塞杆总成	1	
3	W053025800-4	Cylinder head	缸盖	1	
4	W053025800-5	Bushings	衬套	1	
5	W053025800-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025800-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025800-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025800-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025800-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025800-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160131190	O-rings	O 形圈 119.4X3.1	2	
12	W053025800-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160131252	O- Ring	O 形圈 125X2.65	1	
14	W053025800-9	Buffer sleeve	缓冲套	1	
15	W053025800-1.5	Air Cushion Seal	气垫密封	3	
16	W053025800-10	Buffer sleeve	缓冲套	1	
17	W053025800-11	Stop rings	止动环	2	
18	W053025800-12	Stop rings	止动环	1	
19	W053025800-13	Piston	活塞	1	
20	W053025800-1.6	Seals-piston rod	密封件-活塞	1	
21	W053025800-14	Environmental pollution	纳污环	1	
22	B160110346	O- Ring	O 形圈 34.4X3.1	1	
23	W053025800-15	Stop ring-o-ring	挡圈-O 形圈	1	
24	W053025800-16	Steel Ball	钢球	1	
25		Screw	螺钉	1	
26	W053025800-18	Support Ring	支承环	2	
27	B120525035	Joint Bearing	关节轴承 50	1	
28	B070157503	Elastic retaining ring	弹性挡圈 75	1	
29	B120526044	Joint Bearing	关节轴承 60	1	
30	B070159003	Elastic retaining ring	弹性挡圈 90	1	
31	W053025800-19	Pipe Clip	管夹	1	
32	B040710816	Bolts	螺栓 M8×16	2	
33	B061620816	Gasket	垫片	2	
34	W053025800-1	Seal repair kit	密封件维修包	1	


支腿油缸 STABILIZER CYLINDER

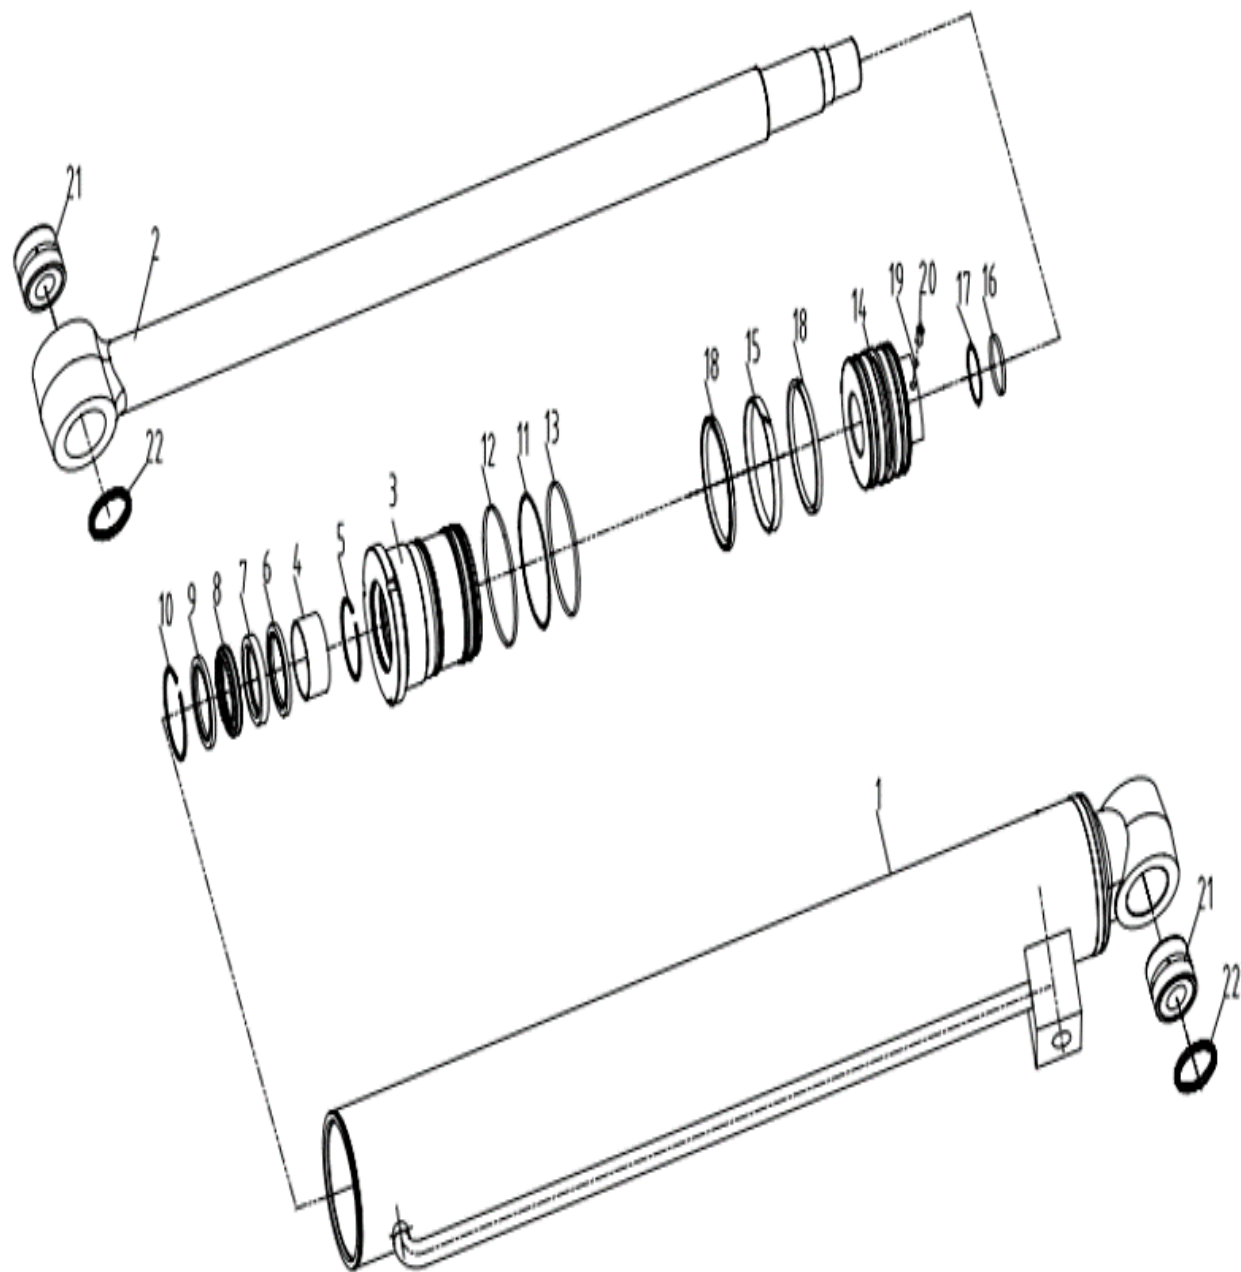

支腿油缸 STABILIZER CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025040-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025040-3	Piston rod assembly	活塞杆总成	1	
3	W053025040-4	Cylinder head	缸盖	1	
4	W053025040-5	Bushings	衬套	1	
5	W053025040-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025041-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025041-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025041-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025041-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025040-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160130740	O-rings	O 形圈 74.4X3.1	2	
12	W053025040-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160130840	O- Ring	O 形圈 80X2.65	1	
14	W053025040-9	Buffer sleeve	缓冲套	1	
15	W053025040-10	Piston	活塞	1	
16	W053025040-1.5	Seals-piston rod	密封件-活塞	1	
17	B160140540	O- Ring	O 形圈 54.4X3.1	1	
18	W053025040-11	Stop ring-o-ring	挡圈-O 形圈	2	
19	W053025040-12	Support Ring	支承环	2	
20	W053025040-16	Steel Ball	钢球	1	
21		Screw	螺钉	1	
22	W053025040-18	Support Ring	支承环	1	
23	B120524028	Joint Bearing	关节轴承 40	2	
24	B070156202	Elastic retaining ring	弹性挡圈 62	2	
25	W053025041	Seal repair kit	密封件维修包	1	


夹紧油缸 GRPING CYINDER

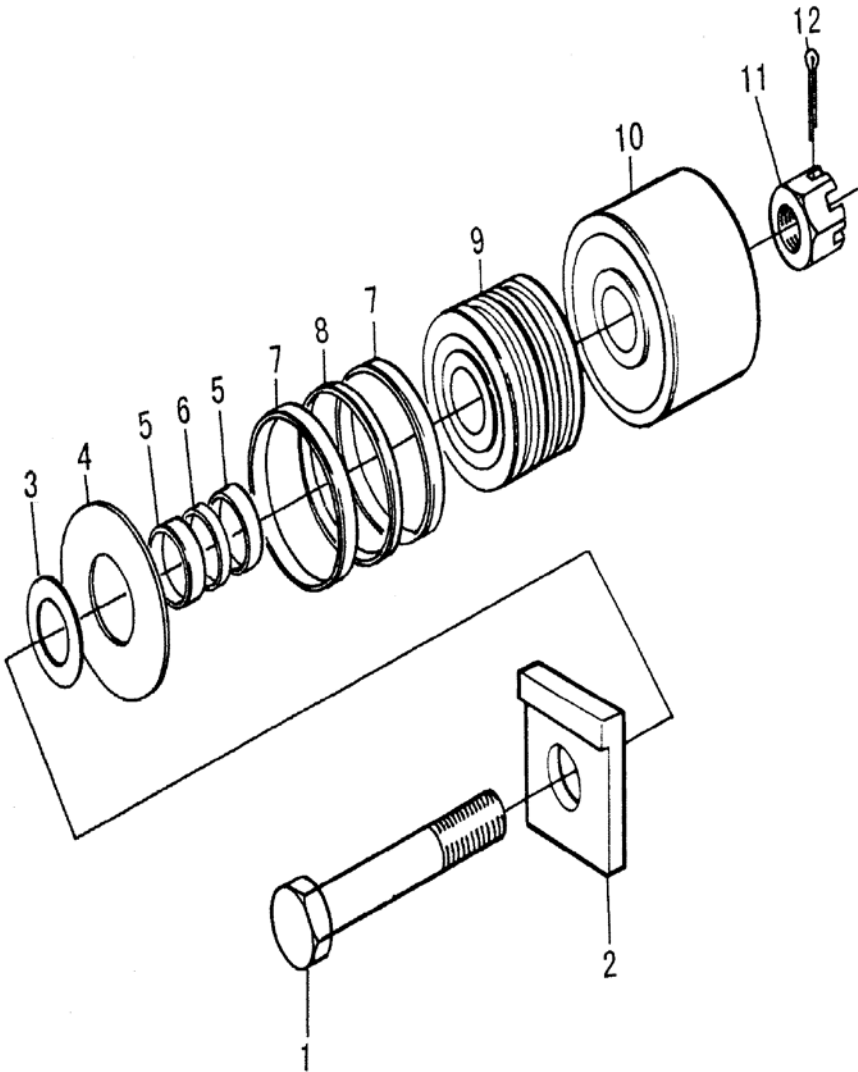

夹紧油缸 GRPING CYINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025012	Bolt M36X2	螺栓	1	
2	Z050030830	Skateboards	滑板	1	
3	W053025010-2	PAD 1	垫 1	1	
4	W053025010-3	PAD 2	垫 2	2	
5		Retaining ring	挡圈	1	
6	W053025011	Seals	密封件	2	
7	W053025010-6	Support Ring	支撑环	1	
8	W053025011	Seals	密封件	1	
9	W053025010-8	Piston	活塞	1	
10	W053025010-9	Cylinder barrel	缸筒	1	
11	W053025010-10	Slotted nut	开槽螺母	1	
12	B080330550	Sell 5X50	销 5X50		


伸缩油缸 RETRACTABLE CYLINDER

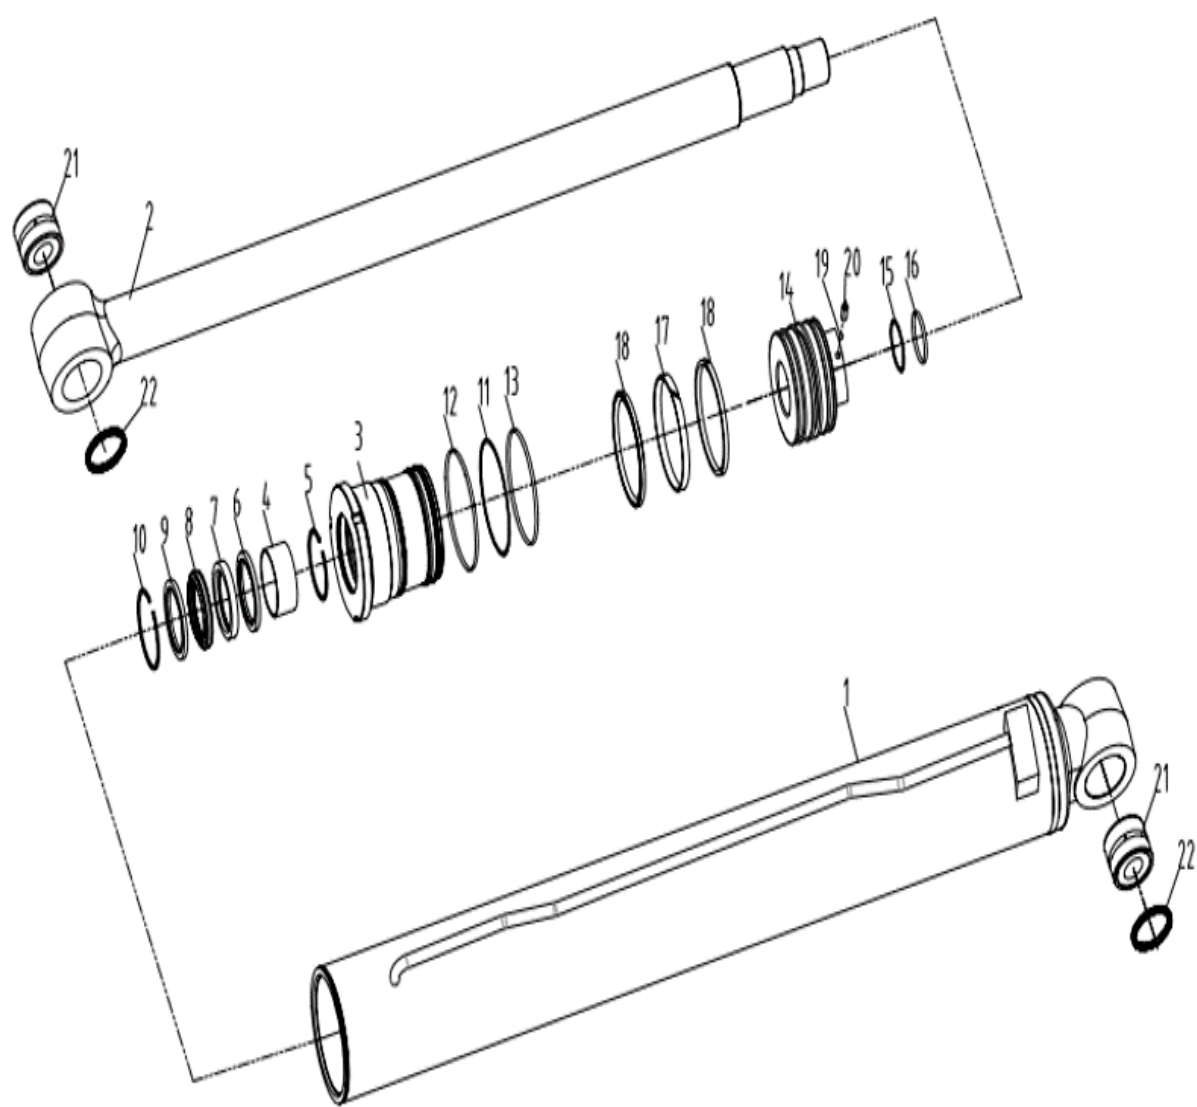

伸缩油缸 RETRACTABLE CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025151-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025151-3	Piston rod assembly	活塞杆总成	1	
3	W053025151-4	Cylinder head	缸盖	1	
4	W053025151-5	Bushings	衬套	1	
5	W053025151-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025152-1	Seals-buffers	密封件-缓冲	1	
7	W053025152-2	Seals-piston rod	密封件-活塞杆	1	
8	W053025152-3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025152-4	Seals-dust proof	密封件-防尘	1	
10	W053025151-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160110840	O-rings	O 形圈 84X3.1	1	
12	W053025151-8	Stop ring-o-ring	挡圈-O 形圈	1	
13	B160120900	O- Ring	O 形圈 90X2.65	1	
14	W053025151-9	Piston	活塞	1	
15	B160130590	O- Ring	O 形圈 59.4X3.1	1	
16	W053025151-10	Stop ring-o-ring	挡圈-O 形圈	1	
17	W053025151-11	Seals-pistons	密封件-活塞	1	
18	W053025151-12	Support Ring	支承环	2	
19	W053025151-13	Steel Ball	钢球	1	
20		Screw	螺钉	1	
21	B120524028	Joint Bearing	关节轴承 40	2	
22	B070156202	Elastic retaining ring	弹性挡圈 62	2	
23	W053025152	Seal repair kit	密封件维修包	1	


摆臂组合 BACKHOE SWING ARM MODULE

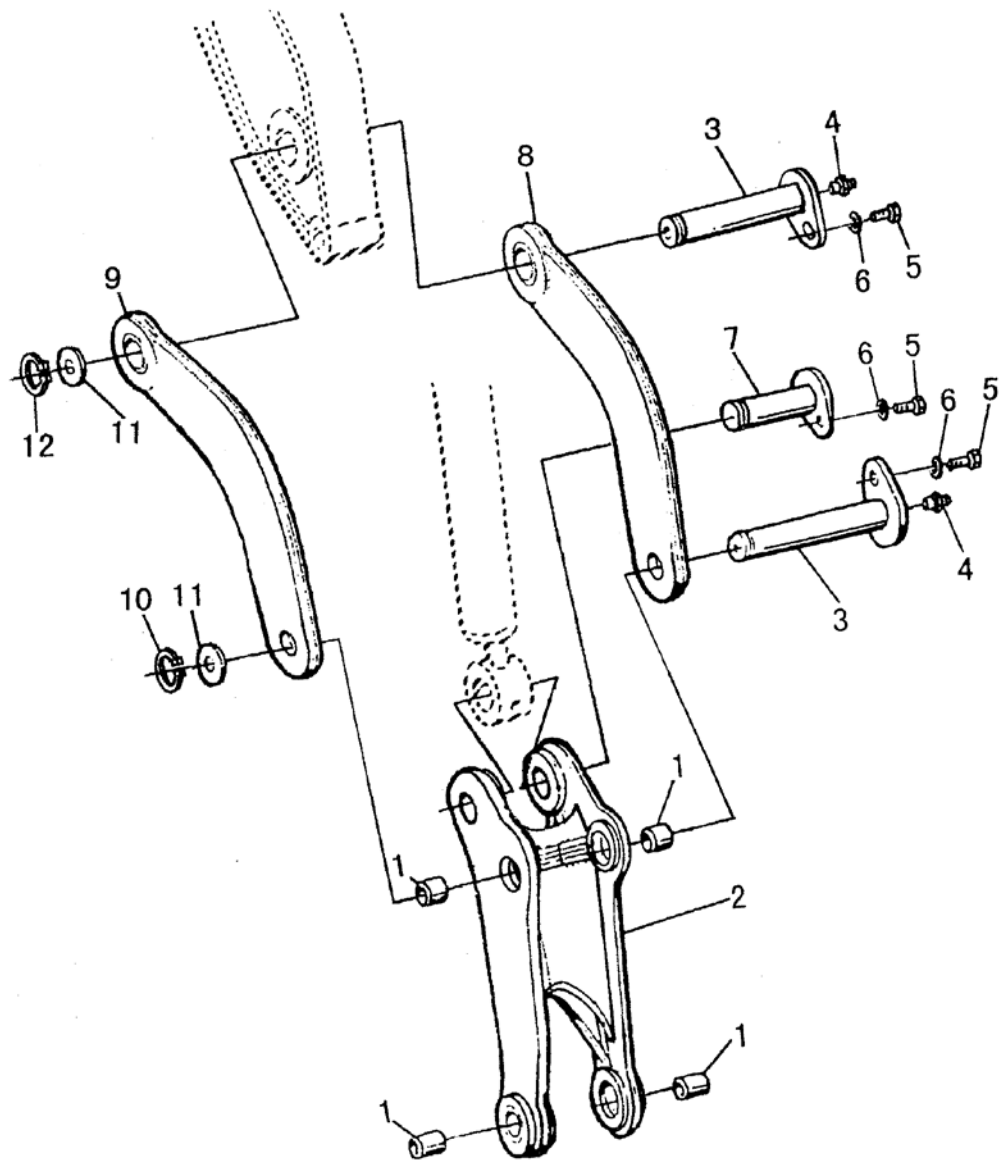

摆臂组合 BACKHOE SWING ARM MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	Z050260750	Swing arm bush	摆臂套	4	
2	Z050260605	Swing arm	摆臂	1	
3	Z050260790	Pin for swing garm	摆臂销轴总成	2	
4	B150101000	Oil cup M10X1	油杯 M10X1	10	
5	B040911235	Bolt M12X35	螺栓 M12X35	6	
6	B060211203	Washer 12	垫圈 12	6	
7	Z050260700	Pin for swing garm	摆臂销轴总成	1	
8	Z050260730	Ear-plate	耳板	1	
9	Z050260740	Ear-plate	耳板	1	
10	B070255002	Stop Ring, 50	挡圈 50	2	
11	Z050260820	Adjustment Pads	调整垫	2	


挖斗组合 BACKHOE BUCKET MODULE

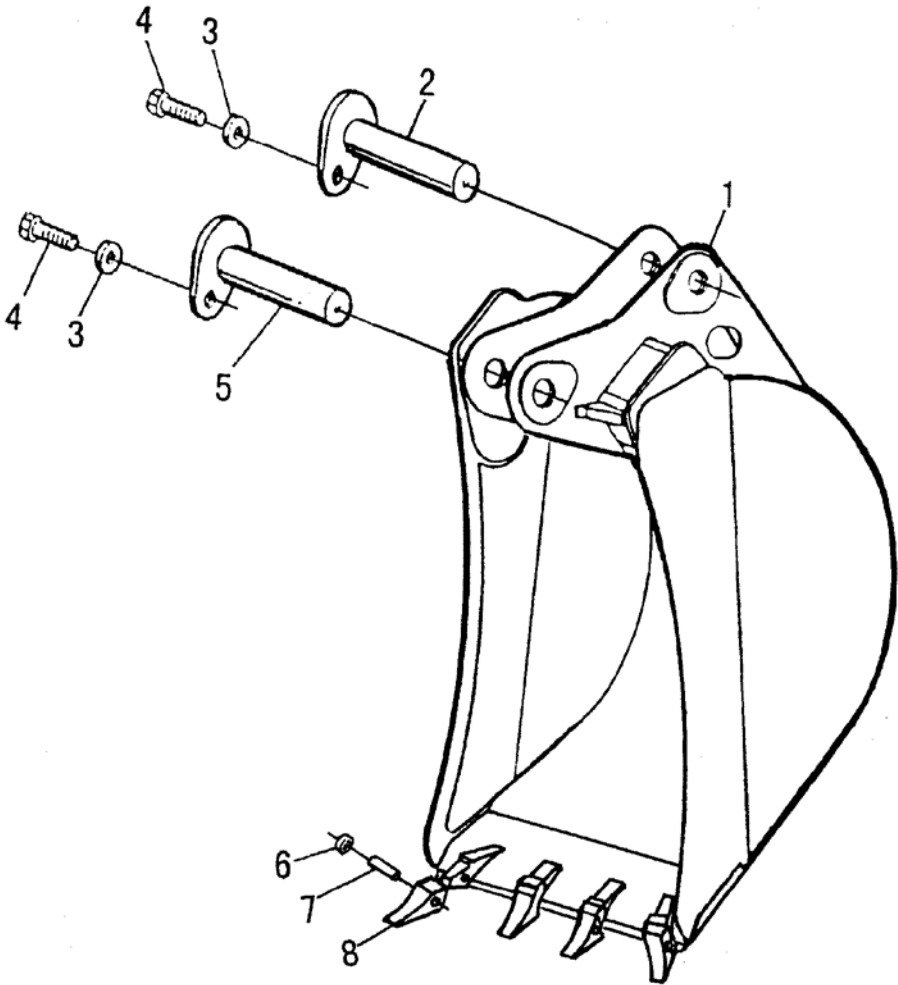

挖斗组合 BACKHOE BUCKET MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	Z061260001	Bucket	挖斗（标准）	1	
2	Z050260760	Lower pin shaft	挖斗下销轴总成	1	
3	B042521235	Bolt M12X35	六角法兰面螺栓	2	
4	B060111203	Washers	垫圈	2	
5	Z050260850	Upper pin shaft	挖斗上销轴总成	1	
6	Z050260520	Clip	挡圈(轴用)	4	
7	Z050260510	Pin	销	4	
8	Z050260500	Bucket teeth	齿尖	4	


挖掘大臂组合 ACKHOE BOOM MODULE

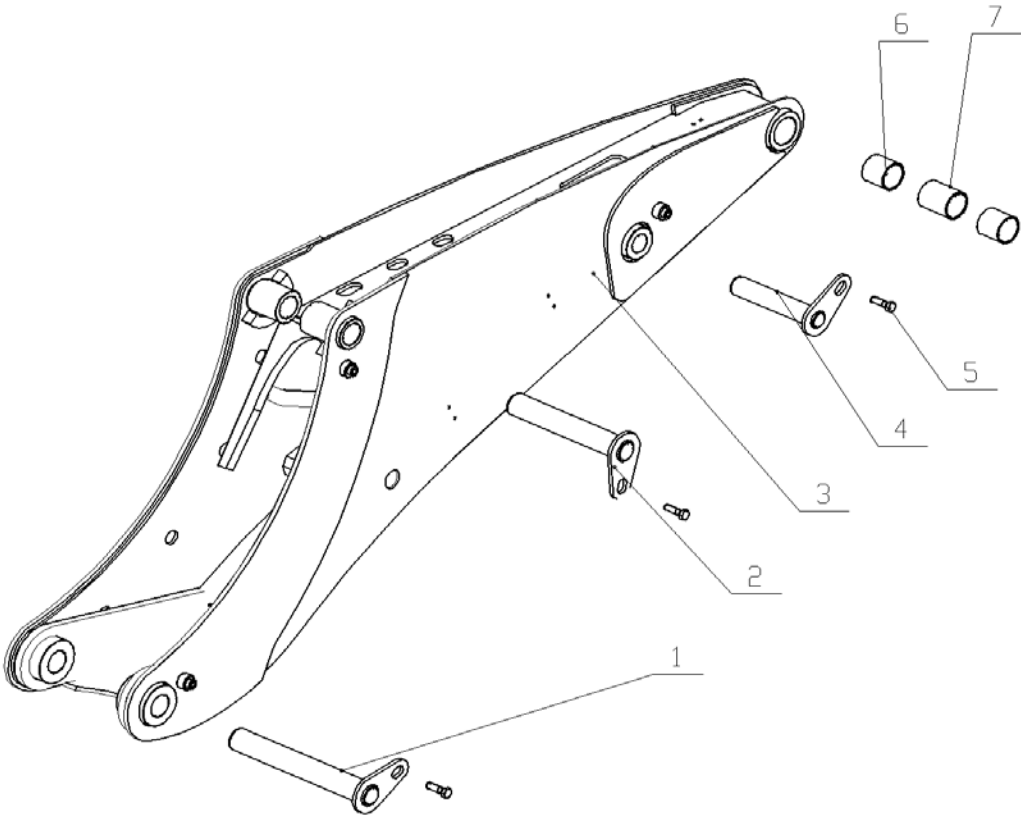

挖掘大臂组合 BACKHOE BOOM MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	Z062260390A	Lower Arm pin shaft assembly	大臂下销轴组件	1	
2	Z062260400A	Lower pin shaft of bucket rod cylinder	斗杆缸下销轴	1	
3	Z062260012	Big Arms	大臂	1	
4	Z062260411A	ARM cylinder upper pin assembly	大臂缸上销轴组件	1	
5	B042521625	Bolt M16X25	螺栓 M16X25	3	
6	Z050260940	Bushing II	斗杆轴套 II	2	
7	Z050260930	Bucket Rod Spacer III	斗杆隔套III	1	

伸缩斗杆组合 TELESCOPIC ROD

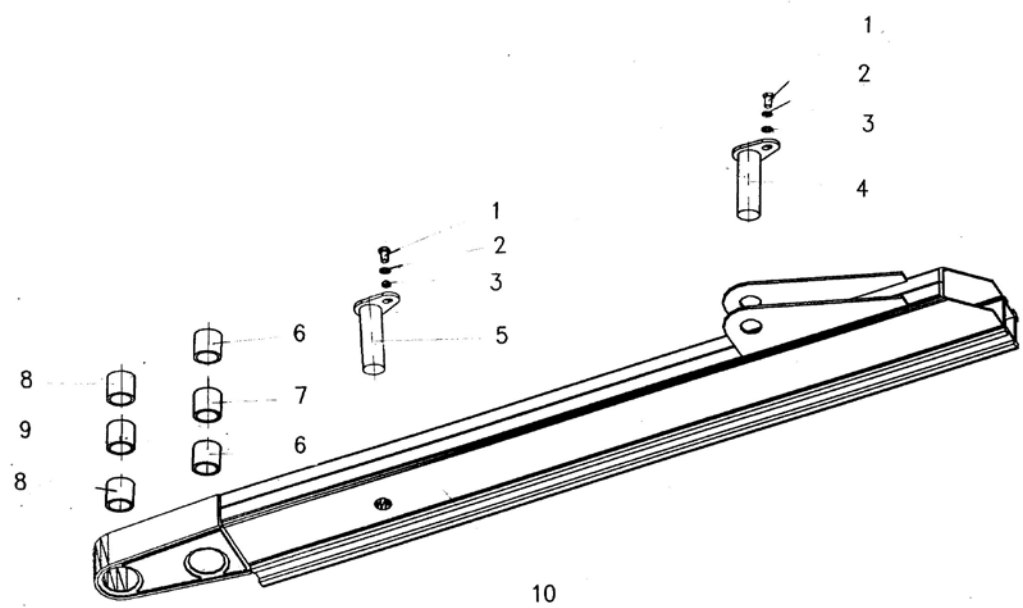


伸缩斗杆组合 TELESCOPIC ROD

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	B040911235	Bolt M12*35	螺栓 M12X35	2	
2	B060211203	Washer 12	垫圈 12	2	
3	B060111203	Spring washerR 12	弹簧垫圈 12	2	
4	Z050260925	Excavating cylinder on pin shaft	挖掘缸上销轴	1	
5	Z050260505	Telescopic cylinder lower pin shaft	伸缩缸下销轴	1	
6	Z050260750	ARM swing	摆臂套	2	
7	Z050260840	Bucket rod spacer	斗杆隔套	1	
8	Z050260880	Bushing of bucket rod	斗杆轴套	2	
9	Z050260890	Bucket rod spacer	斗杆隔套	1	
10	Z050260346	Telescopic arm bucket rod	伸缩臂斗杆	1	

伸缩臂座体组合


TELESCOPIC BOOM

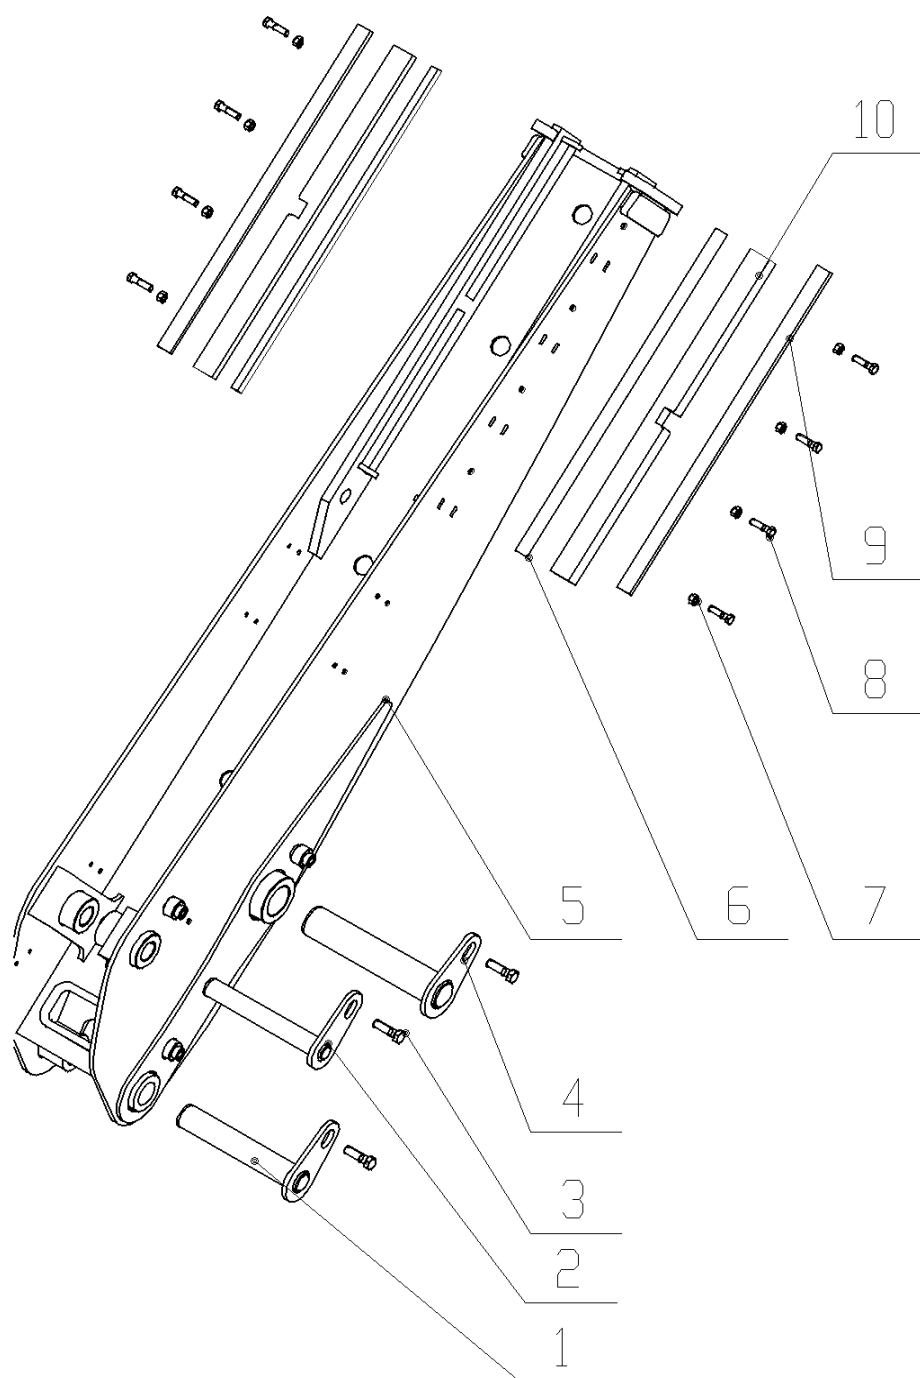

伸缩臂座体组合 TELESCOPIC BOOM

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	Z062260420A	Pin Assembly on bucket rod cylinder	斗杆缸上销轴组件	1	
2	Z062260440A	Telescopic cylinder rear pin assembly	伸缩缸后销轴组件	1	
3	B042521625	Bolt M16X25	螺栓 M16X25	3	
4	Z062260430A	Upper arm pin shaft assembly	大臂上销轴组件	1	
5	Z062260210A	Bucket rod slide frame	斗杆滑架	1	
6	Z050261684	Nylon slider	尼龙滑块	2	
7	B050111212	Nots M12	螺母 M12	8	
8	B042521235	Bolt M12×35	螺栓 M12×35	8	
9	Z050261683	Nylon slider	尼龙滑块	2	
10	Z050260499	Slider	滑块	2	


摆动架总成 OSCILLATION FRAME ASSEMBLY

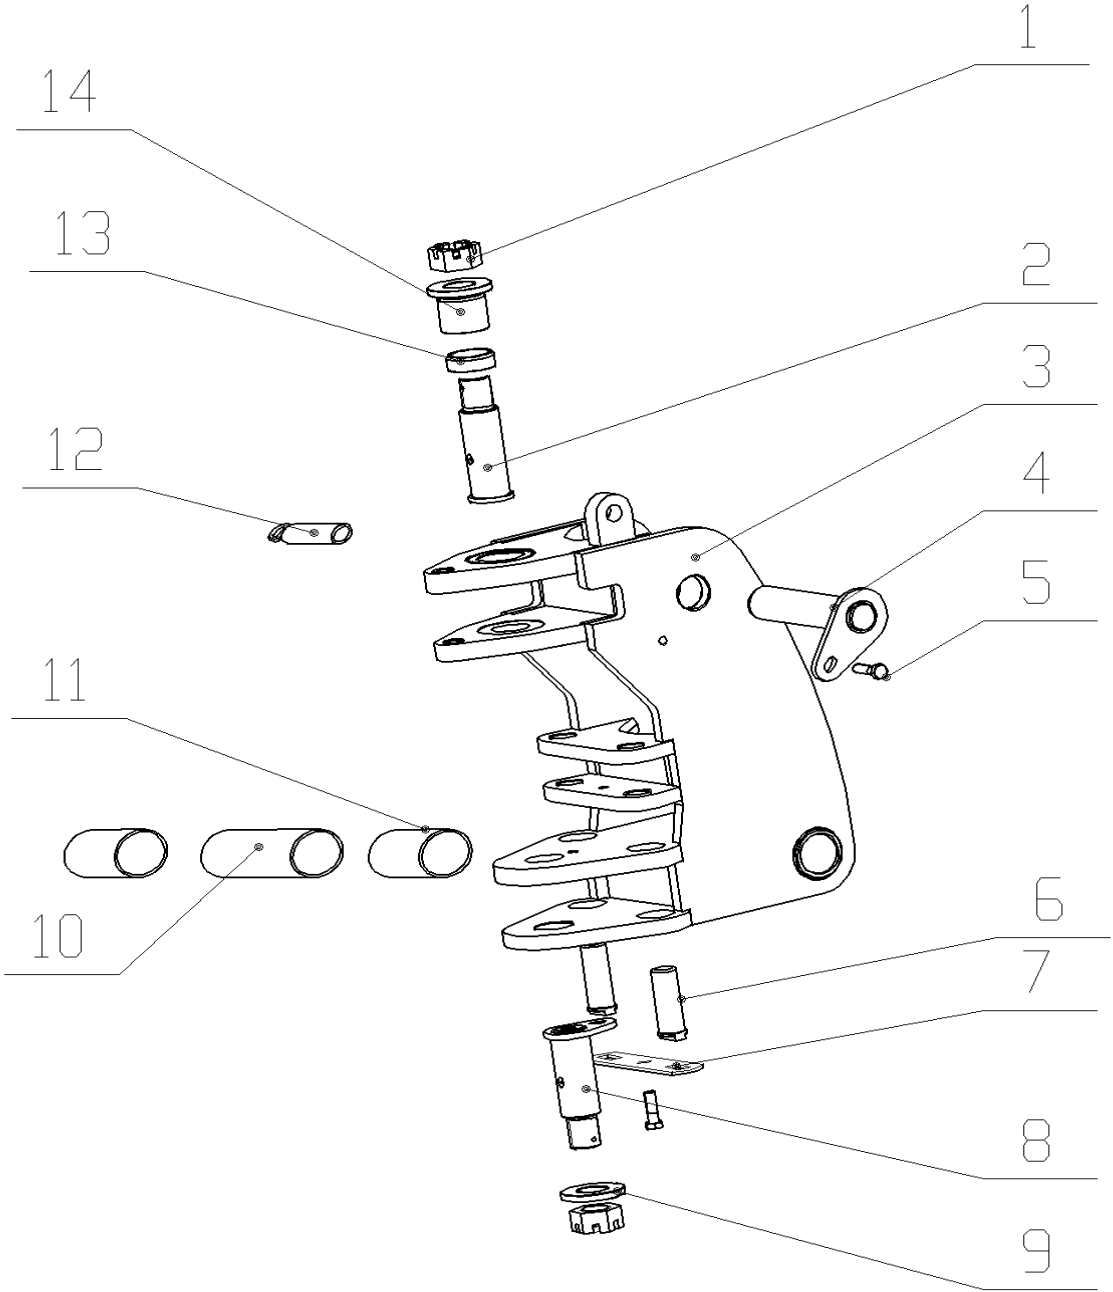

摆动架总成 OSCILLATION FRAME ASSEMBLY

序号 ITEM	零件号 PART NO.	零件名称	Part Name	数量 Q'TY	备注 Remark
1	Z310390070	Nuts M48 × 2	螺母 M48×2	2	
2	Z061240170	Pin shaft with upper hinge	上铰接销轴	1	
3	Z061240012A	Slewing frame	回转架	1	
4	Z061240101A	Upper arm cylinder lower pin assembly	大臂缸下销轴组件	1	
5	B042521635	Bolt M16×35	螺栓 M16×35	2	
6	Z050240181	Rotary cylinder front pin shaft	回转缸前销轴	2	
7	B042521235	Fixed shaft plate	定轴板	1	
8	Z050240250	Pin shaft with lower hinge	下铰接销轴	1	
9	Z061240191	On the mat	上垫	2	
10	Z061240220	A condom	隔套	1	
11	Z050240261	Slewing frame bushing	回转架衬套	2	
12	Z061240121	Lock pin shaft	锁止销轴	1	
13	Z061240210	Lower support sleeve	下支撑套	1	
14	Z3B00303200	Upper support sleeve	上支撑套	1	


滑动架 SLIDING FRAME

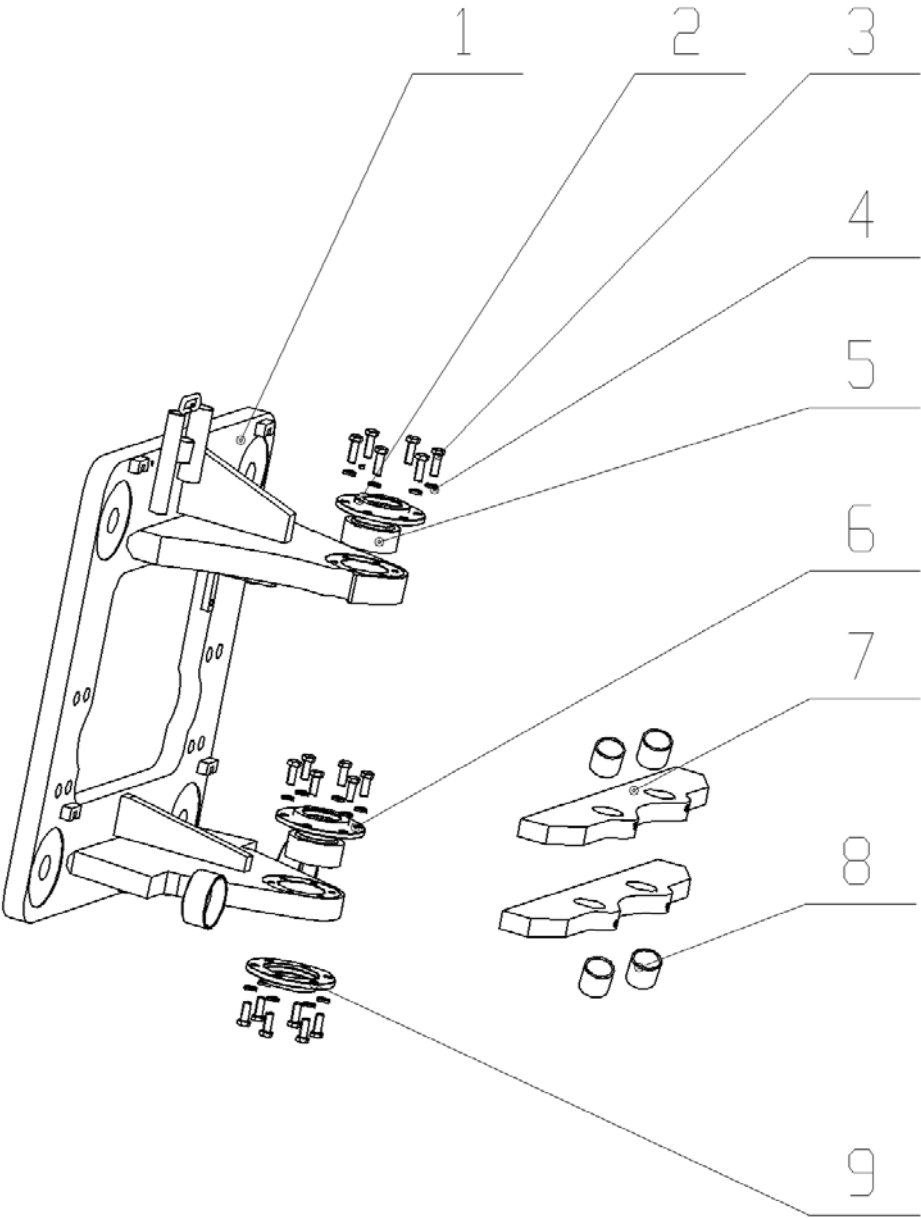

滑动架 SLIDING FRAME

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062340012	Sliding frame	滑动架	1	
2	Z062340160	Upper bearing capSpring	上轴承盖	1	
3	B042521230	Bolt M12×30	螺栓 M12×30	18	
4	B061431201	Washers	垫圈	18	
5	B120526044	Joint Bearing	关节轴承	2	
6	Z3D405005	Lower upper bearing cap	下上轴承盖	1	
7	Z062340120	Cylinder support	油缸支座	2	
8	Z062340170	Rotary cylinder liner	回转缸套	4	
9	Z3D405004	Lower lower bearing cap	下下轴承盖	1	

滑架推拉座 SLIDING FRAME PUSH-PULL SEAT

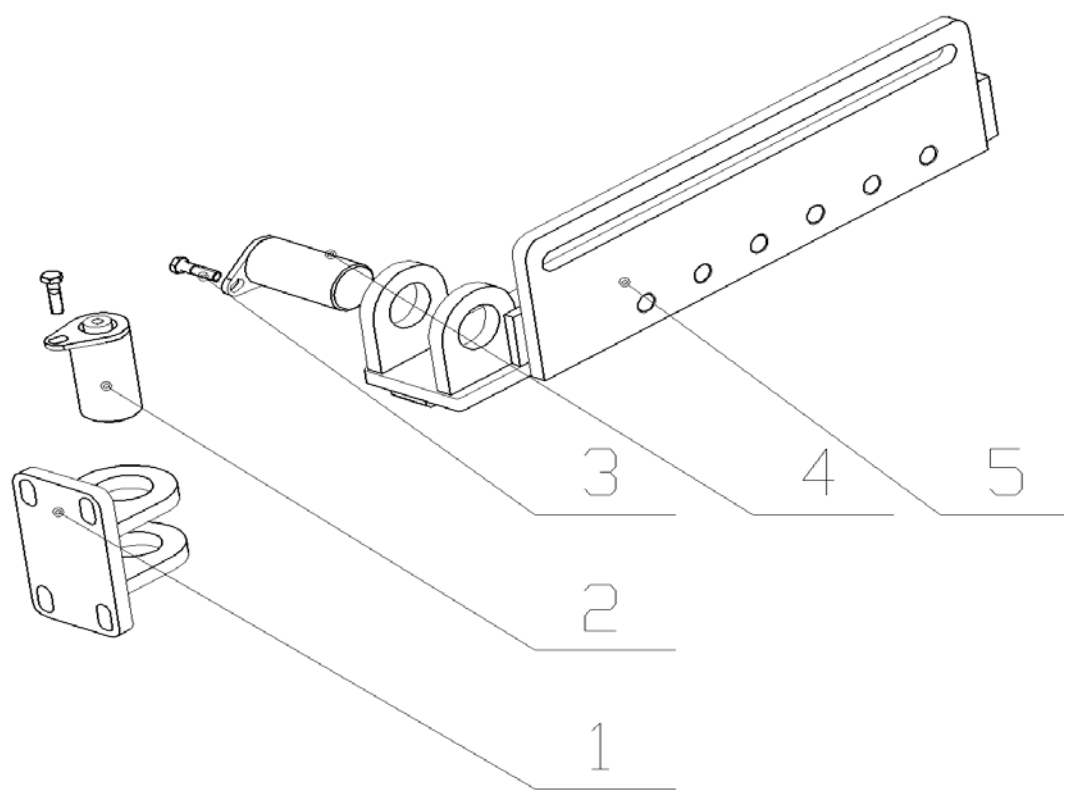


滑架推拉座 SLIDING FRAME PUSH-PULL SEAT

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z050340500	Cylinder block 1	油缸座 1	1	
2	Z050340750	Pin	销轴	1	
3	B040711025	Bolt M10×25	螺栓 M10×25	2	
4	Z050340780	Pin	销轴	1	
5	Z050340550	Cylinder block 2	油缸座 2	1	

柴油机装置

DIESL ENGING MOUNT

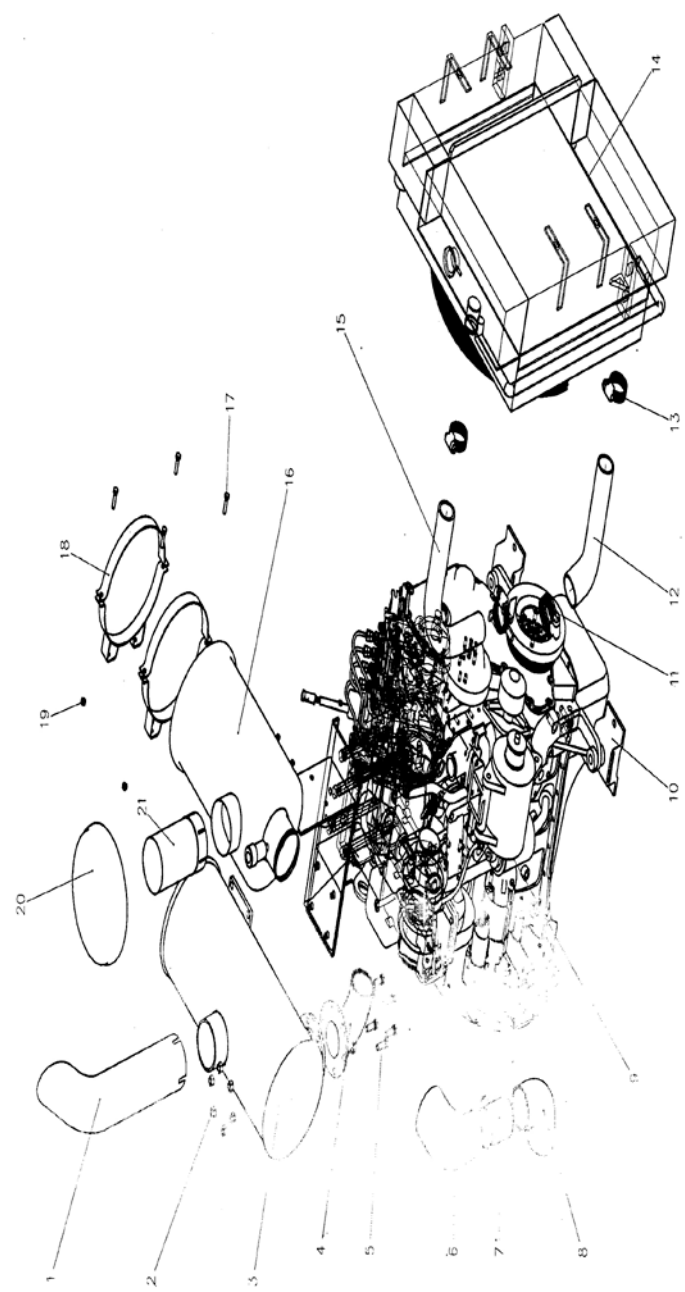


柴油机装置 **DIESL ENGING MOUNT**

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z061350360	Pipe of muffler	消音器尾管	1	
2	HEX NUT M12	Hex nut M12	六角锁紧螺母	6	
3	W017100150	Muffler	消音器	1	
4	W017102680	Inlet pipe of muffler	消音器进气管	1	
5	B040911235	Bolt M12×35	螺栓 M12×35	6	
6	W017102690	Outlet pipe for air filter	空滤器出气管 I	1	
7	Z061350061	Middle pipe	中间接管	1	
8	Z061350050	Outlet pipe for air filter	空滤器接管	1	
9	W017100000	Engine	柴油机	1	
10	Z350140010	Anti-vibration block for engine	柴油机减震垫	2	
11	B190110800	Clamp 70	喉箍 70×89	2	
12	Z065350020	Intake pipe	进水管	1	
13	W017102700	Clamp	喉箍	2	
14	W013900060	Water tanks	水箱	1	
15	Z065350010	Out take pipe	回水管	1	
16	W017100230	Air filter	空滤器	4	
17	W017102710	Bolt	螺栓	1	
18	W017102720	Air filter clamp	空滤器卡箍	2	
19	W017102730	Note	螺母	4	
20	W017100240	Air filter cap	空滤器帽	1	
21	W017102740	Air filter nozzle	空滤器接管	1	

柴油箱

FUEL TANK

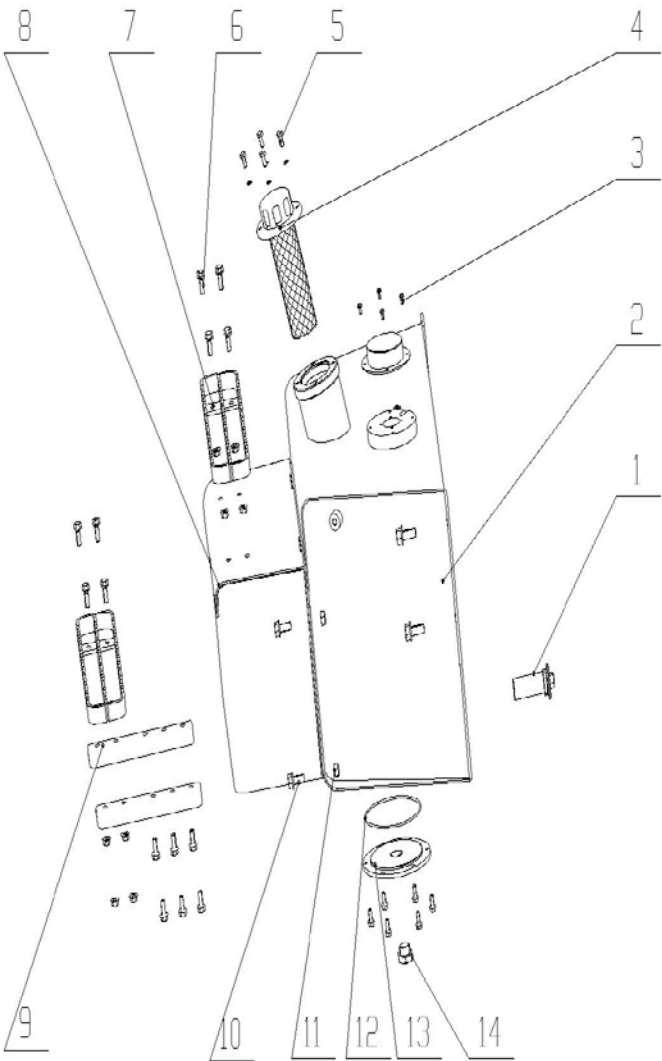


柴油箱

FUEL TANK

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	Z590130190	Oil filter screen	出油滤口总成	1	
2	Z063080012	Diesel tank	柴油箱	1	
3	B040710516	Bolt M5X16	螺栓 M5X16	4	
4	W110001460	Fuel filter	加油滤清器	1	
5	B040910820	Bolt M8X20	螺栓 M8X20	10	
6	B040911035	Bolt M10X35	螺栓 M10X35	12	
7	Z063070231	Pedal Assembly	踏板组件	2	
8	Z063080150	Battery box	电瓶箱	1	
9	Z063070380	Angle iron	角铁	2	
10	B040911635	Bolt M16X35	螺栓 M16X35	4	
11	B052421414	Nut M16	六角螺母 M14	4	
12	B160141451	O- ring 145X2.65	O 型圈 145X2.65	1	
13	Z063070410	Flange plate	法兰盘	1	
14		Drain Plug	放油螺塞	1	

机油箱

ENGINE OIL RESEERVOIR

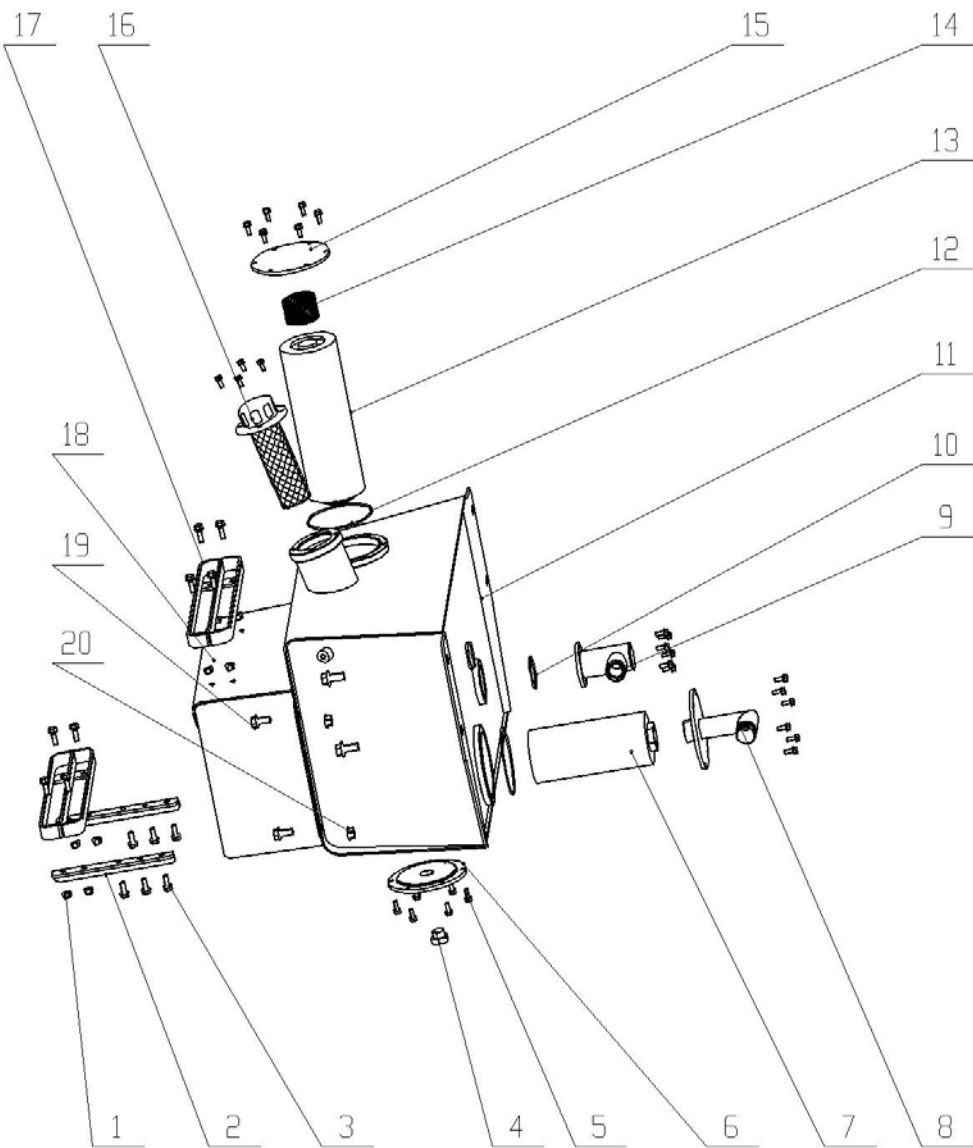


机油箱

ENGINE OIL RESEERVOIR

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	B050211008	Nut M10	螺母 M10	14	
2	Z065080050	Angle iron	角铁	2	
3	B042521035	Bolt M10X35	螺栓 M10X35	14	
4		Screw Block	螺堵	1	
5	B010310820	Bolt M8X20	螺栓 M8X20	28	
6	Z063070410	Clean the flange	清洗法兰	1	
7	W013900050	Oil filter screen	吸油滤网	1	
8	Z063070430	Oil Suction Pipe	吸油管	1	
9	Z061070205	Oil Return Port	回油口	1	
10		O-ring	O 型圈	1	
11	Z063070011	Oil Tank	机油箱体	1	
12		O-ring	O 型圈	2	
13	W013500320	Hydraulic oil filter element	液压油滤芯	1	
14	Z590200130	Spring	弹簧	1	
15	Z590200140	Screen top cover	滤网顶盖	1	
16	W110001460	Fuel filter	加油滤清器	1	
17	Z063070231	Pedal Assembly	踏板组件	2	
18	Z063070270	Battery box	电瓶箱	1	
19	B040911635	Bolt M16X35	螺栓 M16X35	4	
20	B050211614	Nut M10	螺母 M16	4	

发动机罩总成

ENGINE HOOD ASSEMBLY

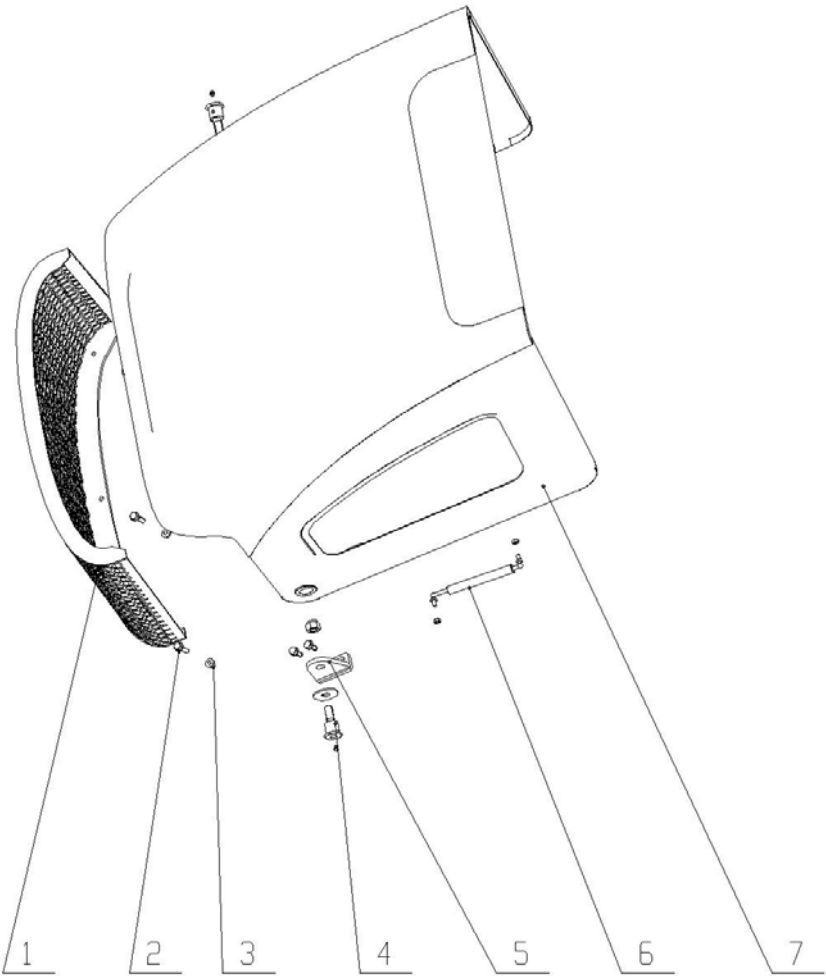


发动机罩总成

ENGINE HOOD ASSEMBLY

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	Z061053010	Fixed cover	固定罩	1	
2	B042521035	Bolt M10X35	六角螺栓 M10X35	7	
3	B050211008	Nut M10	尼龙六角锁紧螺母	7	
4	Z061052261	Axis of rotation	旋转轴	2	
5	Z061050800	Hood swivel seat	机罩旋转座	2	
6	W110060290	Air Spring	气弹簧	2	
7	Z061053103	Rotating hood	旋转罩	1	

支腿夹紧操纵机构

STABILIZER & GRIPING OPERATION MECHANISM

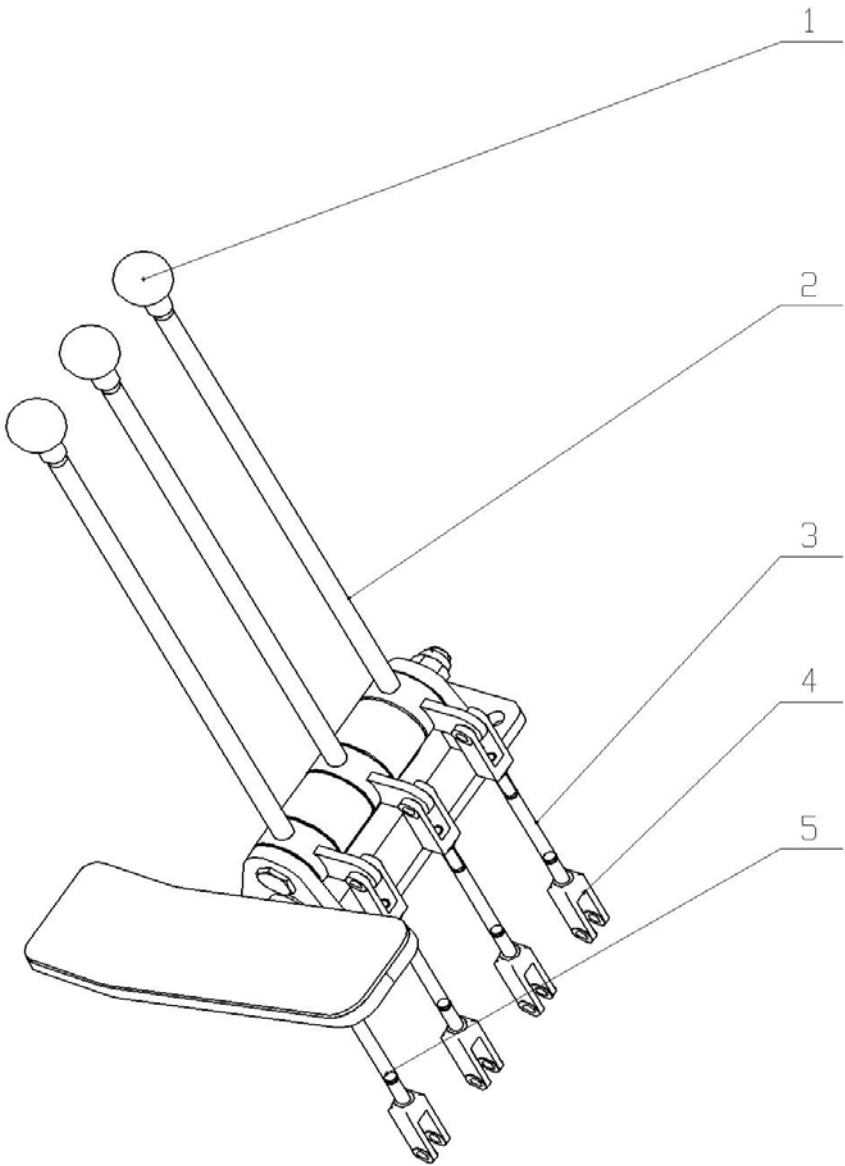


支腿夹紧操纵机构

STABILIZER &GRIPING OPERATION MECHANISM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W013300290	Handle Ball	手柄球	3	
2	NZ06014005000	Outrigger and clamping mechanism	支腿与夹紧机构	1	
3	Z130060110	Connecting rod	联接杆	3	
4	Z110060110	Connection Fork	联接叉	8	
5	Z061140110	Connecting rod	连接杆	1	


空调系统 AIR CONDITION SYSTEM

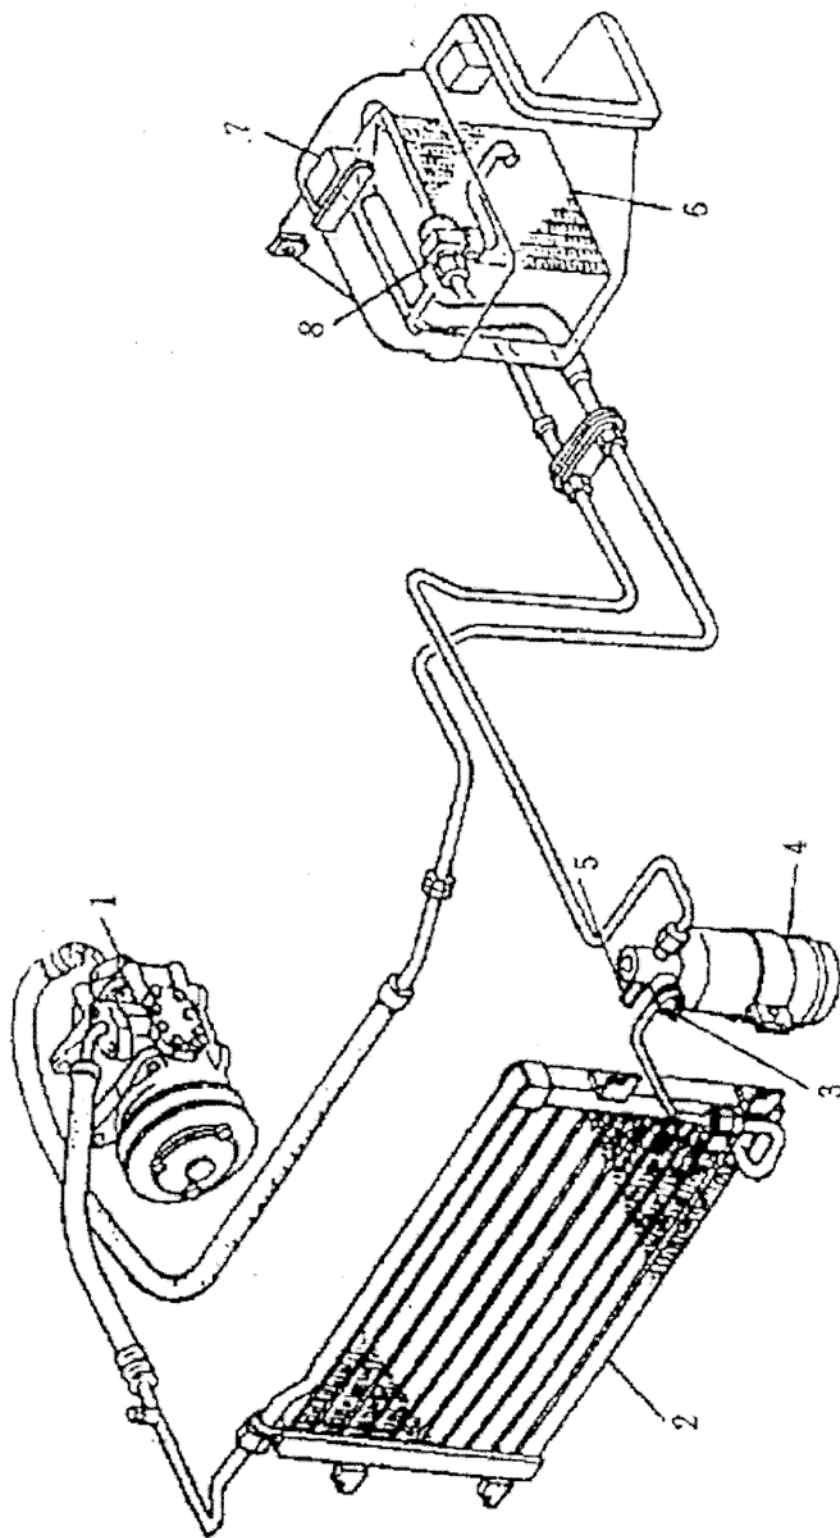

空调系统 AIR CONDITION SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1		Compressor	压缩机	1	
2		Condenser	冷凝器	1	
3		Low voltage switch	低压开关	1	
4		Storage tanks	储液罐	1	
5		High Pressure Valve	高压阀	1	
6		Evaporator	蒸发器	1	
7		Switch	开关	1	
8		Expansion valve	膨胀阀	1	


先导液压系统 PILOT HYDRAULIC SYSTEM

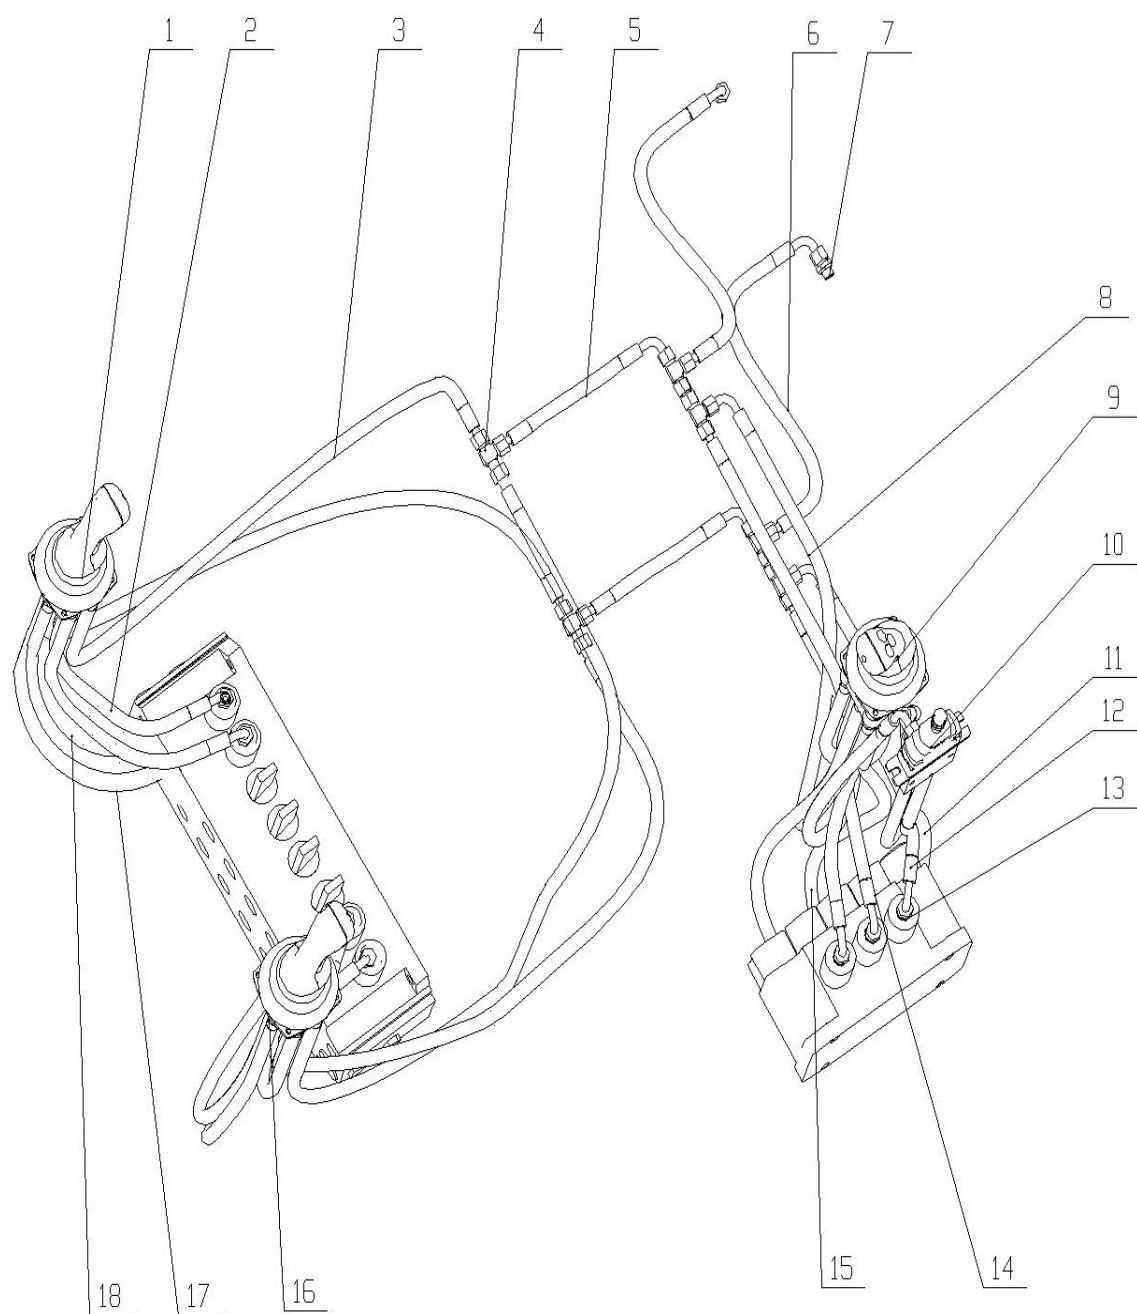

先导液压系 PILOT HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W073025020	Pilot valve	先导阀	2	
2	Z060250261	Pilot tubing	先导油管	2	
3	Z061250200	Pilot tubing	先导油管	4	
4	Z050251320	Three-way connector	三通接头	4	
5	Z060250320	Pilot tubing	先导油管	3	
6	Z061250011	Pilot tubing	先导油管	1	
7	Z150110150	Joint	接头	1	
8	Z060250510	Pilot tubing	先导油管	2	
9	W073025226	Load pilot valve	装载先导阀	1	
10	W076400020	Monolithic pilot valve	单片先导阀	1	
11	Z060250300	Pilot tubing	先导油管	1	
12	Z060250240	Pilot tubing	先导油管	2	
13	QLWZG074-001614	Joint	直通接头	14	
14	Z060250261	Pilot tubing	先导油管	1	
15	Z060250280	Pilot tubing	先导油管	2	
16	Z050251090	Joint	接头	20	
17	Z061250240	Pilot tubing	先导油管	2	
18	Z050251101	Pilot tubing	先导油管	4	

滑移液压系统
 SLIP HYDRULIC SYSTEM

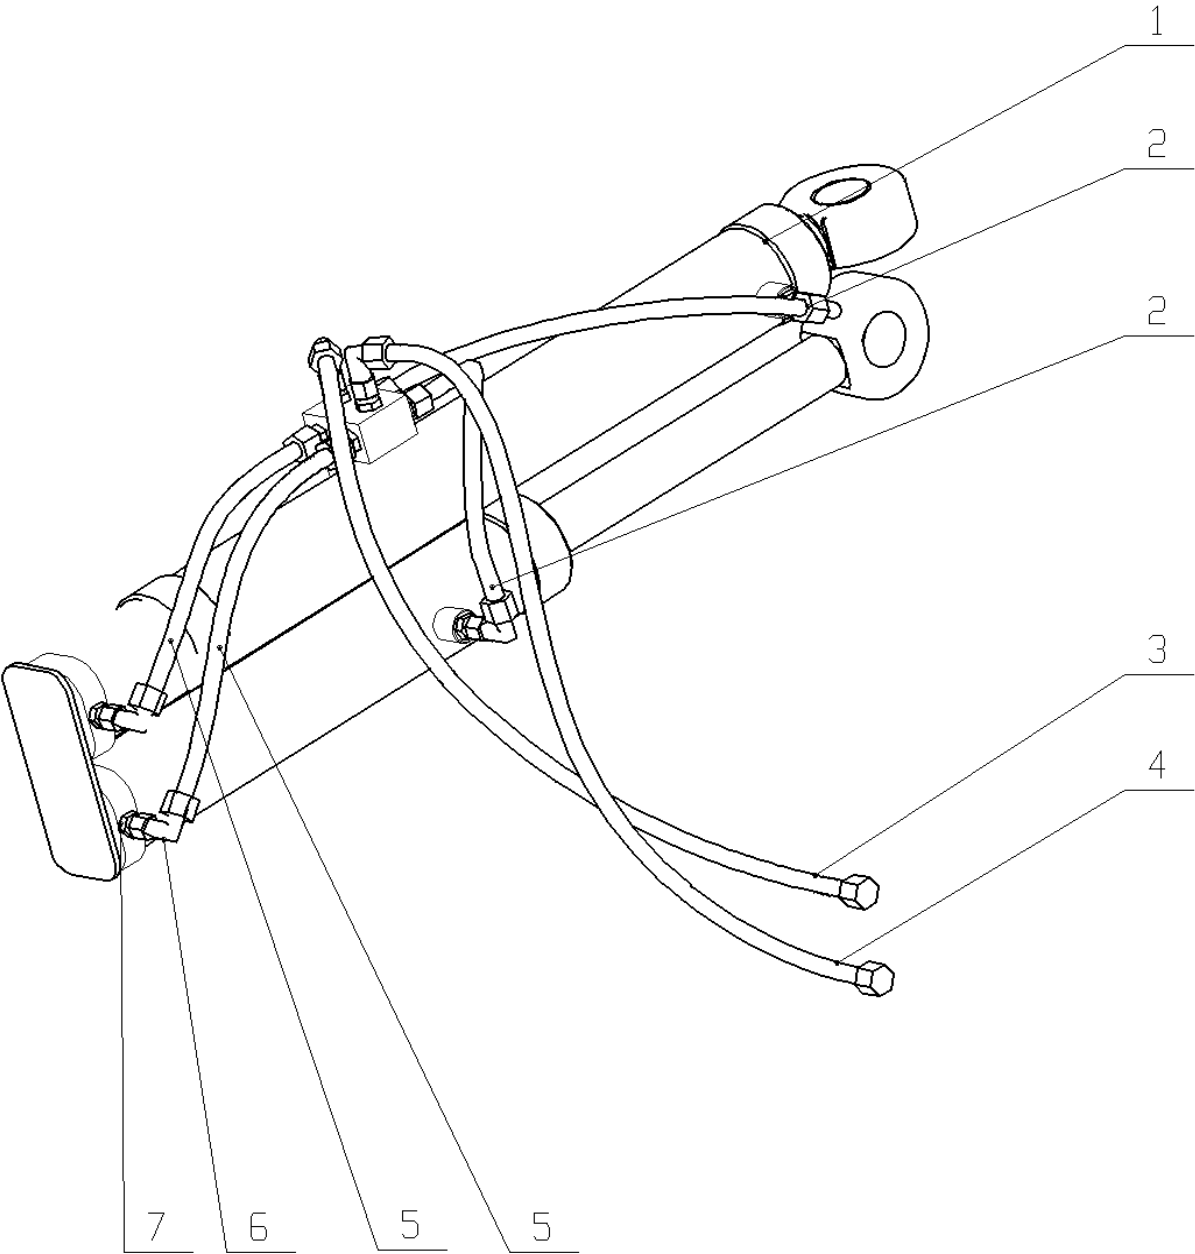

滑移液压系统
 SLIP HYDRULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W053025750	Sliding frame push-pull cylinder	滑架推拉缸	1	
2	Z064300035	Slip cylinder tubing 2	滑移缸油管 2	2	
3	Z0613820010	Slip cylinder inlet pipe 1	滑移缸进油管 1	1	
4	Z064300110	Slip cylinder inlet pipe 2	滑移缸进油管 2	1	
5	Z064240600	Hydraulic lock tubing	液压锁油管	2	
6	QLWZG078-001616	Right angle combination joint	直角组合接头	4	
7	W110003210	Joint	接头	10	